



Notes

- 6 The remote controller can be used to switch between 'high' and 'low'.
- 5 The air flow is factory-set to 'standard'. It is possible to switch between 'standard ESP' and 'high ESP' by remote controller setting.