


·BS· unit installation

Possible configurations

One ·BS· unit – one extraction fan

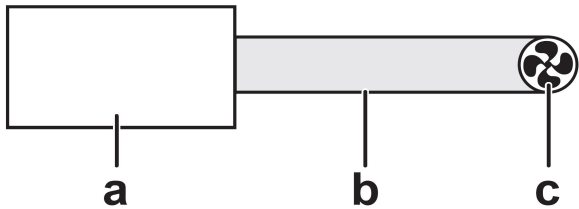


- a** BS unit
- b** Ductwork
- c** Extraction fan

Calculation method for selection of external fan


- Manual calculation: see ·BS· unit manual for details
- VRV Xpress: see <https://vrvxpress.daikin.eu/>

Multiple ·BS· units in parallel – one extraction fan

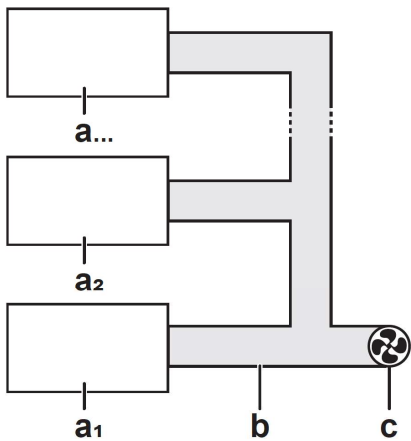

- a_#** BS unit #
- b** Ductwork
- c** Extraction fan

Multiple ·BS· units in series – one extraction fan

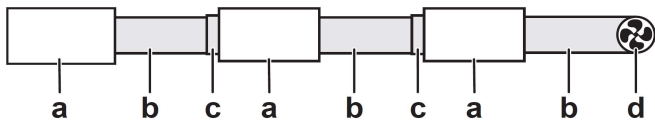

- a** BS unit
- b** Ductwork
- c** EKBSDCK
- d** Extraction fan

- VRV Xpress: see <https://vrvxpress.daikin.eu/>