

MINI VRV

Integrated heating capacity coefficient

The heating capacity tables do not take into account the capacity reduction in case of frost accumulation or defrost operation.

The capacity values that take these factors into account, or in other words, the integrated heating capacity values, can be calculated as follows:


Formula

- A = Integrated heating capacity
- B = Capacity characteristics value
- C = Integrated correction factor for frost accumulation (see table)

A = B * C

Inlet air temperature of heat exchanger

[°CDB/°CWB]	-7/-7.6	-5/-5.6	-3/-3.7	0/-0.7	3/2.2	5/4.1	7/6
RXYSQ4TMV1B							
RXYSQ5TMV1B							
RXYSQ6TMV1B							
RXYSQ4T7V1B							
RXYSQ5T7V1B							
RXYSQ6T7V1B							
RXYSQ4T7Y1B							
RXYSQ5T7Y1B							
RXYSQ6T7Y1B							
RXYSQ6T7Y1B9							
RXYSQ4T8VB							
RXYSQ5T8VB	0,88	0,86	0,80	0,75	0,76	0,82	1,00
RXYSQ6T8VB							
RXYSQ4T8YB							
RXYSQ5T8YB							
RXYSQ6T8YB							
RXYSQ6T8Y1B9							
RXYSQ4T8VB9							
RXYSQ5T8VB9							
RXYSQ6T8VB9							
RXYSQ4T8YB9							
RXYSQ5T8YB9							
RXYSQ6T8YB9							
RXYSQ8TMY1B	0,95	0,93	0,88	0,84	0,85	0,90	1,00
RXYSQ10TMY1B	0,95	0,93	0,87	0,79	0,80	0,88	1,00
RXYSQ6TMYFK	0,95	0,93	0,87	0,79	0,80	0,88	1,00
RXYSQ12TMY1B	0,95	0,92	0,87	0,75	0,76	0,85	1,00

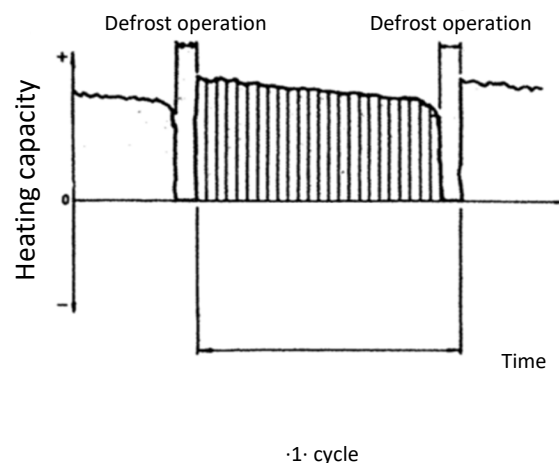

Notes

- (1) The figure shows the integrated heating capacity for a single cycle (from one defrost operation to the next).
- (2) When there is an accumulation of snow against the outdoor unit heat exchanger, there will always be a temporary reduction in capacity depending on the outdoor temperature (°C DB), relative humidity (RH) and the amount of frosting which occurs.