


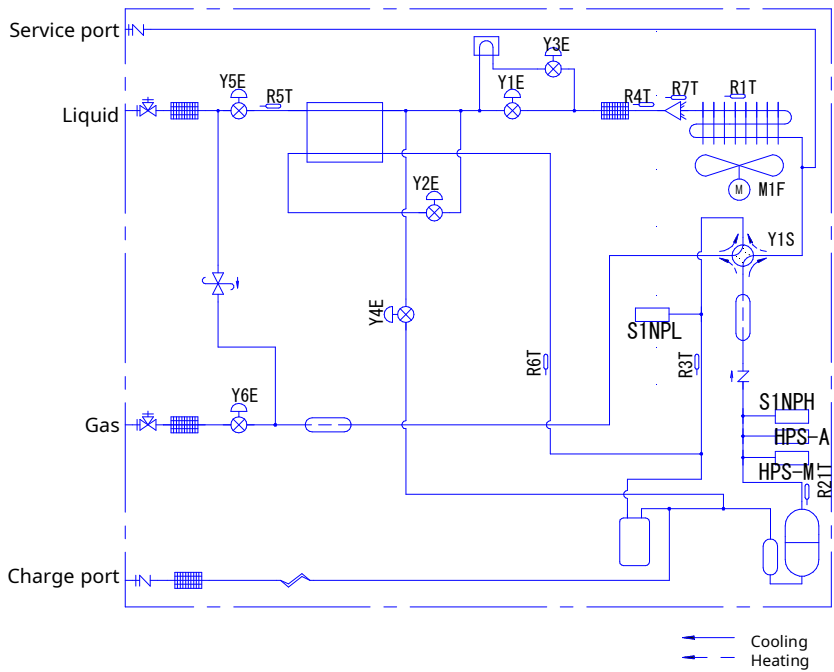




 
 















**RXYS-AV1**  
**RXYS-AY1**



-  Electronic expansion valve
-  Charge port / Service port
-  Stop valve
-  Filter
-  Check valve
-  Pressure relief valve
-  Heat sink (PCB)
-  HPS-A High pressure switch Automatic reset
-  HPS-M High pressure switch Manual reset
-  S1NPH High pressure sensor
-  S1NPL Low pressure sensor
-  Double tube heat exchanger
-  Distributor
-  Propeller fan
-  Heat exchanger
-  Accumulator
-  Compressor
-  Compressor Accumulator
-  Thermistor
-  Capillary tube
-  Muffler
-  4-way valve

— Cooling  
 - - Heating