

## Heat pump      VRV4

### Multi-unit standard combinations table

		BHP	10HP	12HP	14HP	16HP	18HP	20HP
Heat pump	RXYQ8* / RYYQ8* / RXYQ8*	1						
	RXYQ10* / RYYQ10* / RXYQ10*		1					
	RXYQ12* / RYYQ12* / RXYQ12*			1				
	RXYQ14* / RYYQ14* / RXYQ14*				1			
	RXYQ16* / RYYQ16* / RXYQ16*					1		
	RXYQ18* / RYYQ18* / RXYQ18*						1	
	RXYQ20* / RYYQ20* / RXYQ20*							1
Multi-combination with 2 outdoor units	RXYQ22* / RYYQ22* / RXYQ22*		1	1				
	RXYQ24* / RYYQ24* / RXYQ24*	1				1		
	RXYQ26* / RYYQ26* / RXYQ26*			1	1			
	RXYQ28* / RYYQ28* / RXYQ28*			1		1		
	RXYQ30* / RYYQ30* / RXYQ30*			1			1	
	RXYQ32* / RYYQ32* / RXYQ32*					2		
	RXYQ34* / RYYQ34* / RXYQ34*					1	1	
	RXYQ36* / RYYQ36* / RXYQ36*					1		1
Multi-combination with 3 outdoor units	RXYQ38* / RYYQ38* / RXYQ38*	1	1					1
	RXYQ40* / RYYQ40* / RXYQ40*		1	1			1	
	RXYQ42* / RYYQ42* / RXYQ42*		1			2		
	RXYQ44* / RYYQ44*			1		2		
	RXYQ46* / RYYQ46*				1	2		
	RXYQ48* / RYYQ48*					3		
	RXYQ50* / RYYQ50*					2	1	
	RXYQ52* / RYYQ52*					1	2	
RXYQ54* / RYYQ54*						3		

**Remark**

RXYQ8~20 = Single continuous heating

RXYQ22~54 Multi continuous heating

RXYQ8~20 = Single non-continuous heating

RXYQ22~54 Multi non-continuous heating

RXYQ8~20 Single non-continuous heating replacement (VRV4-Q)

RXYQ22~54 Multi non-continuous heating replacement (VRV4-Q)

- For single unit installation      RYYQ\* units (continuous heating) and RXYQ\* units (non-continuous heating)
- "Non-continuous heating" multi-outdoor-unit combinations consist of RXYQ8~20 units (e.g. RXYQ36\*=RXYQ16\*+RXYQ20\*).
- "Continuous heating" multi-outdoor-unit combinations consist of RYMQ8~20 units (e.g. RYYQ36\*=RYMQ16\*+RYMQ20\*).  
→ RYMQ\* units can only be used in multi-outdoor-unit combinations and cannot be used as standalone units.

4) RXYQ8~20\* units cannot be used in multi-outdoor-unit combinations.

5) RYYQ8~20 "Continuous heating" multi-outdoor-unit combinations cannot contain RXYQ\* units.

6) RXYQ8~20 "Non-continuous heating" multi-outdoor-unit combinations cannot contain RYMQ\* units.

7) Multi "non-continuous heating" replacement models only consist of RXYQ8-20 modules (e.g. RXYQ36\*=RXYQ16\*+RXYQ20\*).

8) Replacement units cannot be combined with other units.

9) T-series outdoor units and U-series outdoor units cannot share the same refrigerant circuit. When combining these units, make sure they are part of separate refrigerant circuits.