


·SV· unit installation

External fan needs to be selected in order to meet these requirements. The available calculation method depends on the configuration.

Possible configurations

Calculation method for selection of external fan


One ·SV· unit – one extraction fan

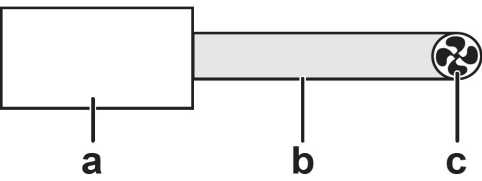

- a** SV unit
- b** Ductwork
- c** Extraction fan

- Manual calculation: see ·SV· unit manual for details
- VRV Xpress: see <https://vrvxpress.daikin.eu/>


Multiple ·SV· units in parallel – one extraction fan

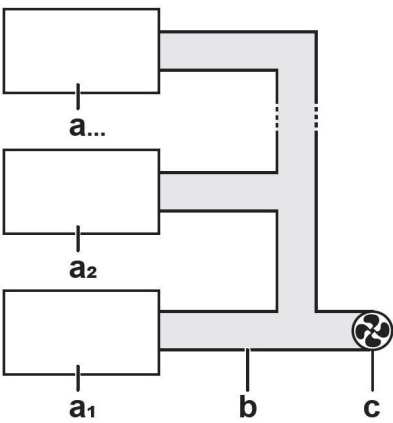

- a<sub>#</sub>** SV unit #
- b** Ductwork
- c** Extraction fan

- VRV Xpress: see <https://vrvxpress.daikin.eu/>

Multiple ·SV· units in series – one extraction fan

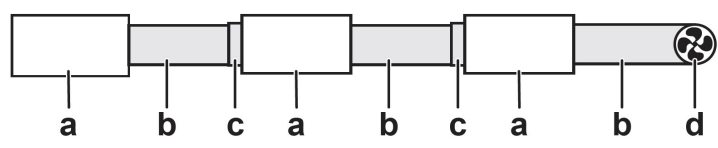

- a** SV unit
- b** Ductwork
- c** EKBSDCK
- d** Extraction fan

- VRV Xpress: see <https://vrvxpress.daikin.eu/>