


Indoor unit installation

Table -2-

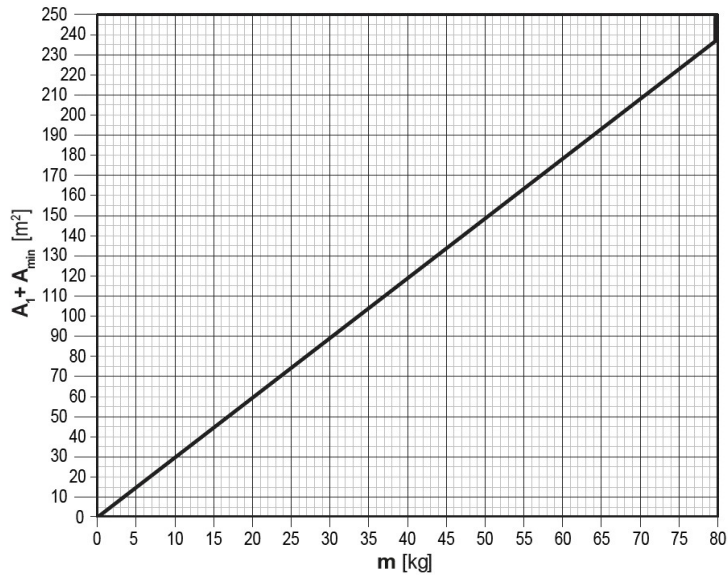

A <sub>i</sub> + A <sub>o</sub> min [m²]	m [kg]
0	0
10	3.3
20	6.7
30	10.1
40	13.5
50	16.8
60	20.2
70	23.6
80	27.0
90	30.3
100	33.7
110	37.1
120	40.5
130	43.9
140	47.2
150	50.6
160	54.0
170	57.4
180	60.7
190	64.1
200	67.5
210	70.9
220	74.2
230	77.6
236	79.6
237	79.8
240	79.8
250	79.8

Step -3:  
The total amount of refrigerant in the system shall be less than or equal to the maximum allowed total refrigerant amount.

If NOT, natural ventilation safety measure is not allowed.

Step -4:  
The partition between two rooms on the same floor MUST meet one of the two requirements for natural ventilation.

For details, see the manual of the -outdoor- unit.

Shut-off valves

-SV- unit which has shut-off valves needs to be installed to reduce the amount of refrigerant leakage in to the room where the indoor unit is installed.

When the R32 sensor in the indoor unit detects a refrigerant leak, the corresponding shut-off valves in the -SV- unit close.  
Follow the flowchart. Details are described in the manual of the outdoor unit.