
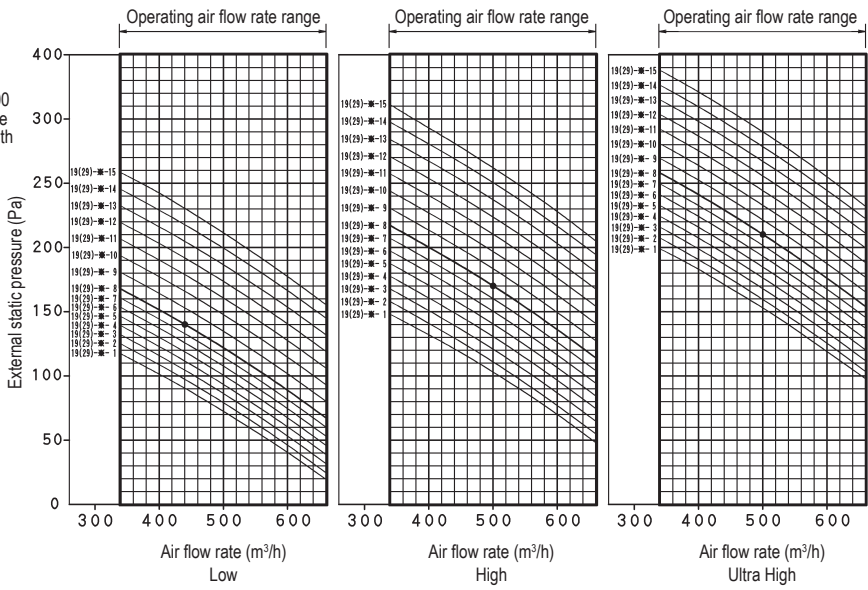


VKM50GB

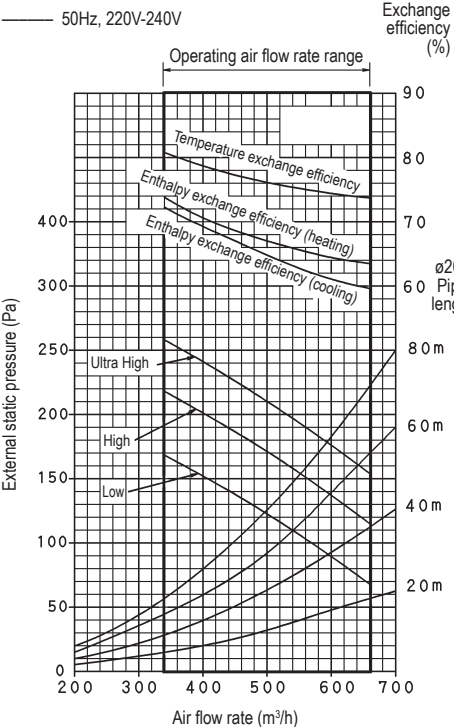

[Reading of Performance Characteristics]

- 1) For example: 19(29)-✱-07
Mode no. : 19(29)
First code: ✱ (Supply 「 2 」 Exhaust 「 3 」)
Second code no. : 07
- 2) Rated point: ●
- 3) The characteristic of each tap becomes a setup of the characteristic of the same code number.