

Inverter outdoor unit for AHU option kit and air curtains

Integrated heating capacity coefficient

The heating capacity tables do not take into account the capacity reduction in case of frost accumulation or defrost operation.

The capacity values that take these factors into account, or in other words, the integrated heating capacity values, can be calculated as follows:

Formula

A : Integrated heating capacity


B : Capacity characteristics value

C : Integrated correction factor for frost accumulation (see table)

$$A = B * C$$

Inlet air temperature of heat exchanger

["C DB] / ["C WB]	-7/-7.6	-5/-5.6	-3/-3.7	0/-0.7	3/2.2	5/4.1	7/6
ERA100A7V1B / ERA100A7V1B9							
ERA125A7V1B / ERA125A7V1B9							
ERA140A7V1B / ERA140A7V1B9							
ERA100A7Y1B / ERA100A7Y1B9	0,79	0,74	0,73	0,72	0,73	0,74	1,00
ERA125A7Y1B / ERA125A7Y1B9							
ERA140A7Y1B / ERA140A7Y1B9							

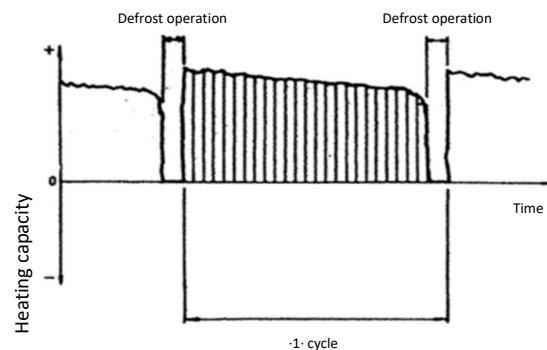

Notes

1. The figure shows the integrated heating capacity for a single cycle (from one defrost operation to the next).
2. When there is an accumulation of snow against the outdoor unit heat exchanger, there will always be a temporary reduction in capacity depending on the outdoor temperature (°C DB), relative humidity (RH) and the amount of frosting which occurs.