

Installer and user reference guide

VRV IV-S system air conditioner

 


Table of contents

1	Gen	eral safe	ety precautions	6
	1.1		e documentation	
		111	Meaning of warnings and symbols	
	1.2	For the us	ser	
	1.3		staller	
		1.3.1	General	
		1.3.2	Installation site	
		1.3.3	Refrigerant — in case of R410A or R32	
		1.3.4	Brine	
		1.3.5	Water	12
		1.3.6	Electrical	12
				4-
2			ocumentation	15
	2.1	About thi	s document	15
Fo	r the	installe	r	16
3	۸ho	ut the b	OV.	17
3				
	3.1		unit	
		3.1.1	To unpack the outdoor unit	
		3.1.2	To handle the outdoor unit	
		3.1.3	To remove the accessories from the outdoor unit	18
4	Abo	ut the u	nits and options	19
	4.1	Identifica	tion	19
		4.1.1	Identification label: Outdoor unit	19
	4.2	About the	e outdoor unit	19
	4.3	System la	yout	20
	4.4	Combinin	g units and options	20
		4.4.1	About combining units and options	20
		4.4.2	Possible combinations of indoor units	21
		4.4.3	Possible options for the outdoor unit	21
5	Droi	paration		23
•	5.1		the installation site	_
	3.1	5.1.1	Installation site requirements of the outdoor unit	
		5.1.2	Additional installation site requirements of the outdoor unit in cold climates	
		5.1.3	Securing safety against refrigerant leaks	
	5.2		refrigerant piping.	
	3.2	5.2.1	Refrigerant piping requirements	
		5.2.2	Refrigerant piping material	
		5.2.3	To select the piping size	
		5.2.4	To select refrigerant branch kits	31
		5.2.5	Refrigerant piping length and height difference	
	5.3		selectrical wiring	
	•	5.3.1	About electrical compliance	
		5.3.2	Safety device requirements	
_				
6		allation		36
	6.1		: Installation	
	6.2		the units	
		6.2.1	About opening the units	
		6.2.2	To open the outdoor unit	
	6.3		the outdoor unit	
		6.3.1	About mounting the outdoor unit	
		6.3.2	Precautions when mounting the outdoor unit	
		6.3.3	To provide the installation structure	
		6.3.4	To install the outdoor unit	
		6.3.5	To provide drainage	
	C 4	6.3.6	To prevent the outdoor unit from falling over	
	6.4		ng the refrigerant piping	
		6.4.1	About connecting the refrigerant piping	
		6.4.2	Precautions when connecting the refrigerant piping	
		6.4.3 6.4.4	Guidelines when connecting the refrigerant piping	



		6.4.5	To flare the pipe end	4
		6.4.6	To braze the pipe end	
		6.4.7	Using the stop valve and service port	
		6.4.8	To connect the refrigerant piping to the outdoor unit	
		6.4.9	To connect the refrigerant branching kit	
	6.5	Checking	the refrigerant piping	4
		6.5.1	About checking the refrigerant piping	4
		6.5.2	Checking refrigerant piping: General guidelines	4
		6.5.3	Checking refrigerant piping: Setup	4
		6.5.4	To perform a leak test	50
		6.5.5	To perform vacuum drying	50
		6.5.6	To insulate the refrigerant piping	5
	6.6	Charging	refrigerant	5
		6.6.1	About charging refrigerant	5
		6.6.2	Precautions when charging refrigerant	5
		6.6.3	To determine the additional refrigerant amount	5
		6.6.4	To charge refrigerant	
		6.6.5	Error codes when charging refrigerant	
		6.6.6	To fix the fluorinated greenhouse gases label	
	6.7		ng the electrical wiring	
		6.7.1	About connecting the electrical wiring	
	6.0	6.7.2	To connect the electrical wiring to the outdoor unit	
	6.8	•	the outdoor unit installation	
		6.8.1	To finish the interconnection wiring	
		6.8.2	To close the outdoor unit	6
7	Conf	iguratio	on	66
	7.1		eld settings	6
		7.1.1	About making field settings	6
		7.1.2	To access the field setting components	6
		7.1.3	Field setting components	6
		7.1.4	To access mode 1 or 2	6
		7.1.5	To use mode 1	6
		7.1.6	To use mode 2	6
		7.1.7	Mode 1 (and default situation): Monitoring settings	7
		7.1.8	Mode 2: field settings	7
		7.1.9	To connect the PC configurator to the outdoor unit	7.
	7.2	Energy sa	ving and optimum operation	7.
		7.2.1	Available main operation methods	
		7.2.2	Available comfort settings	
		7.2.3	Example: Automatic mode during cooling	
		7.2.4	Example: Automatic mode during heating	7
8	Com	mission	ning	81
	8.1		: Commissioning	8:
	8.2		ons when commissioning	8:
	8.3		before commissioning	8:
	8.4		during commissioning	8:
		8.4.1	About the system test run	8:
		8.4.2	To perform a test run (7-LEDs display)	8
		8.4.3	Correcting after abnormal completion of the test run	84
9	напо	a-over t	to the user	86
10	Mair	ntenand	e and service	87
	10.1	Maintena	ance safety precautions	8
		10.1.1	To prevent electrical hazards	8
	10.2	Checklist	for yearly maintenance of the outdoor unit	8
	10.3		rvice mode operation	8
		10.3.1	To use vacuum mode	8
		10.3.2	To recover refrigerant	8
	_			
11	Trou	blesho	_	90
	11.1		: Troubleshooting	90
	11.2		ons when troubleshooting	90
	11.3		roblems based on error codes	
		11.3.1	Error codes: Overview	9:
12	Disp	osal		93
	_			_
13	Tech	nical da	ata	94



	13.1		race: Outdoor unit	
	13.2		gram: Outdoor unit	
	13.3	Wiring dia	gram: Outdoor unit	98
Foi	r the	user		101
1.4	۸hoı	ıt the c	urtom	102
14		it the sy		102
	14.1	System la	yout	103
15	User	interfa	ce	104
	_			
16	Opei	ation		105
	16.1	Before op	eration	105
	16.2		range	
	16.3	Operating	the system	106
		16.3.1	About operating the system	106
		16.3.2	About cooling, heating, fan only, and automatic operation	106
		16.3.3	About the heating operation	107
		16.3.4	To operate the system	
	16.4	Using the	dry program	108
		16.4.1	About the dry program	
		16.4.2	To use the dry program	108
	16.5	Adjusting	the air flow direction	108
		16.5.1	About the air flow flap	
	16.6	Setting th	e master user interface	109
		16.6.1	About setting the master user interface	
		16.6.2	To designate the master user interface (VRV DX)	110
		16.6.3	To designate the master user interface (RA DX)	110
		16.6.4	About control systems	110
17	Ener	av savir	ng and optimum operation	111
1,				
	17.1		main operation methods	
	17.2	Available	comfort settings	112
18	Mair	itenanc	e and service	113
	18.1	Maintena	nce after a long stop period	114
	18.2		nce before a long stop period	
	18.3		refrigerant	
	18.4		s service and warranty	
		18.4.1	Warranty period	
		18.4.2	Recommended maintenance and inspection	
		18.4.3	Recommended maintenance and inspection cycles	115
		18.4.4	Shortened maintenance and replacement cycles	116
	_			
19	Trou	bleshoo	oting	118
	19.1		es: Overview	
	19.2		s that are NOT system malfunctions	
		19.2.1	Symptom: The system does not operate	
		19.2.2	Symptom: Fan operation is possible, but cooling and heating do not work	
		19.2.3	Symptom: The fan speed does not correspond to the setting	
		19.2.4	Symptom: The fan direction does not correspond to the setting	
		19.2.5	Symptom: White mist comes out of a unit (Indoor unit)	
		19.2.6	Symptom: White mist comes out of a unit (Indoor unit, outdoor unit)	
		19.2.7	Symptom: The user interface reads "U4" or "U5" and stops, but then restarts after a few minutes	
		19.2.8	Symptom: Noise of air conditioners (Indoor unit)	
		19.2.9	Symptom: Noise of air conditioners (Indoor unit, outdoor unit)	123
			Symptom: Noise of air conditioners (Outdoor unit)	
			Symptom: Dust comes out of the unit	
			Symptom: The units can give off odours	
			Symptom: The outdoor unit fan does not spin	
			Symptom: The display shows "88"	
			Symptom: The compressor in the outdoor unit does not stop after a short heating operation	
			Symptom: The inside of an outdoor unit is warm even when the unit has stopped	
		19.2.17	Symptom: Hot air can be felt when the indoor unit is stopped	124
20	Relo	cation		125
21	Disp	osal		126
22	Tech	nical da	ıta	127
	22.1		n requirements	
		FEO DESIR		12/



23 Glossary 128



1 General safety precautions

1.1 About the documentation

- The original instructions are written in English. All other languages are translations of the original instructions.
- The precautions described in this document cover very important topics, follow them carefully.
- The installation of the system, and all activities described in the installation manual and in the installer reference guide MUST be performed by an authorised

1.1.1 Meaning of warnings and symbols



DANGER

Indicates a situation that results in death or serious injury.



DANGER: RISK OF ELECTROCUTION

Indicates a situation that could result in electrocution.



DANGER: RISK OF BURNING/SCALDING

Indicates a situation that could result in burning/scalding because of extreme hot or cold temperatures.



DANGER: RISK OF EXPLOSION

Indicates a situation that could result in explosion.



WARNING

Indicates a situation that could result in death or serious injury.



WARNING: FLAMMABLE MATERIAL



CAUTION

Indicates a situation that could result in minor or moderate injury.



NOTICE

Indicates a situation that could result in equipment or property damage.



INFORMATION

Indicates useful tips or additional information.

Symbols used on the unit:



Symbol	Explanation
i	Before installation, read the installation and operation manual, and the wiring instruction sheet.
	Before performing maintenance and service tasks, read the service manual.
	For more information, see the installer and user reference guide.
	The unit contains rotating parts. Be careful when servicing or inspecting the unit.

Symbols used in the documentation:

Symbol	Explanation
	Indicates a figure title or a reference to it.
	Example: "▲ 1–3 Figure title" means "Figure 3 in chapter 1".
III	Indicates a table title or a reference to it.
	Example: "≡ 1–3 Table title" means "Table 3 in chapter 1".

1.2 For the user



WARNING

If you are NOT sure how to operate the unit, contact your installer.



WARNING

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children SHALL NOT play with the appliance.

Cleaning and user maintenance SHALL NOT be made by children without supervision.



WARNING

To prevent electrical shocks or fire:

- Do NOT rinse the unit.
- Do NOT operate the unit with wet hands.
- Do NOT place any objects containing water on the unit.





CAUTION

- Do NOT place any objects or equipment on top of the
- Do NOT sit, climb or stand on the unit.
- Units are marked with the following symbol:



This means that electrical and electronic products may NOT be mixed with unsorted household waste. Do NOT try to dismantle the system yourself: dismantling the system, treatment of the refrigerant, of oil and of other parts MUST be done by an authorised installer and MUST comply with applicable legislation.

Units MUST be treated at a specialised treatment facility for reuse, recycling and recovery. By ensuring this product is disposed of correctly, you will help to prevent potential negative consequences for the environment and human health. For more information, contact your installer or local authority.

Batteries are marked with the following symbol:



This means that the batteries may NOT be mixed with unsorted household waste. If a chemical symbol is printed beneath the symbol, this chemical symbol means that the battery contains a heavy metal above a certain concentration.

Possible chemical symbols are: Pb: lead (>0.004%).

Waste batteries MUST be treated at a specialised treatment facility for reuse. By ensuring waste batteries are disposed of correctly, you will help to prevent potential negative consequences for the environment and human health.

1.3 For the installer

1.3.1 General

If you are NOT sure how to install or operate the unit, contact your dealer.



DANGER: RISK OF BURNING/SCALDING

- Do NOT touch the refrigerant piping, water piping or internal parts during and immediately after operation. It could be too hot or too cold. Give it time to return to normal temperature. If you MUST touch it, wear protective gloves.
- Do NOT touch any accidental leaking refrigerant.



WARNING

Improper installation or attachment of equipment or accessories could result in electrical shock, short-circuit, leaks, fire or other damage to the equipment. ONLY use accessories, optional equipment and spare parts made or approved by Daikin unless otherwise specified.





WARNING

Make sure installation, testing and applied materials comply with applicable legislation (on top of the instructions described in the Daikin documentation).



WARNING

Tear apart and throw away plastic packaging bags so that nobody, especially children, can play with them. **Possible consequence:** suffocation.



WARNING

Provide adequate measures to prevent that the unit can be used as a shelter by small animals. Small animals that make contact with electrical parts can cause malfunctions, smoke or fire.



CAUTION

Wear adequate personal protective equipment (protective gloves, safety glasses,...) when installing, maintaining or servicing the system.



CAUTION

Do NOT touch the air inlet or aluminium fins of the unit.



CAUTION

- Do NOT place any objects or equipment on top of the unit.
- Do NOT sit, climb or stand on the unit.



NOTICE

Works executed on the outdoor unit are best done under dry weather conditions to avoid water ingress.

In accordance with the applicable legislation, it might be necessary to provide a logbook with the product containing at least: information on maintenance, repair work, results of tests, stand-by periods,...

Also, at least, following information MUST be provided at an accessible place at the product:

- Instructions for shutting down the system in case of an emergency
- Name and address of fire department, police and hospital
- Name, address and day and night telephone numbers for obtaining service In Europe, EN378 provides the necessary guidance for this logbook.

1.3.2 Installation site

- Provide sufficient space around the unit for servicing and air circulation.
- Make sure the installation site withstands the weight and vibration of the unit.
- Make sure the area is well ventilated. Do NOT block any ventilation openings.
- Make sure the unit is level.

Do NOT install the unit in the following places:

In potentially explosive atmospheres.



- In places where there is a risk of fire due to the leakage of flammable gases (example: thinner or gasoline), carbon fibre, ignitable dust.
- In places where corrosive gas (example: sulphurous acid gas) is produced. Corrosion of copper pipes or soldered parts may cause the refrigerant to leak.

1.3.3 Refrigerant — in case of R410A or R32

If applicable. See the installation manual or installer reference guide of your application for more information.



DANGER: RISK OF EXPLOSION

Pump down – Refrigerant leakage. If you want to pump down the system, and there is a leak in the refrigerant circuit:

- Do NOT use the unit's automatic pump down function, with which you can collect all refrigerant from the system into the outdoor unit. Possible consequence: Selfcombustion and explosion of the compressor because of air going into the operating compressor.
- Use a separate recovery system so that the unit's compressor does NOT have to operate.



WARNING

During tests, NEVER pressurise the product with a pressure higher than the maximum allowable pressure (as indicated on the nameplate of the unit).



WARNING

Take sufficient precautions in case of refrigerant leakage. If refrigerant gas leaks, ventilate the area immediately. Possible risks:

- Excessive refrigerant concentrations in a closed room can lead to oxygen deficiency.
- Toxic gas might be produced if refrigerant gas comes into contact with fire.



WARNING

ALWAYS recover the refrigerant. Do NOT release them directly into the environment. Use a vacuum pump to evacuate the installation.



WARNING

Make sure there is no oxygen in the system. Refrigerant may ONLY be charged after performing the leak test and the vacuum drying.

Possible consequence: Self-combustion and explosion of the compressor because of oxygen going into the operating compressor.



NOTICE

- To avoid compressor breakdown, do NOT charge more than the specified amount of refrigerant.
- When the refrigerant system is to be opened, refrigerant MUST be treated according to the applicable legislation.





NOTICE

Make sure the field piping and connections are NOT subjected to stress.



NOTICE

After all the piping has been connected, make sure there is no gas leak. Use nitrogen to perform a gas leak detection.

- In case recharge is required, see the nameplate or the refrigerant charge label of the unit. It states the type of refrigerant and necessary amount.
- Whether the unit is factory charged with refrigerant or non-charged, in both cases you might need to charge additional refrigerant, depending on the pipe sizes and pipe lengths of the system.
- ONLY use tools exclusively for the refrigerant type used in the system, this to ensure pressure resistance and prevent foreign materials from entering into the system.
- Charge the liquid refrigerant as follows:

If	Then
A siphon tube is present	Charge with the cylinder upright.
(i.e., the cylinder is marked with "Liquid filling siphon attached")	
A siphon tube is NOT present	Charge with the cylinder upside down.

- Open refrigerant cylinders slowly.
- Charge the refrigerant in liquid form. Adding it in gas form may prevent normal operation.



CAUTION

When the refrigerant charging procedure is done or when pausing, close the valve of the refrigerant tank immediately. If the valve is NOT closed immediately, remaining pressure might charge additional refrigerant. **Possible consequence:** Incorrect refrigerant amount.

1.3.4 Brine

If applicable. See the installation manual or installer reference guide of your application for more information.



WARNING

The selection of the brine MUST be in accordance with the applicable legislation.



WARNING

Take sufficient precautions in case of brine leakage. If brine leaks, ventilate the area immediately and contact your local dealer.





WARNING

The ambient temperature inside the unit can get much higher than that of the room, e.g. 70°C. In case of a brine leak, hot parts inside the unit can create a hazardous situation.



WARNING

The use and installation of the application MUST comply with the safety and environmental precautions specified in the applicable legislation.

1.3.5 Water

If applicable. See the installation manual or installer reference guide of your application for more information.



NOTICE

Make sure water quality complies with EU directive 2020/2184.

1.3.6 Electrical



DANGER: RISK OF ELECTROCUTION

- Turn OFF all power supply before removing the switch box cover, connecting electrical wiring or touching electrical parts.
- Disconnect the power supply for more than 10 minutes, and measure the voltage at the terminals of main circuit capacitors or electrical components before servicing. The voltage MUST be less than 50 V DC before you can touch electrical components. For the location of the terminals, see the wiring diagram.
- Do NOT touch electrical components with wet hands.
- Do NOT leave the unit unattended when the service cover is removed.



WARNING

If NOT factory installed, a main switch or other means for disconnection, having a contact separation in all poles providing full disconnection under overvoltage category III condition, MUST be installed in the fixed wiring.





WARNING

- ONLY use copper wires.
- Make sure the field wiring complies with the national wiring regulations.
- All field wiring MUST be performed in accordance with the wiring diagram supplied with the product.
- NEVER squeeze bundled cables and make sure they do NOT come in contact with the piping and sharp edges. Make sure no external pressure is applied to the terminal connections.
- Make sure to install earth wiring. Do NOT earth the unit to a utility pipe, surge absorber, or telephone earth. Incomplete earth may cause electrical shock.
- Make sure to use a dedicated power circuit. NEVER use a power supply shared by another appliance.
- Make sure to install the required fuses or circuit breakers.
- Make sure to install an earth leakage protector. Failure to do so may cause electrical shock or fire.
- When installing the earth leakage protector, make sure it is compatible with the inverter (resistant to high frequency electric noise) to avoid unnecessary opening of the earth leakage protector.



WARNING

- After finishing the electrical work, confirm that each electrical component and terminal inside the switch box is connected securely.
- Make sure all covers are closed before starting up the unit.



CAUTION

- When connecting the power supply: connect the earth cable first, before making the current-carrying connections.
- When disconnecting the power supply: disconnect the current-carrying cables first, before separating the earth connection.
- The length of the conductors between the power supply stress relief and the terminal block itself MUST be as such that the current-carrying wires are tautened before the earth wire is in case the power supply is pulled loose from the stress relief.



NOTICE

Precautions when laying power wiring:









- Do NOT connect wiring of different thicknesses to the power terminal block (slack in the power wiring may cause abnormal heat).
- When connecting wiring which is the same thickness, do as shown in the figure above.
- For wiring, use the designated power wire and connect firmly, then secure to prevent outside pressure being exerted on the terminal board.
- Use an appropriate screwdriver for tightening the terminal screws. A screwdriver with a small head will damage the head and make proper tightening impossible.
- Over-tightening the terminal screws may break them.



Install power cables at least 1 meter away from televisions or radios to prevent interference. Depending on the radio waves, a distance of 1 meter may NOT be sufficient.



NOTICE

ONLY applicable if the power supply is three-phase, and the compressor has an ON/ OFF starting method.

If there exists the possibility of reversed phase after a momentary black out and the power goes ON and OFF while the product is operating, attach a reversed phase protection circuit locally. Running the product in reversed phase can break the compressor and other parts.



2 About the documentation

2.1 About this document

Target audience

Authorised installers + end users



INFORMATION

This appliance is intended to be used by expert or trained users in shops, in light industry and on farms, or for commercial use by lay persons.

Documentation set

This document is part of a documentation set. The complete set consists of:

- General safety precautions:
 - Safety instructions that you must read before installing
 - Format: paper (in the box of the outdoor unit)
- Outdoor unit installation and operation manual:
 - Installation and operation instructions
 - Format: paper (in the box of the outdoor unit)
- Installer and user reference guide:
 - Preparation of the installation, reference data,...
 - Detailed step-by-step instructions and background information for basic and advanced usage
 - Format: Digital files on https://www.daikin.eu. Use the search function Q to find your model.

The latest revision of the supplied documentation is published on the regional Daikin website and is available via your dealer.

The original instructions are written in English. All other languages are translations of the original instructions.

Technical engineering data

- A subset of the latest technical data is available on the regional Daikin website (publicly accessible).
- The **full set** of the latest technical data is available on the Daikin Business Portal (authentication required).



For the installer






3 About the box

Keep the following in mind:

- At delivery, the unit MUST be checked for damage and completeness. Any damage or missing parts MUST be reported immediately to the claims agent of the carrier.
- Bring the packed unit as close as possible to its final installation position to prevent damage during transport.
- Prepare in advance the path along which you want to bring the unit to its final installation position.
- When handling the unit, take into account the following:
 - Fragile, handle the unit with care.
 - Keep the unit upright in order to avoid compressor damage.

3.1 Outdoor unit

3.1.1 To unpack the outdoor unit

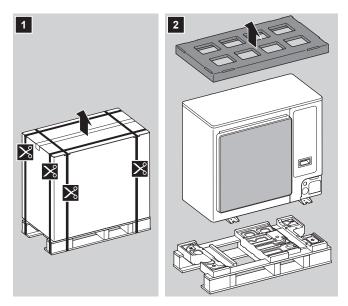


3.1.2 To handle the outdoor unit



CAUTION

To avoid injury, do NOT touch the air inlet or aluminium fins of the unit.

Forklift. As long as the unit remains on its pallet, you can also use a forklift.

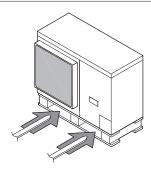


Carry the unit slowly as shown:



3.1.3 To remove the accessories from the outdoor unit

- 1 Remove the service cover. See "6.2.2 To open the outdoor unit" [▶ 37].
- Remove the accessories.

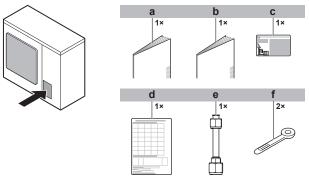

- General safety precautions
- **b** Outdoor unit installation and operation manual
- c Fluorinated greenhouse gases label
- **d** Installation information sticker
- Gas piping accessory (only for RXYSCQ6)
- Cable tie



4 About the units and options

In this chapter

4.1	Identification		19
	4.1.1	Identification label: Outdoor unit	19
4.2	About t	he outdoor unit	19
4.3	System	layout	20
4.4	Combining units and options		
	4.4.1	About combining units and options	20
	4.4.2	Possible combinations of indoor units	2:
	4.4.3	Possible options for the outdoor unit.	2.

4.1 Identification

 


NOTICE

When installing or servicing several units at the same time, make sure NOT to switch the service panels between different models.

4.1.1 Identification label: Outdoor unit

Location



Model identification

Example: R X Y SC Q 4 TM V1 B [*]

Code	Explanation
R	Outdoor air cooled
X	Heat pump (no continuous heating)
Υ	Single module
SC	Compact S series
Q	Refrigerant R410A
4~6	Capacity class
TM	VRV IV series
V1	Power supply
В	European market
[*]	Minor model change indication

4.2 About the outdoor unit

This installation manual concerns the VRV IV-S, full inverter driven, heat pump system.



These units are intended for outdoor installation and aimed for air to air heat pump applications.

Specification		RXYSCQ4~6
Capacity	Heating	14.2~18.0 kW
	Cooling	12.1~15.5 kW
Ambient design	Heating	−20~15.5°C WB
temperature	Cooling	−5~46°C DB

4.3 System layout




INFORMATION

The following figure is an example and may NOT completely match your system layout.



INFORMATION

Not all combinations of indoor units are allowed, for guidance, see "4.4.2 Possible combinations of indoor units" [> 21].

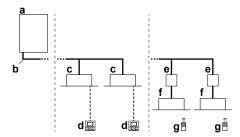

- a VRV IV-S Heat pump outdoor unit
- **b** Refrigerant piping
- c VRV direct expansion (DX) indoor unit
- **d** User interface (dedicated depending on indoor unit type)
- e BP box (required to connect Residential Air (RA) or Sky Air (SA) direct expansion (DX) indoor units)
- f Residential Air (RA) direct expansion (DX) indoor units
- **g** User interface (wireless, dedicated depending on indoor unit type)

4.4 Combining units and options



INFORMATION

Certain options may NOT be available in your country.

4.4.1 About combining units and options



NOTICE

To be sure your system setup (outdoor unit+indoor unit(s)) will work, you have to consult the latest technical engineering data for the VRV heat pump.

The VRV IV-S heat pump system can be combined with several types of indoor units and is intended for R410A use only.



For an overview which units are available you can consult the product catalogue for VRV IV-S.

An overview is given indicating the allowed combinations of indoor units and outdoor units. Not all combinations are allowed. They are subject to rules (combination between outdoor-indoor, combinations between indoor units, etc.) mentioned in the technical engineering data.

4.4.2 Possible combinations of indoor units

In general following type of indoor units can be connected to a VRV heat pump system. The list is non-exhaustive and is depending on both outdoor unit model and indoor unit model combinations.

- VRV direct expansion (DX) indoor units (air to air applications).
- SA/RA (Sky Air/Residential Air) direct expansion (DX) indoor units (air to air applications). Further referred to as RA DX indoor units. These indoor units require a BP box.
- AHU (air to air applications): one of the following two combinations must be installed:
 - EKEXV-kit + EKEQ-box.
 - EKEXVA-kit + EKEACBVE-box.
- Air curtain (air to air applications): See the combination table in the databook for more information.



INFORMATION

- Combination of VRV DX and RA DX indoor units is not allowed.
- Combination of RA DX and AHU indoor units is not allowed.
- Combination of RA DX and air curtain indoor units is not allowed.

4.4.3 Possible options for the outdoor unit



INFORMATION

Refer to the technical engineering data for the latest option names.

Refrigerant branching kit

Description	Model name
Refnet header	KHRQ22M29H
Refnet joint	KHRQ22M20TA

For the selection of the optimal branching kit, please refer to "5.2.4 To select refrigerant branch kits" [▶ 31].

External control adaptor (DTA104A61/62)

To instruct specific operation with an external input coming from a central control the external control adaptor can be used. Instructions (group or individual) can be instructed for low noise operation and power consumption limitation operation.

The external control adapter has to be installed in the indoor unit.



PC configurator cable (EKPCCAB*)

You can make several commissioning field settings through a personal computer interface. For this option EKPCCAB* is required which is a dedicated cable to communicate with the outdoor unit. The user interface software is available on http://www.daikineurope.com/support-and-manuals/software-downloads/.



5 Preparation

In this chapter

5.1	Prepari	Preparing the installation site		
	5.1.1	Installation site requirements of the outdoor unit	23	
	5.1.2	Additional installation site requirements of the outdoor unit in cold climates	26	
	5.1.3	Securing safety against refrigerant leaks	26	
5.2	Prepari	ng refrigerant piping	28	
	5.2.1	Refrigerant piping requirements	28	
	5.2.2	Refrigerant piping material	29	
	5.2.3	To select the piping size	29	
	5.2.4	To select refrigerant branch kits	31	
	5.2.5	Refrigerant piping length and height difference	32	
5.3	Prepari	ng electrical wiring	35	
	5.3.1	About electrical compliance	35	
	5.3.2	Safety device requirements	35	

5.1 Preparing the installation site

Choose an installation location with sufficient space to transport the unit in and out of the site.

Do NOT install the unit in places often used as work place. In case of construction works (e.g. grinding works) where a lot of dust is created, the unit MUST be covered.

5.1.1 Installation site requirements of the outdoor unit



INFORMATION

Also read the following requirements:

- General installation site requirements. See the "General safety precautions" chapter.
- Service space requirements. See the "Technical data" chapter.
- Refrigerant piping requirements (length, height difference). See further in this "Preparation" chapter.



CAUTION

Appliance is NOT accessible to the general public. Install it in a secured area, protected from easy access.

This unit is suitable for installation in a commercial and light industrial environment.




NOTICE

The equipment described in this manual may cause electronic noise generated from radio-frequency energy. The equipment complies with specifications that are designed to provide reasonable protection against such interference. However, there is no guarantee that interference will not occur in a particular installation.

It is therefore recommended to install the equipment and electric wires in such a way that they keep a proper distance from stereo equipment, personal computers, etc.



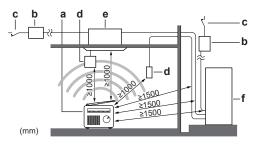

- a Personal computer or radio
- **b** Fuse
- c Earth leakage protector
- **d** User interface
- Indoor unit
- f Outdoor unit
- In places with weak reception, keep distances of 3 m or more to avoid electromagnetic disturbance of other equipment and use conduit tubes for power and transmission lines.
- Select a place where rain can be avoided as much as possible.
- Ensure that in the event of a water leak, no damage occurs to the installation space or its surroundings.
- Choose a location where the operation noise or the hot/cold air discharged from the unit will not disturb anyone and the location is selected according the applicable legislation.
- Heat exchanger fins are sharp and injury is possible. Choose an installation location where there is no risk for injury (especially in areas where children play).

Do NOT install the unit in the following places:

• Sound sensitive areas (e.g. near a bedroom), so that the operation noise will cause no trouble.

Note: If the sound is measured under actual installation conditions, the measured value might be higher than the sound pressure level mentioned in Sound spectrum in the data book due to environmental noise and sound reflections.

• In places where a mineral oil mist, spray or vapour may be present in the atmosphere. Plastic parts may deteriorate and fall off or cause water leakage.


It is NOT recommended to install the unit in the following places because it may shorten the life of the unit:

- Where the voltage fluctuates a lot
- In vehicles or vessels
- Where acidic or alkaline vapour is present

Seaside installation. Make sure the outdoor unit is NOT directly exposed to sea winds. This is to prevent corrosion caused by high levels of salt in the air, which might shorten the life of the unit.

Install the outdoor unit away from direct sea winds.


Example: Behind the building.

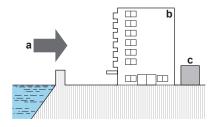



If the outdoor unit is exposed to direct sea winds, install a windbreaker.

- Height of windbreaker≥1.5×height of outdoor unit
- Mind the service space requirements when installing the windbreaker.

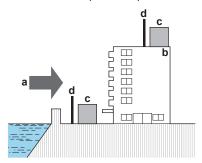


- a Sea wind
- **b** Building
- c Outdoor unit
- **d** Windbreaker

Strong winds (≥18 km/h) blowing against the outdoor unit's air outlet causes short circuit (suction of discharge air). This may result in:

- deterioration of the operational capacity;
- frequent frost acceleration in heating operation;
- disruption of operation due to decrease of low pressure or increase of high pressure;
- a broken fan (if a strong wind blows continuously on the fan, it may start rotating very fast, until it breaks).


It is recommended to install a baffle plate when the air outlet is exposed to wind.

Turn the air outlet side towards the building's wall, fence or screen.

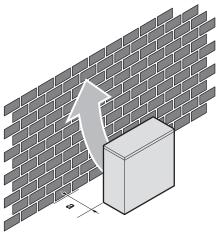

a Make sure there is enough installation space

 Set the air outlet side at a right angle to the direction of the wind.




- a Prevailing wind direction
- **b** Air outlet



5.1.2 Additional installation site requirements of the outdoor unit in cold climates

Protect the outdoor unit against direct snowfall and take care that the outdoor unit is NEVER snowed up.

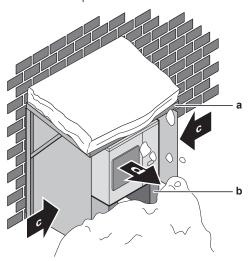


- Snow cover or shed
- Pedestal (minimum height = 150 mm)
- Prevailing wind direction
- Air outlet



NOTICE

When operating the unit in heating in a low outdoor ambient temperature with high humidity conditions, make sure to take precautions to keep the drain holes of the unit free by using proper equipment.

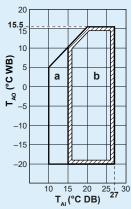

 \mathbf{a} : Warming up operation range; \mathbf{b} : Heating operation range; \mathbf{T}_{AI} : Ambient indoor temperature; \mathbf{T}_{AO} : Ambient outdoor temperature

If the unit is selected to operate at ambient temperatures lower than -5°C for 5 days or longer, with relative humidity levels exceeding 95%, we recommend to apply a Daikin range specifically designed for such application and/or to contact your dealer for further advice.

5.1.3 Securing safety against refrigerant leaks

About safety against refrigerant leaks

The installer and system specialist shall secure safety against leakage according to local regulations or standards. The following standards may be applicable if local regulations are not available.

This system uses R410A as refrigerant. R410A itself is an entirely safe non-toxic, non-combustible refrigerant. Nevertheless care must be taken to ensure that the system is installed in a room which is sufficiently large. This assures that the



maximum concentration level of refrigerant gas is not exceeded, in the unlikely event of major leak in the system and this in accordance to the local applicable regulations and standards.


About the maximum concentration level

The maximum charge of refrigerant and the calculation of the maximum concentration of refrigerant is directly related to the humanly occupied space in to which it could leak.

The unit of measurement of the concentration is kg/m³ (the weight in kg of the refrigerant gas in 1 m³ volume of the occupied space).

Compliance to the local applicable regulations and standards for the maximum allowable concentration level is required.

According to the appropriate European Standard, the maximum allowed concentration level of refrigerant to a humanly space for R410A is limited to 0.44 kg/m³.

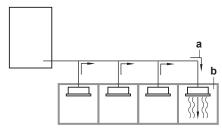

- a Direction of the refrigerant flow
- **b** Room where refrigerant leak has occurred (outflow of all the refrigerant from the system)

Pay special attention to places, such as basements etc., where refrigerant can stay, because refrigerant is heavier than air.

To check the maximum concentration level

Check the maximum concentration level in accordance with steps 1 to 4 below and take whatever action is necessary to comply.

1 Calculate the amount of refrigerant (kg) charged to each system separately.

Formula	A+B=C
A	Amount of refrigerant in a single unit system (amount of refrigerant with which the system is charged before leaving the factory)
В	Additional charging amount (amount of refrigerant added locally)
С	Total amount of refrigerant (kg) in the system




NOTICE

Where a single refrigerant facility is divided into 2 entirely independent refrigerant systems, use the amount of refrigerant with which each separate system is charged.

2 Calculate the volume of the room (m³) where the indoor unit is installed. In a case such as the following, calculate the volume of (D), (E) as a single room or as the smallest room.



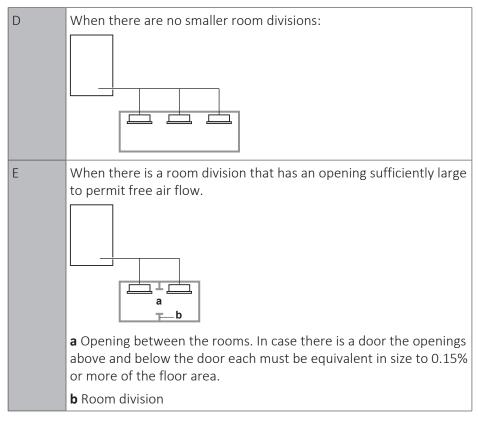

3 Calculate the refrigerant density using the results of the calculations in steps 1 and 2 above. If the result of the above calculation exceeds the maximum concentration level, a ventilation opening to the adjacent room shall be made.

Formula	F/G≤H
F	Total volume of refrigerant in the refrigerant system
G	Size (m³) of smallest room in which there is an indoor unit installed
Н	Maximum concentration level (kg/m³)

Calculate the refrigerant density taking the volume of the room where the indoor unit is installed and the adjacent room. Install ventilation openings in the door of adjacent rooms until the refrigerant density is smaller than the maximum concentration level.

5.2 Preparing refrigerant piping

5.2.1 Refrigerant piping requirements



NOTICE

The refrigerant R410A requires strict cautions for keeping the system clean, dry and tight.

- Clean and dry: foreign materials (including mineral oils or moisture) should be prevented from getting mixed into the system.
- Tight: R410A does not contain any chlorine, does not destroy the ozone layer, and does not reduce earth's protection against harmful ultraviolet radiation. R410A can contribute to the greenhouse effect if it is released. Therefore pay special attention to check the tightness of the installation.



NOTICE

The piping and other pressure-containing parts shall be suitable for refrigerant. Use phosphoric acid deoxidised seamless copper for refrigerant piping.



INFORMATION

Also read the precautions and requirements in the "1 General safety precautions" $[\triangleright 6]$.

 Foreign materials inside pipes (including oils for fabrication) must be ≤30 mg/ 10 m.

5.2.2 Refrigerant piping material

- Piping material: phosphoric acid deoxidised seamless copper
- Flare connections: Only use annealed material.
- Piping temper grade and thickness:

Outer diameter (Ø)	Temper grade	Thickness (t) ^(a)	
6.4 mm (1/4")	Annealed (O)	≥0.80 mm	Ø
9.5 mm (3/8")			
12.7 mm (1/2")			
15.9 mm (5/8")	Annealed (O)	≥0.99 mm	
19.1 mm (3/4")	Half hard (1/2H)	≥0.80 mm	

⁽a) Depending on the applicable legislation and the maximum working pressure of the unit (see "PS High" on the unit name plate), larger piping thickness might be required.

5.2.3 To select the piping size

Determine the proper size using the following tables for connections to DX indoor units and AHU units (the reference figure is only for indication).




INFORMATION

- Combination of VRV DX and RA DX indoor units is not allowed.
- Combination of RA DX and AHU indoor units is not allowed.
- Combination of RA DX and air curtain indoor units is not allowed.



INFORMATION

If you install RA DX indoor units, you have to configure field setting [2-38] (= type of installed indoor units). See "7.1.8 Mode 2: field settings" [> 72].

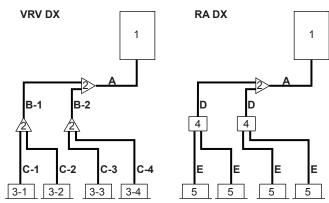


- Outdoor unit
- Refrigerant branch kits 2
- 3-1~3-4 VRV DX indoor units
 - 4 BP units
 - 5 RA DX indoor units
 - Piping between outdoor unit and (first) refrigerant branch kit Α
- **B-1 B-2** Piping between refrigerant branch kits
- C-1~C-4 Piping between refrigerant branch kit and indoor unit
 - **D** Piping between refrigerant branch kit and BP unit
 - E Piping between BP unit and RA DX indoor unit

In case the required pipe sizes (inch sizes) are not available, it is also allowed to use other diameters (mm sizes), taken the following into account:

- Select the pipe size nearest to the required size.
- Use the suitable adapters for the changeover from inch to mm pipes (field supply).
- The additional refrigerant calculation has to be adjusted as mentioned in "6.6.3 To determine the additional refrigerant amount" [▶ 53].

A: Piping between outdoor unit and (first) refrigerant branch kit

 When the equivalent pipe length between outdoor unit and the furthest indoor unit is 90 m or more (b+d), the size of the main gas pipe (b) must be increased (size-up). If the recommended gas pipe (size-up) is not available, you must use the standard size (which might result in a small capacity decrease).



- a Outdoor unit
- Main gas pipe (increase piping size if length $b+d \ge 90 \text{ m}$)
- First refrigerant branch kit
- Piping between indoor unit and first refrigerant branch kit
- Furthest indoor unit

Outdoor unit capacity	Piping outer diameter size (mm)		
type (HP)	Gas pipe		Liquid pipe
	Standard	Size-up	
4+5	15.9	19.1	9.5
6	19.1	22.2	9.5

B: Piping between refrigerant branch kits

Choose from the following table in accordance with the indoor unit total capacity type, connected downstream. Do not let the connection piping exceed the refrigerant piping size chosen by the general system model name.



Indoor unit capacity index	Piping outer diameter size (mm)		
	Gas pipe	Liquid pipe	
<150	15.9	9.5	
150≤x≤182	19.1		

Example: Downstream capacity for B-1 = capacity index of unit 3-1 + capacity index of unit 3-2

C: Piping between refrigerant branch kit and indoor unit

Use the same diameters as the connections (liquid, gas) on the indoor units. The diameters of the indoor units are as follows:

Indoor unit capacity index	Piping outer diameter size (mm)		
	Gas pipe	Liquid pipe	
15~50	12.7	6.4	
63~140	15.9	9.5	

D: Piping between refrigerant branch kit and BP unit

Total capacity index of	Piping outer diameter size (mm)	
connected indoor units	Gas pipe	Liquid pipe
15~62	12.7	6.4
63~149	15.9	9.5
150~182	19.1	9.5

E: Piping between BP unit and RA DX indoor unit

Indoor unit capacity index	Piping outer diameter size (mm)		
	Gas pipe	Liquid pipe	
15~42	9.5	6.4	
50	12.7		
60		9.5	
71	15.9		

5.2.4 To select refrigerant branch kits

For piping example, refer to "5.2.3 To select the piping size" [▶ 29].

Refnet joint at first branch (counting from outdoor unit)

When using refinet joints at the first branch counted from the outdoor unit side, choose from the following table in accordance with the capacity of the outdoor unit. **Example:** Refinet joint $A \rightarrow B-1$.

Outdoor unit capacity type (HP)	Refrigerant branch kit
4~6	KHRQ22M20TA

Refnet joints at other branches

For refnet joints other than the first branch, select the proper branch kit model based on the total capacity index of all indoor units connected after the refrigerant branch. **Example:** Refnet joint $B-1 \rightarrow C-1$.



Indoor unit capacity index	Refrigerant branch kit
<182	KHRQ22M20TA

Refnet headers

Concerning refnet headers, choose from the following table in accordance with the total capacity of all the indoor units connected below the refnet header.

Indoor unit capacity index	Refrigerant branch kit
<182	KHRQ22M29H



INFORMATION

Maximum 8 branches can be connected to a header.

5.2.5 Refrigerant piping length and height difference

Connection with only VRV DX and RA DX indoor units

The piping lengths and height differences must comply with the following requirements. Two patterns will be discussed:


- Outdoor with 100% VRV DX indoor units
- Outdoor with 100% RA DX indoor units


Requirement	Limit	
	VRV DX	RA DX
Maximum actual piping length	70 m	35 m
• Example 1.1, unit 8: a+b+c+d+e+f+g+p≤Limit		
• Example 1.2, unit 6: a+b+h≤Limit		
■ Example 1.2, unit 8: a+i+k≤Limit		
■ Example 1.3, unit 8: a+i≤Limit		
• Example 2, unit 18: a+b+m≤Limit		
Maximum equivalent piping length ^(a)	90 m	45 m
Maximum total piping length	300 m	140 m
• Example 1.1: a+b+c+d+e+f+g+h+i+j+k+l+m+n+p≤Limit		
• Example 2: a+b+c+d+e+f+g+h+i+j+k+l+m≤Limit		
Minimum length outdoor-first refrigerant branch kit	N/A	5 m
• Example 2: Limit≤a		
Maximum length first branch kit-indoor unit	40 m	40 m
• Example 1.1, unit 8: b+c+d+e+f+g+p≤Limit		
• Example 1.2, unit 6: b+h≤Limit		
■ Example 1.2, unit 8: i+k≤Limit		
■ Example 1.3, unit 8: i≤Limit		
• Example 2, unit 18: b+m≤Limit		
Maximum length outdoor-BP	N/A	30 m
■ Example 2, BP3: a+b≤Limit		



Requirement		Limit	
		VRV DX	RA DX
Minimum and maximum length BP-	Indoor unit capacity index<60	N/A	2~15 m
indoor	Indoor unit capacity index=60	N/A	2~12 m
• Example 2, unit 18: Min.≤m≤Max.	Indoor unit capacity index=71	N/A	2~8 m
Maximum height difference	Outdoor higher than indoor	30 m	30 m
outdoor-indoor	Examples: H1≤Limit		
	Outdoor lower than indoor		
Maximum height difference indoor-indoor		15 m	15 m
• Examples: H2≤Limit			
Maximum height difference outdoor	r-BP	N/A	30 m
• Example 2: H3≤Limit			
Maximum height difference BP-BP		N/A	15 m
• Example 2: H4≤Limit			
Maximum height difference BP-indo	or	N/A	5 m
• Example 2: H5≤Limit			

 ⁽a) Assume equivalent piping length of refnet joint=0.5 m and refnet header=1 m (for calculation purposes of equivalent piping length, not for refrigerant charge calculations).

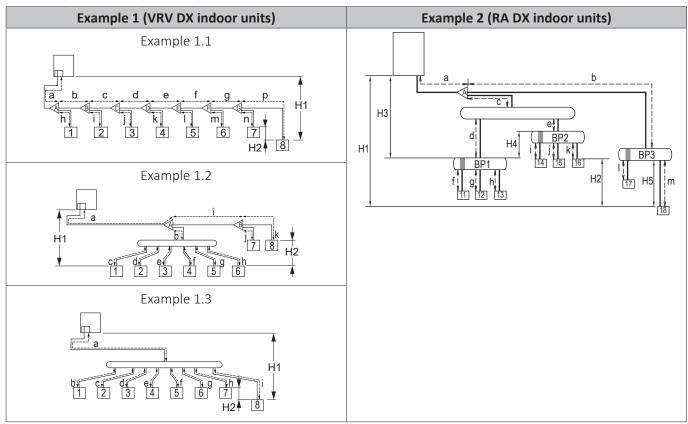



Connection with only one air handling unit (pair layout)

Pipe	Maximum length (actual/equivalent)
Longest pipe from the outdoor unit	50 m/55 m ^(a)
Total pipe length	150 m/— ^(b)


 $^{^{(}a)}$ The allowable minimum length is 5 m.

Connection with VRV DX indoor units and air handling units (mix layout) and connection with only air handling units (multi layout)



INFORMATION

The following figure is an example and may NOT completely match your system layout.

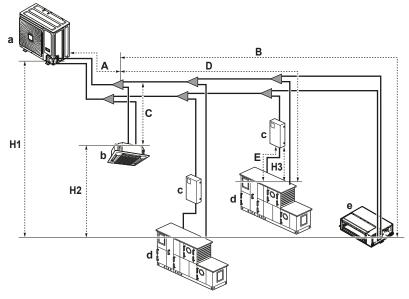

- a Outdoor unit
- VRV DX indoor unit
- c EKEXV(A)-kit
- Air handling unit (AHU)
- e VRV DX indoor unit (duct)

- (,	
Pipe	Maximum length (actual/equivalent)
Longest pipe from the outdoor unit or the last multi-outdoor piping branch (A + [B, D])	50 m/55 m ^(a)
Longest pipe after the first branch (B, D)	40 m/—
Total pipe length	300 m/—

 $^{^{(}a)}$ The allowable minimum length is 5 m.

Allowable height difference

Term	Definition	Height difference [m]
H1	Height difference between outdoor and indoor units	50/55
H2	Height difference between indoor units	15



⁽b) Up to three piping branches are possible in case of an AHU with an interlaced heat exchanger.

Term	Definition	Height difference [m]
1	Height difference between EKEXV(A)—kits and AHU units	5

5.3 Preparing electrical wiring

5.3.1 About electrical compliance

Equipment complying with EN/IEC 61000-3-12 (European/International Technical Standard setting the limits for harmonic currents produced by equipment connected to public low-voltage systems with input current >16 A and ≤75 A per phase.).

5.3.2 Safety device requirements

Power supply wiring

The power supply must be protected with the required safety devices, i.e. a main switch, a slow blow fuse on each phase and an earth leakage protector in accordance with the applicable legislation.

Selection and sizing of the wiring should be done in accordance with the applicable legislation based on the information mentioned in the table below.

Model	Minimum circuit ampacity	Recommended fuses
RXYSCQ4~6	29.1 A	32 A

For all models:

■ Phase and frequency: 1~ 50 Hz

Voltage: 220-240 V

Transmission line section:

Transmission wiring	Vinyl cords with 0.75 to 1.25 mm ² sheath or cables (2-core wires)
Maximum wiring length (= distance between outdoor and furthest indoor unit)	300 m
Total wiring length (= distance between outdoor and all indoors)	600 m

If the total transmission wiring exceeds these limits, it may result in communication error.



6 Installation

In this chapter

6.1	Overvie	ew: Installation	36
6.2	Openin	g the units	37
	6.2.1	About opening the units	37
	6.2.2	To open the outdoor unit	37
6.3	Mounti	ing the outdoor unit	38
	6.3.1	About mounting the outdoor unit	38
	6.3.2	Precautions when mounting the outdoor unit	38
	6.3.3	To provide the installation structure	38
	6.3.4	To install the outdoor unit	39
	6.3.5	To provide drainage	39
	6.3.6	To prevent the outdoor unit from falling over	40
6.4	Connec	ting the refrigerant piping	40
	6.4.1	About connecting the refrigerant piping	40
	6.4.2	Precautions when connecting the refrigerant piping	40
	6.4.3	Guidelines when connecting the refrigerant piping	41
	6.4.4	Pipe bending guidelines	42
	6.4.5	To flare the pipe end	42
	6.4.6	To braze the pipe end	43
	6.4.7	Using the stop valve and service port	43
	6.4.8	To connect the refrigerant piping to the outdoor unit	45
	6.4.9	To connect the refrigerant branching kit	47
6.5	Checkir	ng the refrigerant piping	48
	6.5.1	About checking the refrigerant piping	48
	6.5.2	Checking refrigerant piping: General guidelines	49
	6.5.3	Checking refrigerant piping: Setup	49
	6.5.4	To perform a leak test	50
	6.5.5	To perform vacuum drying	50
	6.5.6	To insulate the refrigerant piping	51
6.6	Chargir	ng refrigerant	52
	6.6.1	About charging refrigerant	52
	6.6.2	Precautions when charging refrigerant	52
	6.6.3	To determine the additional refrigerant amount	53
	6.6.4	To charge refrigerant	54
	6.6.5	Error codes when charging refrigerant	56
	6.6.6	To fix the fluorinated greenhouse gases label	56
6.7	Connec	ting the electrical wiring	57
	6.7.1	About connecting the electrical wiring	57
	6.7.2	To connect the electrical wiring to the outdoor unit	62
6.8	Finishir	ng the outdoor unit installation	64
	6.8.1	To finish the interconnection wiring	64
	6.8.2	To close the outdoor unit	65

6.1 Overview: Installation

This chapter describes what you have to do and know on-site to install the system.

Typical workflow

Installation typically consists of the following stages:

- Mounting the outdoor unit.
- Mounting the indoor units.
- Connecting the refrigerant piping.
- Checking the refrigerant piping.
- Charging refrigerant.
- Connecting the electrical wiring.
- Finishing the outdoor installation.





INFORMATION

For installation of the indoor unit (mounting the indoor unit, connecting the refrigerant piping to the indoor unit, connecting the electrical wiring to the indoor unit ...), see the installation manual of the indoor unit.

6.2 Opening the units

6.2.1 About opening the units

At certain times, you have to open the unit. Example:

- When connecting the refrigerant piping
- When connecting the electrical wiring
- When maintaining or servicing the unit



DANGER: RISK OF ELECTROCUTION

Do NOT leave the unit unattended when the service cover is removed.

6.2.2 To open the outdoor unit



DANGER: RISK OF ELECTROCUTION



DANGER: RISK OF BURNING/SCALDING





6.3 Mounting the outdoor unit

6.3.1 About mounting the outdoor unit

Typical workflow

Mounting the outdoor unit typically consists of the following stages:

- Providing the installation structure.
- Installing the outdoor unit.
- 3 Providing drainage.
- 4 Protecting the unit against snow and wind by installing a snow cover and baffle plates. See "5.1 Preparing the installation site" [> 23].

6.3.2 Precautions when mounting the outdoor unit



INFORMATION

Also read the precautions and requirements in the following chapters:


- General safety precautions
- Preparation

6.3.3 To provide the installation structure

Check the strength and level of the installation ground so that the unit will not cause any operating vibration or noise.


Fix the unit securely by means of foundation bolts in accordance with the foundation drawing.

Prepare four sets of anchor bolts, nuts, and washers (field supply) as follows:

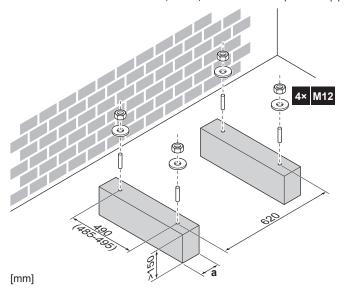

a Make sure not to cover the drain holes of the bottom plate of the unit.



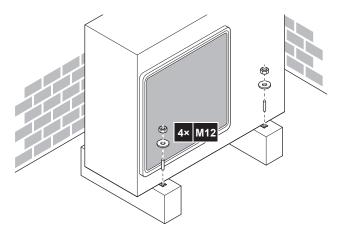

6.3.5 To provide drainage

- Make sure that condensation water can be evacuated properly.
- Install the unit on a base to make sure that there is proper drainage in order to avoid ice accumulation.
- Prepare a water drainage channel around the foundation to drain waste water away from the unit.
- Avoid drain water flowing over the footpath, so that it does NOT become slippery in case of ambient freezing temperatures.
- If you install the unit on a frame, install a waterproof plate within 150 mm of the bottom side of the unit in order to prevent water from getting into the unit and to avoid drain water dripping (see the following figure).








NOTICE

If drain holes of the outdoor unit are covered by a mounting base or by floor surface, raise the unit to provide a free space of more than 150 mm under the outdoor unit.



Drain holes (dimensions in mm)

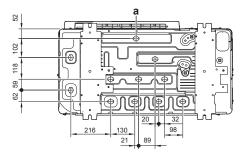


a Drain holes

6.3.6 To prevent the outdoor unit from falling over

In case the unit is installed in places where strong wind can tilt the unit, take following measure:

 - **1** Prepare 2 cables as indicated in the following illustration (field supply).
- Place the 2 cables over the outdoor unit.
- 3 Insert a rubber sheet between the cables and the outdoor unit to prevent the cables from scratching the paint (field supply).
- Attach the ends of the cables.
- Tighten the cables.



6.4 Connecting the refrigerant piping

6.4.1 About connecting the refrigerant piping

Before connecting the refrigerant piping

Make sure the outdoor and indoor units are mounted.

Typical workflow

Connecting the refrigerant piping involves:

- Connecting the refrigerant piping to the outdoor unit
- Connecting refrigerant branch kits
- Connecting the refrigerant piping to the indoor units (see the installation manual of the indoor units)
- Insulating the refrigerant piping
- Keeping in mind the guidelines for:
 - Pipe bending
 - Flaring pipe ends
 - Brazing
 - Using the stop valves

6.4.2 Precautions when connecting the refrigerant piping



 
DANGER: RISK OF BURNING/SCALDING



NOTICE

Take the following precautions on refrigerant piping into account:

- Avoid anything but the designated refrigerant to get mixed into the refrigerant cycle (e.g. air).
- Only use R410A when adding refrigerant.
- Only use installation tools (e.g. manifold gauge set) that are exclusively used for R410A installations to withstand the pressure and to prevent foreign materials (e.g. mineral oils and moisture) from mixing into the system.
- Install the piping so that the flare is NOT subjected to mechanical stress
- Do NOT leave pipes unattended at the site. If the installation is NOT done within 1
 day, protect the piping as described in the following table to prevent dirt, liquid
 or dust from entering the piping.
- Use caution when passing copper tubes through walls (see figure below).



Unit	Installation period	Protection method
Outdoor unit	>1 month	Pinch the pipe
	<1 month	Pinch or tape the pipe
Indoor unit	Regardless of the period	



 
NOTICE

Do NOT open the refrigerant stop valve before checking the refrigerant piping. When you need to charge additional refrigerant it is recommended to open the refrigerant stop valve after charging.


6.4.3 Guidelines when connecting the refrigerant piping

Take the following guidelines into account when connecting pipes:

• Coat the flare inner surface with ether oil or ester oil when connecting a flare nut. Tighten 3 or 4 turns by hand, before tightening firmly.



 - ALWAYS use 2 wrenches together when loosening a flare nut.
- ALWAYS use a spanner and torque wrench together to tighten the flare nut when connecting the piping. This to prevent nut cracking and leaks.



- Torque wrench
- **S** Spanner
- c Piping union



d Flare nut

Piping size (mm)	Tightening torque (N•m)	Flare dimensions (A) (mm)	Flare shape (mm)
Ø6.4	15~17	8.7~9.1	90°±2 45°±2
Ø9.5	33~39	12.8~13.2	R=
Ø12.7	50~60	16.2~16.6	0.4~0.8
Ø15.9	62~75	19.3~19.7	
Ø19.1	90~110	23.6~24.0	

6.4.4 Pipe bending guidelines

 
Use a pipe bender for bending. All pipe bends should be as gentle as possible (bending radius should be 30~40 mm or larger).

6.4.5 To flare the pipe end



CAUTION

- Incomplete flaring may cause refrigerant gas leakage.
- Do NOT re-use flares. Use new flares to prevent refrigerant gas leakage.
- Use flare nuts that are included with the unit. Using different flare nuts may cause refrigerant gas leakage.
- 1 Cut the pipe end with a pipe cutter.
- Remove burrs with the cut surface facing down so that the chips do NOT enter the pipe.




- a Cut exactly at right angles.
- **b** Remove burrs.
- Remove the flare nut from the stop valve and put the flare nut on the pipe.
- Flare the pipe. Set exactly at the position as shown in the following figure.



	Flare tool for R410A	Conventional flare tool	
	(clutch type)	Clutch type Wing nut type	
		(Ridgid-type)	(Imperial-type)
А	0~0.5 mm	1.0~1.5 mm	1.5~2.0 mm

 Check that the flaring is properly made.



a Flare's inner surface MUST be flawless.



- **b** The pipe end MUST be evenly flared in a perfect circle.
- c Make sure the flare nut is fitted.

6.4.6 To braze the pipe end



DANGER: RISK OF BURNING/SCALDING



 
NOTICE

Precautions when connecting field piping. Add brazing material as shown in the figure.

≤Ø25.4



- When brazing, blow through with nitrogen to prevent creation of large quantities of oxidised film on the inside of the piping. This film adversely affects valves and compressors in the refrigerating system and prevents proper operation.
- Set the nitrogen pressure to 20 kPa (0.2 bar) (just enough so it can be felt on the skin) with a pressure-reducing valve.



- Refrigerant piping
- Part to be brazed b
- Taping С
- d Manual valve
- Pressure-reducing valve
- **f** Nitrogen
- Do NOT use anti-oxidants when brazing pipe joints. Residue can clog pipes and break equipment.
- Do NOT use flux when brazing copper-to-copper refrigerant piping. Use phosphor copper brazing filler alloy (BCuP), which does NOT require flux.
 - Flux has an extremely harmful influence on refrigerant piping systems. For instance, if chlorine based flux is used, it will cause pipe corrosion or, in particular, if the flux contains fluorine, it will deteriorate the refrigerant oil.
- ALWAYS protect the surrounding surfaces (e.g. insulation foam) from heat when brazing.

6.4.7 Using the stop valve and service port

 
To handle the stop valve

Take the following guidelines into account:


- The gas and liquid stop valves are factory closed.
- Make sure to keep all stop valves open during operation.



• The figures below show the name of each part required in handling the stop valve.



 
- Service port and service port cover
- Stop valve
- **c** Field piping connection
- Stop valve cover



- Service port
- Stop valve cover b
- c Hexagon hole
- **d** Shaft
- e Valve seat
- Do NOT apply excessive force to the stop valve. Doing so may break the valve body.

To open the stop valve

- Remove the stop valve cover.
- 2 Insert a hexagon wrench into the stop valve and turn the stop valve counterclockwise.

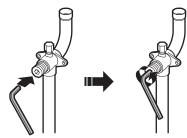


- **3** When the stop valve cannot be turned any further, stop turning.
- Install the stop valve cover.

Result: The valve is now open.

To close the stop valve

- Remove the stop valve cover.
- Insert a hexagon wrench into the stop valve and turn the stop valve clockwise.

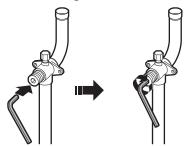




- **3** When the stop valve cannot be turned any further, stop turning.
- 4 Install the stop valve cover.

Result: The valve is now closed.

To handle the stop valve cover

 - The stop valve cover is sealed where indicated by the arrow. Do NOT damage it.
- After handling the stop valve, tighten the stop valve cover securely, and check for refrigerant leaks. For the tightening torque, refer to the table below.



To handle the service port

- Always use a charge hose equipped with a valve depressor pin, since the service port is a Schrader type valve.
- After handling the service port, make sure to tighten the service port cover securely. For the tightening torque, refer to the table below.
- Check for refrigerant leaks after tightening the service port cover.

Tightening torques

Stop valve size	Tightening torque N•m (turn clockwise to close)			
(mm)	Shaft			
	Valve body Hexagonal Cap (valve lid) Service po			
Ø9.5	5.4~6.6	4 mm	13.5~16.5	11.5~13.9
Ø15.9	13.5~16.5	6 mm	22.5~27.5	

6.4.8 To connect the refrigerant piping to the outdoor unit



NOTICE

Be sure that the field installed piping does not touch other pipes, the bottom panel or side panel. Especially for the bottom and side connection, be sure to protect the piping with suitable insulation, to prevent it from coming into contact with the casing.

- **1** Do the following:
 - Remove the service cover. See "6.2.2 To open the outdoor unit" [▶ 37].
 - Remove the piping intake plate (a) with screw (b).



2 Choose a piping route (a, b or c).

 


Choose a piping route (a, b or c).





INFORMATION




- Punch out the knockout (a) in the bottom plate or cover plate by tapping on the attachment points with a flat head screwdriver and a hammer.
- Optionally, cut out the slits (b) with a metal saw.




NOTICE

Precautions when making knockout holes:

 - Avoid damaging the casing and underlying piping.
- After making the knockout holes, we recommend to remove the burrs and paint the edges and areas around the edges using repair paint to prevent rusting.
- When passing electrical wiring through the knockout holes, wrap the wiring with protective tape to prevent damage.
- Do the following:
 - Connect the liquid pipe (a) to the liquid stop valve.
 - Connect the gas pipe (b) to the gas stop valve.




• In case of RXYSCQ6: Connect the gas piping accessory (c). This is necessary because the size of the gas stop valve is Ø15.9 while the piping between outdoor unit and first refrigerant branch kit is Ø19.1. The connection of this gas piping accessory with the Ø19.1 field piping is made with a flare connection.

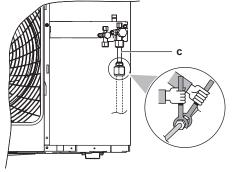

 - **c** Gas piping accessory (only for RXYSCQ6)
- Reattach the service cover and the piping intake plate.







WARNING

Provide adequate measures to prevent that the unit can be used as a shelter by small animals. Small animals that make contact with electrical parts can cause malfunctions, smoke or fire.




NOTICE

Make sure to open the stop valves after installing the refrigerant piping and performing vacuum drying. Running the system with the stop valves closed may break the compressor.

6.4.9 To connect the refrigerant branching kit

For installation of the refrigerant branching kit, refer to the installation manual delivered with the kit.

- Mount the refnet joint so that it branches either horizontally or vertically.
- Mount the refnet header so that it branches horizontally.

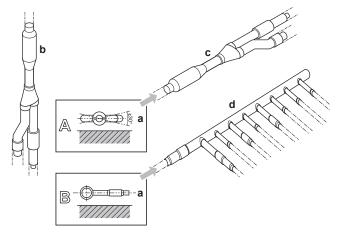


- a Horizontal surface
- **b** Refnet joint mounted vertically
- c Refnet joint mounted horizontally
- **d** Header



6.5 Checking the refrigerant piping

6.5.1 About checking the refrigerant piping

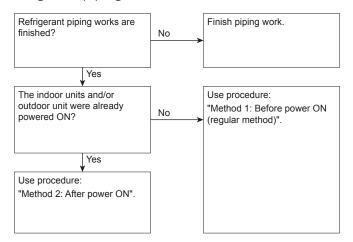

It is very important that all refrigerant piping work is done before the units (outdoor or indoor) are powered on. When the units are powered on, the expansion valves will initialise. This means that the valves will close.



NOTICE

Leak test and vacuum drying of field piping and indoor units is impossible when field expansion valves are closed.

Method 1: Before power ON

If the system has not yet been powered on, no special action is required to perform the leak test and the vacuum drying.

Method 2: After power ON

If the system has already been powered on, activate setting [2-21] (refer to "7.1.4 To access mode 1 or 2" [> 68]). This setting will open field expansion valves to guarantee a refrigerant piping pathway and make it possible to perform the leak test and the vacuum drying.



DANGER: RISK OF ELECTROCUTION



NOTICE

Make sure that all indoor units connected to the outdoor unit are powered on.



NOTICE

Wait to apply setting [2-21] until the outdoor unit has finished the initialisation.

Leak test and vacuum drying

Checking the refrigerant piping involves:

- Checking for any leakages in the refrigerant piping.
- Performing vacuum drying to remove all moisture, air or nitrogen in the refrigerant piping.



If there is a possibility of moisture being present in the refrigerant piping (for example, water may have entered the piping), first carry out the vacuum drying procedure below until all moisture has been removed.

All piping inside the unit has been factory tested for leaks.

Only field installed refrigerant piping needs to be checked. Therefore, make sure that all the outdoor unit stop valves are firmly closed before performing leak test or vacuum drying.



NOTICE

Make sure that all (field supplied) field piping valves are OPEN (not outdoor unit stop valves!) before you start leak test and vacuuming.

For more information on the state of the valves, refer to "6.5.3 Checking refrigerant piping: Setup" [\ 49].

6.5.2 Checking refrigerant piping: General guidelines

Connect the vacuum pump through a manifold to the service port of all stop valves to increase efficiency (refer to "6.5.3 Checking refrigerant piping: Setup" [> 49]).



NOTICE

 
Make sure the pump oil does not flow oppositely into the system while the pump is not working.



NOTICE

Do NOT purge the air with refrigerants. Use a vacuum pump to evacuate the installation.

6.5.3 Checking refrigerant piping: Setup



- a Pressure reducing valve
- **b** Nitrogen
- **c** Weighing scales
- d Refrigerant R410A tank (siphon system)
- e Vacuum pump
- f Liquid line stop valve
- **g** Gas line stop valve
- Valve A
- **B** Valve B
- C Valve C

Valve	Status
Valve A	Open
Valve B	Open
Valve C	Open
Liquid line stop valve	Close
Gas line stop valve	Close





NOTICE

The connections to the indoor units and all indoor units should also be leak and vacuum tested. Keep any possible (field supplied) field piping valves open as well.

Refer to the indoor unit installation manual for more details. Leak test and vacuum drying should be done before the power supply is set to the unit. If not, see also the flow chart earlier described in this chapter (see "6.5.1 About checking the refrigerant piping" [> 48]).

6.5.4 To perform a leak test

The leak test must satisfy the specifications of EN378-2.

Vacuum leak test

- Evacuate the system from the liquid and gas piping to a gauge pressure of -100.7 kPa (-1.007 bar) for more than 2 hours.
- 2 Once reached, turn off the vacuum pump and check that the pressure does not rise for at least 1 minute.
- Should the pressure rise, the system may either contain moisture (see vacuum drying below) or have leaks.

Pressure leak test

- 1 Break the vacuum by pressurising with nitrogen gas to a minimum gauge pressure of 0.2 MPa (2 bar). Never set the gauge pressure higher than the maximum operation pressure of the unit, i.e. 4.0 MPa (40 bar).
- Test for leaks by applying a bubble test solution to all piping connections.
- **3** Discharge all nitrogen gas.



NOTICE

ALWAYS use a recommended bubble test solution from your wholesaler.

NEVER use soap water:

- Soap water may cause cracking of components, such as flare nuts or stop valve caps.
- Soap water may contain salt, which absorbs moisture that will freeze when the piping gets cold.
- Soap water contains ammonia which may lead to corrosion of flared joints (between the brass flare nut and the copper flare).

6.5.5 To perform vacuum drying



NOTICE

The connections to the indoor units and all indoor units should also be leak and vacuum tested. Keep, if existing, all (field supplied) field valves to the indoor units

Leak test and vacuum drying should be done before the power supply is set to the unit. If not, see "6.5.1 About checking the refrigerant piping" [48] for more information.

To remove all moisture from the system, proceed as follows:

Evacuate the system for at least 2 hours to a target vacuum of -100.7 kPa (-1.007 bar)(5 Torr absolute).



- 3 Should you fail to reach the target vacuum within 2 hours or maintain the vacuum for 1 hour, the system may contain too much moisture. In that case, break the vacuum by pressurising with nitrogen gas to a gauge pressure of 0.05 MPa (0.5 bar) and repeat steps 1 to 3 until all moisture has been removed.
- 4 Depending on whether you want to immediately charge refrigerant through the refrigerant charge port or first pre-charge a portion of refrigerant through the liquid line, either open the outdoor unit stop valves, or keep them closed. See "6.6.4 To charge refrigerant" [▶ 54] for more information.



INFORMATION

After opening the stop valve, it is possible that the pressure in the refrigerant piping does NOT increase. This might be caused by e.g. the closed state of the expansion valve in the outdoor unit circuit, but does NOT present any problem for correct operation of the unit.


6.5.6 To insulate the refrigerant piping

After finishing the leak test and vacuum drying, the piping must be insulated. Take into account the following points:

- Make sure to insulate the connection piping and refrigerant branch kits entirely.
- Be sure to insulate the liquid and gas piping (for all units).
- Use heat resistant polyethylene foam which can withstand a temperature of 70°C for liquid piping and polyethylene foam which can withstand a temperature of 120°C for gas piping.
- Reinforce the insulation on the refrigerant piping according to the installation environment.

Ambient temperature	Humidity	Minimum thickness
≤30°C	75% to 80% RH	15 mm
>30°C	≥80% RH	20 mm

 If there is a possibility that condensation on the stop valve might drip down into the indoor unit through gaps in the insulation and piping because the outdoor unit is located higher than the indoor unit, this must be prevented by sealing up the connections. See below figure.

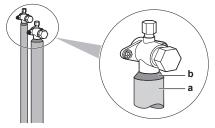

- a Insulation material
- b Caulking etc.



6.6 Charging refrigerant

6.6.1 About charging refrigerant

The outdoor unit is factory charged with refrigerant, but depending on the field piping you have to charge additional refrigerant.

Before charging refrigerant

Make sure the outdoor unit's external refrigerant piping is checked (leak test, vacuum drying).

Typical workflow

Charging additional refrigerant typically consists of the following stages:

- 1 Determining how much you have to charge additionally.
- Charging additional refrigerant (pre-charging and/or charging).
- Filling in the fluorinated greenhouse gases label, and fixing it to the inside of the outdoor unit.

6.6.2 Precautions when charging refrigerant



INFORMATION

Also read the precautions and requirements in the following chapters:

- General safety precautions
- Preparation



WARNING

- ONLY use R410A as refrigerant. Other substances may cause explosions and accidents.
- R410A contains fluorinated greenhouse gases. Its global warming potential (GWP) value is 2087.5. Do NOT vent these gases into the atmosphere.
- When charging refrigerant, ALWAYS use protective gloves and safety glasses.



NOTICE

If the power of some units is turned off, the charging procedure cannot be finished properly.



NOTICE

Turn ON the power 6 hours before operation in order to have power running to the crankcase heater and to protect the compressor.



NOTICE

If operation is performed within 12 minutes after the indoor and outdoor units are powered on, the compressor will not operate before the communication is established in a correct way between outdoor unit(s) and indoor units.



NOTICE

Before starting charging procedures, check if the 7-LEDs display is as normal (see "7.1.4 To access mode 1 or 2" [> 68]), and there is no malfunction code on the user interface of the indoor unit. If a malfunction code is present, see "11.3 Solving problems based on error codes" [▶ 90].



NOTICE

Make sure all connected indoor units are recognised (setting [1-5]).



NOTICE

Close the front panel before any refrigerant charge operation is executed. Without the front panel attached the unit cannot judge correctly whether it is operating properly or not.



NOTICE

In case of maintenance and the system (outdoor unit+field piping+indoor units) does not contain any refrigerant any more (e.g., after refrigerant reclaim operation), the unit has to be charged with its original amount of refrigerant (refer to the nameplate on the unit) and the determined additional refrigerant amount.

6.6.3 To determine the additional refrigerant amount



INFORMATION

For final charge adjustment in a test laboratory, contact your dealer.



INFORMATION

Note down the amount of additional refrigerant that is calculated here, for later use on the additional refrigerant charge label. See "6.6.6 To fix the fluorinated greenhouse gases label" [▶56].

Formula:

 $R = [(X_1 \times \mathbf{09.5}) \times 0.059 + (X_2 \times \mathbf{06.4}) \times 0.022]$

R Additional refrigerant to be charged [in kg and rounded off to 1 decimal place] $\mathbf{X}_{1...2}$ Total length [m] of liquid piping size at $\mathbf{Øa}$

Metric piping. When using metric piping, replace the weight factors in the formula by the ones from the following table:

Inch piping		Metric piping	
Piping	Weight factor	Piping Weight fa	
Ø6.4 mm	0.022	Ø6 mm	0.018
Ø9.5 mm	0.059	Ø10 mm	0.065

Connection ratio requirements. When selecting indoor units, the connection ratio must comply with the following requirements. For more information, see the technical engineering data.

Indoor units	Total CR ^(a)	CR per type ^(b)		
		VRV DX	RA DX	AHU
VRV DX only	50~130%	50~130%	_	_
RA DX only	80~130%	_	80~130%	_
VRV DX + AHU	50~110%	50~110%	_	0~60%
AHU only (EKEQ+ EKEXV)	90~110%	_	_	90~110%
Pair + multi				



Indoor units	Total CR ^(a)	CR per type ^(b)		
		VRV DX	RA DX	AHU
AHU only (EKEACBVE+ EKEXVA)	75 ^(c) ~110%	_	_	75 ^(c) ~110%
Pair + multi				

⁽a) Total CR = Total indoor unit capacity connection ratio

 
6.6.4 To charge refrigerant

To speed up the refrigerant charging process, it is in case of larger systems recommended to first pre-charge a portion of refrigerant through the liquid line before proceeding with the manual charging. It can be skipped, but charging will take longer then.

Pre-charging refrigerant

Pre-charging can be done without compressor operation, by connecting the refrigerant bottle to the service port of the liquid stop valve.

Connect as shown. Make sure that all outdoor unit stop valves, as well as valve A are closed.



- a Pressure reducing valve
- Nitrogen
- **c** Weighing scales
- **d** Refrigerant R410A tank (siphon system)
- e Vacuum pump
- **f** Liquid line stop valve
- Gas line stop valve
- A Valve A
- **B** Valve B
- C Valve C
- **2** Open valves C and B.
- Pre-charge refrigerant until the determined additional refrigerant amount is reached or pre-charging is not possible anymore, and then close valves C and
- Do one of the following:

If	Then
The determined additional	Disconnect the manifold from the liquid line.
refrigerant amount is reached	You do not have to perform the "Charging refrigerant (in manual additional refrigerant charge mode)" instructions.



⁽b) CR per type = Allowable capacity connection ratio per indoor unit type


⁽c) Additional restrictions might apply for connection ratio lower than 75% (65~110%). Please refer to the EKEA+EKEXVA manual.

If	Then
Too much refrigerant is charged	Recover refrigerant. Disconnect the manifold from the liquid line.
	You do not have to perform the "Charging refrigerant (in manual additional refrigerant charge mode)" instructions.
The determined additional refrigerant amount is not reached yet	Disconnect the manifold from the liquid line. Continue with the "Charging refrigerant (in manual additional refrigerant charge mode)" instructions.

Charging refrigerant (in manual additional refrigerant charge mode)

The remaining additional refrigerant charge can be charged by operating the outdoor unit by means of the manual additional refrigerant charge mode.

 5 Connect as shown. Make sure valve A is closed.



- a Weighing scales
- **b** Refrigerant R410A tank (siphon system)
- c Vacuum pump
- **d** Refrigerant charge port
- A Valve A



NOTICE

The refrigerant charging port is connected to the piping inside the unit. The unit's internal piping is already factory charged with refrigerant, so be careful when connecting the charge hose.

- 6 Open all outdoor unit stop valves. At this point, valve A must remain closed!
- 7 Take all the precautions mentioned in "7 Configuration" [▶ 66] and "8 Commissioning" [▶ 81] into account.
- 8 Turn on the power of the indoor units and outdoor unit.
- **9** Activate setting [2-20] to start the manual additional refrigerant charge mode. For details, see "7.1.8 Mode 2: field settings" [▶ 72].

Result: The unit will start operation.



INFORMATION

The manual refrigerant charge operation will automatically stop within 30 minutes. If charging is not completed after 30 minutes, perform the additional refrigerant charging operation again.





INFORMATION

- When a malfunction is detected during the procedure (e.g., in case of closed stop valve), a malfunction code will be displayed. In that case, refer to "6.6.5 Error codes when charging refrigerant" [> 56] and solve the malfunction accordingly. Resetting the malfunction can be done by pushing BS3. You can restart the "Charging" instructions.
- Aborting the manual refrigerant charge is possible by pushing BS3. The unit will stop and return to idle condition.
- 10 Open valve A.
- 11 Charge refrigerant until the remaining determined additional refrigerant amount is added, and then close valve A.
- **12** Press BS3 to stop the manual additional refrigerant charge mode.



NOTICE

Make sure to open all stop valves after (pre-) charging the refrigerant. Operating with the stop valves closed will damage the compressor.



NOTICE

After adding the refrigerant, do not forget to close the lid of the refrigerant charging port. The tightening torque for the lid is 11.5 to 13.9 N•m.

6.6.5 Error codes when charging refrigerant



 
INFORMATION

If a malfunction occurs, the error code is displayed on the user interface of the

If a malfunction occurs, close valve A immediately. Confirm the malfunction code and take corresponding action, "11.3 Solving problems based on error codes" [▶ 90].

6.6.6 To fix the fluorinated greenhouse gases label

Fill in the label as follows:



- If a multilingual fluorinated greenhouse gases label is delivered with the unit (see accessories), peel off the applicable language and stick it on top of a.
- Factory refrigerant charge: see unit name plate
- Additional refrigerant amount charged
- Total refrigerant charge
- Quantity of fluorinated greenhouse gases of the total refrigerant charge expressed as tonnes CO₂ equivalent.
- **f** GWP = Global Warming Potential



NOTICE

Applicable legislation on **fluorinated greenhouse gases** requires that the refrigerant charge of the unit is indicated both in weight and CO_2 equivalent.

Formula to calculate the quantity in CO_2 equivalent tonnes: GWP value of the refrigerant × total refrigerant charge [in kg] / 1000

Use the GWP value mentioned on the refrigerant charge label.

2 Fix the label on the inside of the outdoor unit. There is a dedicated place for it on the wiring diagram label.

6.7 Connecting the electrical wiring

6.7.1 About connecting the electrical wiring

Typical workflow

Connecting the electrical wiring typically consists of the following stages:

- 1 Making sure the power supply system complies with the electrical specifications of the units.
- 2 Connecting the electrical wiring to the outdoor unit.
- 3 Connecting the electrical wiring to the indoor units.
- 4 Connecting the main power supply.

Precautions when connecting the electrical wiring



DANGER: RISK OF ELECTROCUTION



WARNING

All field wiring and components MUST be installed by a licensed electrician and MUST comply with the applicable legislation.



WARNING

If NOT factory installed, a main switch or other means for disconnection, having a contact separation in all poles providing full disconnection under overvoltage category III condition, MUST be installed in the fixed wiring.





WARNING

- ONLY use copper wires.
- Make sure the field wiring complies with the national wiring regulations.
- All field wiring MUST be performed in accordance with the wiring diagram supplied with the product.
- NEVER squeeze bundled cables and make sure they do NOT come in contact with the piping and sharp edges. Make sure no external pressure is applied to the terminal connections.
- Make sure to install earth wiring. Do NOT earth the unit to a utility pipe, surge absorber, or telephone earth. Incomplete earth may cause electrical shock.
- Make sure to use a dedicated power circuit. NEVER use a power supply shared by another appliance.
- Make sure to install the required fuses or circuit breakers.
- Make sure to install an earth leakage protector. Failure to do so may cause electrical shock or fire.
- When installing the earth leakage protector, make sure it is compatible with the inverter (resistant to high frequency electric noise) to avoid unnecessary opening of the earth leakage protector.

Install power cables at least 1 meter away from televisions or radios to prevent interference. Depending on the radio waves, a distance of 1 meter may NOT be sufficient.



WARNING

- After finishing the electrical work, confirm that each electrical component and terminal inside the switch box is connected securely.
- Make sure all covers are closed before starting up the unit.



NOTICE

Do NOT operate the unit until the refrigerant piping is complete. Running the unit before the piping is ready will break the compressor.



NOTICE

If the power supply has a missing or wrong N-phase, equipment will break down.



NOTICE

Do NOT install a phase advancing capacitor, because this unit is equipped with an inverter. A phase advancing capacitor will reduce performance and may cause accidents.



NOTICE

NEVER remove a thermistor, sensor, etc., when connecting power wiring and transmission wiring. (If operated without thermistor, sensor, etc., the compressor may break down.)

Field wiring: Overview

Field wiring consists of:

- power supply (including earth),
- Interconnection wiring between communication box and outdoor unit,





NOTICE

- Keep the power line and transmission line apart from each other. Transmission wiring and power supply wiring may cross, but may NOT run parallel.
- In order to avoid any electrical interference, the distance between both wirings should ALWAYS be at least 50 mm.


Transmission wiring

The transmission wiring outside the unit should be wrapped and routed together with the field piping.

Transmission wiring specification and limits ^(a)			
Vinyl cords with 0.75 to 1.25 mm ² sheath or cables (2-core wires)			
Maximum number of branches for unit-to-unit cabling 9			
Maximum wiring length	300 m		
(distance between outdoor and furthest indoor unit)			
Total wiring length	600 m		
(sum of distances between outdoor and all indoor units)			

⁽a) If the total interconnection wiring exceeds these limits, communication errors might occur.

No secondary branchings are allowed after any transmission wire branching.

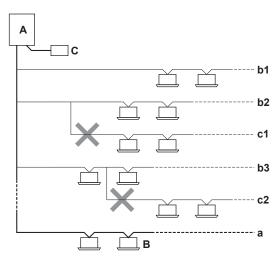

- A Outdoor unit
- **B** Indoor unit
- **C** Central user interface (etc...)
- **a** Main line
- **b1, b2, b3** Branch lines
 - c1, c2 No branch is allowed after branch


Example:



INFORMATION

The following figures are examples and may NOT completely match your system layout.



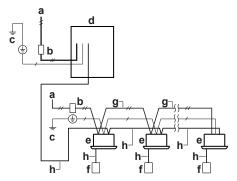


- Field power supply (with earth leakage protector) а
- b Main switch
- Earth connection C
- Outdoor unit
- Indoor unit
- User interface
- Power supply wiring (sheathed cable) (230 V)
- Transmission wiring (sheathed cable) (16 V)
- Power supply 1^{\sim} 50 Hz
- Earth wiring

Guidelines for making knockout holes



Precautions when making knockout holes:

 - Avoid damaging the casing.
- After making the knockout holes, we recommend you remove the burrs and paint the edges and areas around the edges using repair paint to prevent rusting.
- When passing electrical wiring through the knockout holes, wrap the wiring with protective tape to prevent damage.



- Knockout hole
- Burr
- Sealant etc.

Guidelines when connecting the electrical wiring



NOTICE


We recommend using solid (single-core) wires. If stranded wires are used, slightly twist the strands to consolidate the end of the conductor for either direct use in the terminal clamp or insertion in a round crimp-style terminal.

To prepare stranded conductor wire for installation

Method 1: Twisting conductor

 
- Strip insulation (20 mm) from the wires.
- Slightly twist the end of the conductor to create a "solid-like" connection.





Method 2: Using round crimp-style terminal (recommended)

 - 1 Strip insulation from wires and slightly twist the end of each wire.
- 2 Install a round crimp-style terminal on the end of the wire. Place the round crimp-style terminal on the wire up to the covered part and fasten the terminal with the appropriate tool.



Use the following methods for installing wires:

Wire type	Installation method
Single-core wire Or Stranded conductor wire twisted to "solid-like" connection	cb AA' c AA' a
	a Curled wire (single-core or twisted stranded conductor wire) b Screw
	c Flat washer
Stranded conductor wire with round crimp-style terminal	c b a b c x
	a Terminal
	b Screw
	c Flat washer
	✓ Allowed
	× NOT allowed

Tightening torques

Wiring	Screw size	Tightening torque (N•m)
Power supply wiring (power supply + shielded ground)	M5	2.0~3.0
Transmission wiring	M3.5	0.8~0.97




6.7.2 To connect the electrical wiring to the outdoor unit




NOTICE


- Follow the wiring diagram (delivered with the unit, located at the inside of the service cover).
- Make sure the electrical wiring does NOT obstruct proper reattachment of the service cover.
- Remove the service cover. See "6.2.2 To open the outdoor unit" [> 37].
- Strip insulation (20 mm) from the wires.

 

- a Strip wire end to this point
- **b** An excessive strip length may cause electrical shock or leakage
- **3** Connect the transmission wiring as follows:

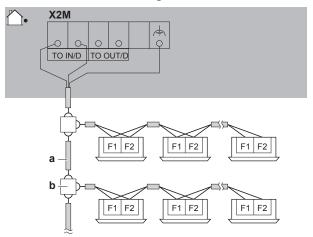


- a Use the conductor of sheathed wire (2 wire) (no polarity)
- **b** Terminal board (field supply)

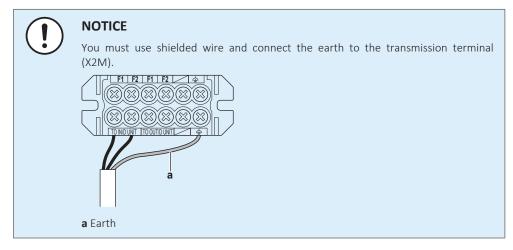


Connect the power supply as follows:



- a Earth leakage circuit breaker
- **b** Fuse
- c Power supply cable
- **5** Fix the cables (power supply and transmission wiring) with cable ties.

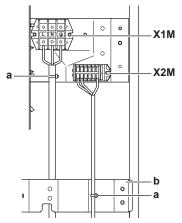


- **a** Cable tie
- **b** Attachment plate
- **X1M** Power supply
- **X2M** Transmission wiring
- **6** Route the wiring through the frame and connect it to it.

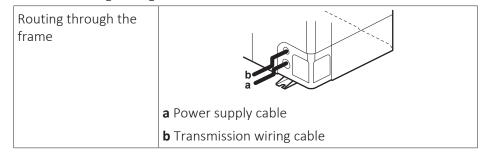

Connecting to the frame

When cables are routed from the unit, a protection sleeve for the conduits (PG insertions) can be inserted at the knockout hole.

 When you do not use a wire conduit, protect the wires with vinyl tubes to prevent the edge of the knockout hole from cutting the wires.



- A Inside of the outdoor unit
- **B** Outside of the outdoor unit
- a Wire
- **b** Bush
- c Nut
- **d** Frame
- **e** Hose



NOTICE

 
Precautions when making knockout holes:

- Avoid damaging the casing and underlying piping.
- After making the knockout holes, we recommend to remove the burrs and paint the edges and areas around the edges using repair paint to prevent rusting.
- When passing electrical wiring through the knockout holes, wrap the wiring with protective tape to prevent damage.
- Reattach the service cover. See "6.8.2 To close the outdoor unit" [▶ 65].
- Connect an earth leakage circuit breaker and fuse to the power supply line.

6.8 Finishing the outdoor unit installation

6.8.1 To finish the interconnection wiring

After installing the interconnection wiring, wrap it along with the onsite refrigerant piping using finishing tape, as shown in the illustration below.




- a Liquid piping
- Gas piping
- **c** Finishing tape
- **d** Interconnection cable (F1/F2)
- **e** Insulation





NOTICE

When closing the outdoor unit cover, make sure that the tightening torque does NOT exceed 4.1 N \bullet m.

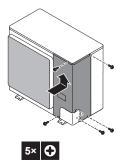



7 Configuration



DANGER: RISK OF ELECTROCUTION



INFORMATION

It is important that all information in this chapter is read sequentially by the installer and that the system is configured as applicable.

In this chapter

7.1	Making	field settings	66
	7.1.1	About making field settings	66
	7.1.2	To access the field setting components	67
	7.1.3	Field setting components	67
	7.1.4	To access mode 1 or 2	68
	7.1.5	To use mode 1	69
	7.1.6	To use mode 2	69
	7.1.7	Mode 1 (and default situation): Monitoring settings	70
	7.1.8	Mode 2: field settings	72
	7.1.9	To connect the PC configurator to the outdoor unit	75
7.2	Energy	saving and optimum operation	75
	7.2.1	Available main operation methods	75
	7.2.2	Available comfort settings	77
	7.2.3	Example: Automatic mode during cooling	78
	7.2.4	Example: Automatic mode during heating	79

7.1 Making field settings

7.1.1 About making field settings

To configure the heat pump system, you must give input to the outdoor unit's main PCB (A1P). This involves the following field setting components:

- Push buttons to give input to the PCB
- A display to read feedback from the PCB

Field settings are defined by their mode, setting and value. Example: [2-8]=4.

PC configurator

For VRV IV-S heat pump system it is alternatively possible to make several commissioning field settings through a personal computer interface (for this, option EKPCCAB* is required). The installer can prepare the configuration (off-site) on PC and afterwards upload the configuration to the system.

See also: "7.1.9 To connect the PC configurator to the outdoor unit" [▶ 75].

Mode 1 and 2

Mode	Description
Mode 1 (monitoring settings)	Mode 1 can be used to monitor the current situation of the outdoor unit. Some field setting contents can be monitored as well.



Mode	Description
Mode 2 (field settings)	Mode 2 is used to change the field settings of the system. Consulting the current field setting value and changing the current field setting value is possible.
	In general, normal operation can be resumed without special intervention after changing field settings.
	Some field settings are used for special operation (e.g., one time operation, recovery/vacuuming setting, manual adding refrigerant setting, etc.). In such a case, it is required to abort the special operation before normal operation can restart. It will be indicated in below explanations.

7.1.2 To access the field setting components

See "6.2.2 To open the outdoor unit" [▶ 37].

 
7.1.3 Field setting components



NOTICE

The DIP switch (DS1 on A1P) is not used. Do NOT change the factory setting.

The components to make field settings are as follows:




BS1~BS5 Push buttons **H1P~H7P** 7-LEDs display

LED for indication during initialisation ON (☼) OFF (●) Flashing (☼)

Push buttons

 Use the push buttons to make the field settings. Operate the push buttons with an insulated stick (such as a closed ball-point pen) to avoid touching live parts.



BS1 MODE: For changing the set mode

BS2 SET: For field settingBS3 RETURN: For field setting

BS4 TEST: For test operation

RESET: For resetting the address when the wiring is changed or when an additional indoor unit is installed

7-LEDs display

The display gives feedback about the field settings, which are defined as [Mode-Setting]=Value.

H1P Shows the mode

H2P~H7P Shows the settings and values, represented in binary codeH8P NOT used for field settings, but used during initialisation

Example:



[H1P- 32 + 16 + 8 + 4 + 2 + 1] 	Description
• • • • •	Default situation
(H1P OFF)	
★ • ☆ • • •	Mode 1
(H1P flashing)	
	Mode 2
(H1P ON)	
	Setting 8
(H2P~H7P = binary 8)	(in mode 2)
	Value 4
(H2P~H7P = binary 4)	(in mode 2)

7.1.4 To access mode 1 or 2

After the units are turned ON, the display goes to its default situation. From there, you can access mode 1 and mode 2.


Initialisation: default situation



NOTICE

Turn ON the power 6 hours before operation in order to have power running to the crankcase heater and to protect the compressor.

Turn on the power supply of the outdoor unit and all indoor units. When the communication between indoor units and outdoor unit is established and normal, the display indication state will be as below (default situation when shipped from factory).

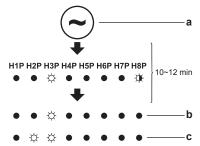


- Power ON
- Default situation
- c LED indication when there is a malfunction

If the default situation is not displayed after 10~12 minutes, check the malfunction code on the indoor unit user interface. Solve the malfunction code accordingly. First, check the communication wiring.

Switching between modes

 Use BS1 to switch between the default situation, mode 1 and mode 2.





- Default situation (H1P OFF)
- **b** Mode 1 (H1P flashing)
- c Mode 2 (H1P ON)
- BS1 Press BS1.
- **BS1 [5 s]** Press BS1 for at least 5 s.



INFORMATION

If you get confused in the middle of the process, press BS1 to return to the default situation.

7.1.5 To use mode 1

In mode 1 (and in default situation) you can read out some information.

Example: 7-LEDs display – Default situation

You can read out the status of low noise operation as follows:

#	Action	Button/display
1	Make sure the LEDs are showing the default situation.	H1P H2P H3P H4P H5P H6P H7P
	the default situation.	(H1P OFF)
2	Check the status of LED H6P.	• • • • •
		H6P OFF: Unit is currently not operating under low noise restrictions.
		• • ‡ • • ‡ •
		H6P ON: Unit is currently operating under low noise restrictions.

Example: 7-LEDs display - Mode 1

You can read out setting [1-5] (= the total number of connected indoor units) as follows:

#	Action	Button/display
1	Start from the default situation.	H1P H2P H3P H4P H5P H6P H7P
2	Select mode 1.	BS1 [1×]
3	Select setting 5. ("X×" depends on the setting that you want to select.)	# ● ● ● Φ ● Φ (= binary 5)
4	Display the value of setting 5. (there are 8 indoor units connected)	# ● ● ★ ● ● ● (= binary 8)
5	Quit mode 1.	BS1 [1×]

7.1.6 To use mode 2

In mode 2 you can make field settings to configure the system.



Example: 7-LEDs display - Mode 2

You can change the value of setting [2-8] (= T_e target temperature during cooling operation) to 4 (= 8°C) as follows:

#	Action	Button/display
1	Start from the default situation. H1P H2P H3P H4P H5P H6P H7P D D D D D D D D D D D D D D D D D D	
2	Select mode 2.	BS1 [5 s]
3	Select setting 8. ("X×" depends on the setting that	BS2 [X×]
	you want to select.)	(= binary 8)
4	Select value 4 (= 8°C).	a↓BS3 [1×]
	a: Display the current value.	b BS2 [X×]
	b : Change to 4. ("X×" depends on the current value, and the value	c BS3 [1×]
	that you want to select.)	
	c : Enter the value in the system.	\$ • • • • •
	d : Confirm. The system starts operating according to the setting.	
5	Quit mode 2.	BS1 [1×]

7.1.7 Mode 1 (and default situation): Monitoring settings

In mode 1 (and in default situation) you can read out some information.

7-LEDs display – Default situation (H1P OFF)

You can read out the following information:

	Value / Description	
Н6Р	Shows the status of low noise operation.	
	OFF	• • • • •
		Unit is currently not operating under low noise restrictions.
	ON	• • • • • •
		Unit is currently operating under low noise restrictions.
	Low noise operation reduces the sound generated by the unit comp to nominal operating conditions. Low noise operation can be set in mode 2. There are two methods to activate low noise operation of the outdoor unit system.	
	night t	est method is to enable an automatic low noise operation during time by field setting. The unit will operate at the selected low level during the selected time frames.
		econd method is to enable low noise operation based on an al input. For this operation an optional accessory is required.



	Value / Description		
Н7Р	Shows the status of power consumption limitation operation.		
	OFF	• • • • • •	
		Unit is currently not operating under power consumption limitations.	
	ON		
		Unit is currently operating under power consumption limitation.	
	Power consumption limitation reduces the power consumption of the unit compared to nominal operating conditions.		
	Power consumption limitation can be set in mode 2. There are t methods to activate power consumption limitation of the outdo system.		
	by fiel	st method is to enable a forced power consumption limitation d setting. The unit will always operate at the selected power mption limitation.	
		cond method is to enable power consumption limitation based external input. For this operation an optional accessory is ed.	

7-LEDs display – Mode 1 (H1P flashing)

You can read out the following information:

Setting (H1P H2P H3P H4P H5P H6P H7P)	Value / Description
[1-5] * • • • * • * Shows the total number of connected indoor units.	It can be convenient to check if the total number of indoor units which are installed match the total number of indoor units which are recognised by the system. In case there is a mismatch, it is advised to check the communication wiring path between outdoor and indoor units (F1/F2 communication line).
Shows the latest malfunction code. [1-15] * ・ * * * * * * * * * * * * * * * * *	When the latest malfunction codes were reset by accident on an indoor unit user interface, they can be checked again through this monitoring settings. For the content or reason behind the malfunction code see "11.3 Solving problems based on error codes" [> 90], where most relevant malfunction codes are explained. Detailed information about malfunction codes can be consulted in the service manual of this unit. To obtain more detailed information about the malfunction code, press BS2 up to 3 times.

7.1.8 Mode 2: field settings

In mode 2 you can make field settings to configure the system. The LEDs give a binary representation of the setting/value number.

For more information and advice about the impact of settings [2-8], [2-9], [2-41] and [2-42], see "7.2 Energy saving and optimum operation" [▶ 75].

Setting	Value	
н1р н2р н3р н4р н5р н6р н7р (= binary)	H1P H2P H3P H4P H5P H6P H7P	Description
[2-8] 🌣 • • • • •	☆ • • • • ₩ •	6°C
$T_{\rm e}$ target temperature during cooling operation.	☆ • • • • • •	Auto
	(default)	
	☆ • • ★ • •	8°C
	☆ • • • ★ • ★	9°C
	☼●●●排排●	10°C
	☆ ● ● ◆ ★ ☆	11°C
[2-9] 🌣 • • 🌣 • • 🌣	☼ • • • • ☼	Auto
T_c target temperature during heating operation.	(default)	
	☆ • • • ★ •	46°C
	☆ • • • ☆ • •	43°C
[2-12] 🌣 • • 🌣 🜣 • •	☆ • • • • •	Deactivated.
Enable the low noise function and/or power	(default)	
consumption limitation via external control adaptor (DTA104A61/62).	☆ • • • • * •	Activated.
If the system needs to be running under low noise operation or under power consumption limitation conditions when an external signal is sent to the unit, this setting should be changed. This setting will only be effective when the optional external control adaptor (DTA104A61/62) is installed in the indoor unit.		
[2-18] 🌣 🔸 🌣 • • 🜣 •	☆ • • • • ★	Deactivated.
Fan high static pressure setting.	(default)	
In order to increase the static pressure the outdoor unit fan is delivering, this setting should be activated. For details about this setting, see technical specifications.	☆ • • • ₩ •	Activated.




Setting	Value		
н1р н2р н3р н4р н5р н6р н7р (= binary)	H1P H2P H3P H4P H5P H6P H7P		
[2-20] 🌣 • 🌣 • 🌣 •	☆ • • • • 	De	activated.
Manual additional refrigerant charge.	(default)		
In order to add the additional refrigerant charge	☆ • • • • ★ •	А	ctivated.
amount in a manual way (without automatic refrigerant charging functionality), following setting should be applied.		the required ac amount is charge function was no BS3, the unit we after 30 minute not sufficient to refrigerant amo	nual additional rge operation (when Iditional refrigerant ged), push BS3. If this ot aborted by pushing ill stop its operation es. If 30 minutes was o add the needed ount, the function can by changing the field
[2-21] ☆ ● ☆ ● ☆ ● ☆	♦ • • • • 	De	activated.
Refrigerant recovery/vacuuming mode.	(default)		
In order to achieve a free pathway to reclaim refrigerant out of the system or to remove residual substances or to vacuum the system it is necessary to apply a setting which will open required valves in the refrigerant circuit so the reclaim of refrigerant or vacuuming process can be done properly.	☆ • • • *	To stop the refi vacuuming mod not pushed, the	ctivated. rigerant recovery/ de, push BS1. If BS1 is a system will remain ecovery/vacuuming
[2-22] ☆ ● ☆ ● ☆ ❖ ●	* • • • • •	De	activated
Automatic low noise setting and level during night	(default)		
time.	☆ • • • • *	Level 1	Level 3 <level< td=""></level<>
By changing this setting, you activate the automatic low noise operation function of the unit and define	☆ • • • • ★ •	Level 2	2 <level 1<="" td=""></level>
the level of operation. Depending on the chosen level, the noise level will be lowered. The start and stop moments for this function are defined under setting [2-26] and [2-27].	☆ • • • • • •	Level 3	
[2-25] ☆ ● ☆ ☆ ● ● ☆	* • • • • *	Level 1	Level 3 <level< td=""></level<>
Low noise operation level via the external control adaptor.		Level 2	2 <level 1<="" td=""></level>
If the system needs to be running under low noise operation conditions when an external signal is sent to the unit, this setting defines the level of low noise that will be applied.		Level 3	
This setting will only be effective when the optional external control adaptor (DTA104A61/62) is installed and the setting [2-12] was activated.			
[2-26] ☆ ● ☆ ☆ ● ☆ ●	♦ • • • • *	20h00	
Low noise operation start time.	☆ • • • • •	22h00	
This setting is used in conjunction with setting [2-22].	(default)		
	☆ • • • * • •		24h00

Setting	Value	
н1Р н2Р н3Р н4Р н5Р н6Р н7Р (= binary)	H1P H2P H3P H4P H5P H6P H7P	Description
[2-27] ☆ ● ☆ ☆ ● ☆ ☆	☆ • • • • ₩	6h00
Low noise operation stop time.	☆ • • • • ★ •	7h00
This setting is used in conjunction with setting [2-22].	∴ • • • • • • • • • • • • • • • • • • •	8h00
[2-30] 🌣 🔸 🌣 🌣 🌣 🔸	☆ • • • • • ★	60%
Power consumption limitation level (step 1) via the external control adaptor (DTA104A61/62).		70%
If the system needs to be running under power consumption limitation conditions when an external signal is sent to the unit, this setting defines the level power consumption limitation that will be applied for step 1. The level is according to the table.	* • • * •	80%
[2-31] 🌣 🔸 🌣 🌣 🌣 🌣	☆ • • • • ★	30%
Power consumption limitation level (step 2) via the external control adaptor (DTA104A61/62).		40%
If the system needs to be running under power consumption limitation conditions when an external signal is sent to the unit, this setting defines the level power consumption limitation that will be applied for step 2. The level is according to the table.	* • • • * •	50%
[2-32] 🌣 🌣 • • • •	☆ • • • • ☆	Function not active.
Forced, all time, power consumption limitation operation (no external control adaptor is required to perform power consumption limitation).	(default)	Follows [2-30] setting.
If the system always needs to be running under power consumption limitation conditions, this setting activates and defines the level power consumption limitation that will be applied continuously. The level is according to the table.		Follows [2-31] setting.
[2-38] 🌣 🜣 • • 🌣 🌣 •	☆ • • • • •	VRV DX indoor units installed
Type of indoor units	(default)	
After changing this setting, you have to power OFF the system, wait for 20 s, and then power ON again. If not, the setting will not be processed and malfunction codes might occur.	* • • • *	RA DX indoor units installed
[2-41] ☆ ☆ ● ☆ ● ◆	\$ • • • • •	Eco
Cooling comfort setting.	♦ • • • • ♦	Mild
This setting is used in conjunction with setting [2-8].	(default)	
	♦•••	Quick
	☆ • • • • •	Powerful



Setting	Value	
н1Р н2Р н3Р н4Р н5Р н6Р н7Р (= binary)	H1P H2P H3P H4P H5P H6P H7P	Description
[2-42] ☆ ☆ ● ☆ ● ☆ ●	\$ • • • • •	Eco
Heating comfort setting.	☆ • • • • ★	Mild
This setting is used in conjunction with setting [2-9].	(default)	
	☆ • • • • ₩ •	Quick
		Powerful

7.1.9 To connect the PC configurator to the outdoor unit

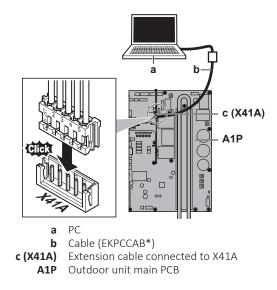

7.2 Energy saving and optimum operation

This heat pump system is equipped with advanced energy saving functionality. Depending on the priority, emphasis can be put on energy saving or comfort level. Several parameters can be selected, resulting in the optimal balance between energy consumption and comfort for the particular application.

Several patterns are available and explained below. Modify the parameters to the needs of your building and to realize the best balance between energy consumption and comfort.

No matter which control is selected, variations on the behaviour of the system are still possible due to protection controls to keep the unit operating under reliable conditions. The intentional target, however, is fixed and will be used to obtain the best balance between energy consumption and comfort, depending on the application type.

7.2.1 Available main operation methods

Basic

The refrigerant temperature is fixed independent from the situation.

To activate this in	Change
Cooling operation	[2-8]=2
Heating operation	[2-9]=2



Automatic

The refrigerant temperature is set depending on the outdoor ambient conditions. As such adjusting the refrigerant temperature to match the required load (which is also related to the outdoor ambient conditions).

E.g., when your system is operating in cooling, you do not need as much cooling under low outdoor ambient temperatures (e.g., 25°C) as under high outdoor ambient temperatures (e.g., 35°C). Using this idea, the system automatically starts increasing its refrigerant temperature, automatically reducing the delivered capacity and increasing the system's efficiency.

E.g., when your system is operating in heating, you do not need as much heating under high outdoor ambient temperatures (e.g., 15°C) as under low outdoor ambient temperatures (e.g., -5°C). Using this idea, the system automatically starts decreasing its refrigerant temperature, automatically reducing the delivered capacity and increasing the system's efficiency.

To activate this in	Change
Cooling operation	[2-8]=3 (default)
Heating operation	[2-9]=1 (default)

Hi-sensible/economic (cooling/heating)

The refrigerant temperature is set higher/lower (cooling/heating) compared to basic operation. The focus under high sensible mode is comfort feeling for the customer.

The selection method of indoor units is important and has to be considered as the available capacity is not the same as under basic operation.

For details concerning to Hi-sensible applications, please contact your dealer.

To activate this in	Change
Cooling operation	[2-8] to the appropriate value, matching the requirements of the pre-designed system containing a high sensible solution.
Heating operation	[2-9] to the appropriate value, matching the requirements of the pre-designed system containing a high sensible solution.

[2-8]	T _e target (°C)
4	8
5	9
6	10
7	11

[2-9]	T _c target (°C)
4	43



7.2.2 Available comfort settings

For each of above modes a comfort level can be selected. The comfort level is related to the timing and the effort (energy consumption) which is put in achieving a certain room temperature by temporarily changing the refrigerant temperature to different values in order to achieve requested conditions more quickly.

Powerful

Overshoot (during heating operation) or undershoot (during cooling operation) is allowed compared to the requested refrigerant temperature, in order to achieve the required room temperature very fast. The overshoot is allowed from the start up moment.

When the request from the indoor units becomes more moderate, the system will eventually go to the steady state condition which is defined by the operation method above.

To activate this in	Change
Cooling operation	[2-41]=3.
	This setting is used in conjunction with setting [2-8].
Heating operation	[2-42]=3.
	This setting is used in conjunction with setting [2-9]

Quick

Overshoot (during heating operation) or undershoot (during cooling operation) is allowed compared to the requested refrigerant temperature, in order to achieve the required room temperature very fast. The overshoot is allowed from the start up moment.

When the request from the indoor units becomes more moderate, the system will eventually go to the steady state condition which is defined by the operation method above.

To activate this in	Change
Cooling operation	[2-41]=2.
	This setting is used in conjunction with setting [2-8].
Heating operation	[2-42]=2.
	This setting is used in conjunction with setting [2-9].

Mild

Overshoot (during heating operation) or undershoot (during cooling operation) is allowed compared to the requested refrigerant temperature, in order to achieve the required room temperature very fast. The overshoot is not allowed from the start up moment. The start up occurs under the condition which is defined by the operation mode above.

When the request from the indoor units becomes more moderate, the system will eventually go to the steady state condition which is defined by the operation method above.

Note: The start up condition is different from the powerful and quick comfort setting.




To activate this in	Change
Cooling operation	[2-41]=1.
	This setting is used in conjunction with setting [2-8].
Heating operation	[2-42]=1.
	This setting is used in conjunction with setting [2-9].

Eco

The original refrigerant temperature target, which is defined by the operation method (see above) is kept without any correction, unless for protection control.

To activate this in	Change
Cooling operation	[2-41]=0.
	This setting is used in conjunction with setting [2-8].
Heating operation	[2-42]=0.
	This setting is used in conjunction with setting [2-9].


7.2.3 Example: Automatic mode during cooling

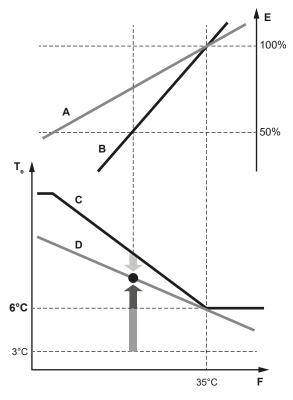

- A Actual load curve
- Virtual load curve (initial capacity automatic mode)
- Virtual target value (initial evaporation temperature value automatic mode)
- Required evaporation temperature value
- Load factor
- Outside air temperature
- Evaporating temperature
- Quick
- Powerful
- Mild




Room temperature evolution:

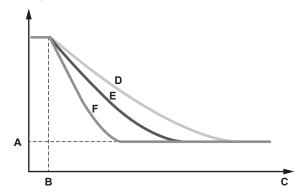

- A Indoor unit set temperature
- **B** Operation start
- **C** Operating time
- **D** Mild
- **E** Quick
- **F** Powerful


7.2.4 Example: Automatic mode during heating

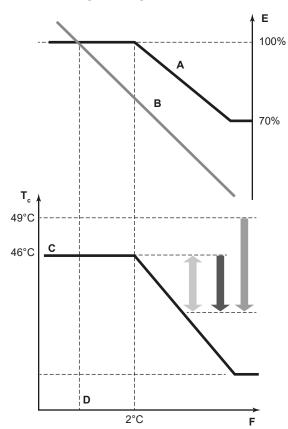

- A Virtual load curve (default automatic mode peak capacity)
- **B** Load curve
- **C** Virtual target value (initial condensation temperature value automatic mode)
- **D** Design temperature
- **E** Load factor
- F Outside air temperature
- T_c Condensing temperature
- Quick
 - Powerful
- Mild



Room temperature evolution:

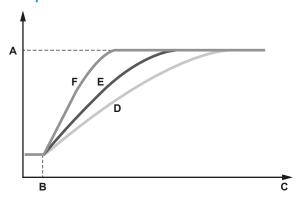

- A Indoor unit set temperature
- Operation start
- **C** Operating time
- **D** Mild
- **E** Quick
- **F** Powerful



8 Commissioning

In this chapter

8.1	Overvie	ew: Commissioning	8:
8.2	Precaut	tions when commissioning	8:
8.3	Checkli	st before commissioning	87
8.4	Checkli	st during commissioning	83
	8.4.1	About the system test run	83
	8.4.2	To perform a test run (7-LEDs display)	83
	8.4.3	Correcting after abnormal completion of the test run	84

8.1 Overview: Commissioning

After installation and once the field settings are defined, the installer is obliged to verify correct operation. Therefore a test run MUST be performed according to the procedures described below.

This chapter describes what you have to do and know to commission the system after it is configured.

Commissioning typically consists of the following stages:

- 1 Checking the "Checklist before commissioning".
- 2 Performing a test run.
- 3 If necessary, correcting errors after abnormal completion of the test run.
- 4 Operating the system.

8.2 Precautions when commissioning



DANGER: RISK OF ELECTROCUTION



DANGER: RISK OF BURNING/SCALDING



CAUTION

Do NOT perform the test operation while working on the indoor units.

When performing the test operation, NOT ONLY the outdoor unit, but the connected indoor unit will operate as well. Working on an indoor unit while performing a test operation is dangerous.



CAUTION

Do NOT insert fingers, rods or other objects into the air inlet or outlet. Do NOT remove the fan guard. When the fan is rotating at high speed, it will cause injury.



INFORMATION

During the first running period of the unit, the required power may be higher than stated on the nameplate of the unit. This phenomenon is caused by the compressor, that needs a continuous run time of 50 hours before reaching smooth operation and stable power consumption.





NOTICE

Turn ON the power 6 hours before operation in order to have power running to the crankcase heater and to protect the compressor.

During test operation, the outdoor unit and the indoor units will start up. Make sure that the preparations of all indoor units are finished (field piping, electrical wiring, air purge, ...). See installation manual of the indoor units for details.

8.3 Checklist before commissioning

- 1 After the installation of the unit, check the items listed below.
- Close the unit.
- Power up the unit.

You have read the complete installation and operation instructions described in the installer and user reference guide .
Installation
Check that the unit is properly installed, to avoid abnormal noises and vibrations when starting up the unit.
Field wiring
Be sure that the field wiring has been carried out according to the instructions described in the chapter "6.7 Connecting the electrical wiring" [> 57], according to the wiring diagrams and according to the applicable legislation.
Power supply voltage
Check the power supply voltage on the local supply panel. The voltage MUST correspond to the voltage on the nameplate of the unit.
Earth wiring
Be sure that the earth wires have been connected properly and that the earth terminals are tightened.
Insulation test of the main power circuit
Using a megatester for 500 V, check that the insulation resistance of 2 M Ω or more is attained by applying a voltage of 500 V DC between power terminals and earth. NEVER use the megatester for the interconnection wiring.
Fuses, circuit breakers, or protection devices
Check that the fuses, circuit breakers, or the locally installed protection devices are of the size and type specified in the chapter "5.3.2 Safety device requirements" [> 35]. Be sure that neither a fuse nor a protection device has been bypassed.
Internal wiring
Visually check the switch box and the inside of the unit for loose connections or damaged electrical components.
Pipe size and pipe insulation
Be sure that correct pipe sizes are installed and that the insulation work is properly executed.
Stop valves
Be sure that the stop valves are open on both liquid and gas side.
Damaged equipment
Check the inside of the unit for damaged components or squeezed pipes.



Refrigerant leak					
Check the inside of the unit on refrigerant leakage. If there is a refrigerant leak, try to repair the leak. If the repair is unsuccessful, call your local dealer. Do not touch any refrigerant which has leaked out from refrigerant piping connections. This may result in frostbite.					
Oil leak					
Check the compressor for oil leakage. If there is an oil leak, try to repair the leak. If the repairing is unsuccessful, call your local dealer.					
Air inlet/outlet					
Check that the air inlet and outlet of the unit is NOT obstructed by paper sheets, cardboard, or any other material.					
Additional refrigerant charge					
The amount of refrigerant to be added to the unit shall be written on the included "Added refrigerant" plate and attached to the rear side of the front cover.					
Installation date and field setting					
Be sure to keep a record of the installation date on the sticker on the rear of the front panel according to EN60335-2-40 and keep record of the contents of the field setting(s).					

8.4 Checklist during commissioning

To perform a **test run**.

8.4.1 About the system test run



NOTICE

Make sure to carry out the test run after the first installation. Otherwise, the malfunction code U3 will be displayed on the user interface and normal operation or individual indoor unit test run cannot be carried out.

The procedure below describes the test operation of the complete system. This operation checks and judges following items:

- Check of wrong wiring (communication check with indoor units).
- Check of the stop valves opening.
- Judgement of piping length.

Abnormalities on indoor units cannot be checked for each unit separately. After the test operation is finished, check the indoor units one by one by performing a normal operation using the user interface. Refer to the indoor unit installation manual for more details concerning the individual test run.



INFORMATION

- It may take 10 minutes to achieve a uniform refrigerant state before the compressor starts.
- During the test operation, the refrigerant running sound or the magnetic sound of a solenoid valve may become loud and the display indication may change. These are not malfunctions.

8.4.2 To perform a test run (7-LEDs display)

1 Make sure all field settings you want are set; see "7.1 Making field settings" [▶ 66].



Turn ON the power to the outdoor unit and the connected indoor units.



NOTICE

Turn ON the power 6 hours before operation in order to have power running to the crankcase heater and to protect the compressor.

3 Make sure the default (idle) situation is existing (H1P is OFF); see "7.1.4 To access mode 1 or 2" [▶ 68]. Push BS4 for 5 seconds or more. The unit will start test operation.

Result: The test operation is automatically carried out, the outdoor unit H2P flashes and the indication "Test operation" and "Under centralised control" will display on the user interface of indoor units.

Steps during the automatic system test run procedure:

Step	Description
• ₩ • • • ₩	Control before start up (pressure equalisation)
• * • • • •	Cooling start up control
	Cooling stable condition
• * • • * • •	Communication check
	Stop valve check
	Pipe length check
• * • * • • *	Pump down operation
• ₩ • ☆ • ☆ •	Unit stop



INFORMATION

During the test operation, it is not possible to stop the unit operation from a user interface. To abort the operation, press BS3. The unit will stop after ±30 seconds.

Check the test operation results on the outdoor unit 7-LEDs display.

Completion	Description						
Normal completion							
Abnormal completion	Refer to "8.4.3 Correcting after abnormal completion of the test run" [> 84] to take actions for correcting the abnormality. When the test operation is fully completed, normal operation will be possible after 5 minutes.						

8.4.3 Correcting after abnormal completion of the test run

The test operation is only completed if there is no malfunction code displayed. In case of a displayed malfunction code, perform correcting actions as explained in the malfunction code table. Carry out the test operation again and confirm that the abnormality is properly corrected.



INFORMATION

If a malfunction occurs, the error code is displayed on the user interface of the indoor unit.





INFORMATION

Refer to the installation manual of the indoor unit for detailed malfunction codes related to indoor units.



9 Hand-over to the user

Once the test run is finished and the unit operates properly, make sure the following is clear for the user:

- Make sure that the user has the printed documentation and ask him/her to keep it for future reference. Inform the user that he can find the complete documentation at the URL mentioned earlier in this manual.
- Explain the user how to properly operate the system and what to do in case of problems.
- Show the user what to do for the maintenance of the unit.



10 Maintenance and service



NOTICE

Maintenance MUST be done by an authorised installer or service agent.

We recommend performing maintenance at least once a year. However, applicable legislation might require shorter maintenance intervals.



NOTICE

Applicable legislation on **fluorinated greenhouse gases** requires that the refrigerant charge of the unit is indicated both in weight and CO_2 equivalent.

Formula to calculate the quantity in CO_2 equivalent tonnes: GWP value of the refrigerant × total refrigerant charge [in kg] / 1000

In this chapter

10.1	Maintenance safety precautions	8
	10.1.1 To prevent electrical hazards	8
10.2	Checklist for yearly maintenance of the outdoor unit	8
10.3	About service mode operation	8
	10.3.1 To use vacuum mode	8
	10.3.2 To recover refrigerant	8

10.1 Maintenance safety precautions



DANGER: RISK OF ELECTROCUTION



DANGER: RISK OF BURNING/SCALDING



NOTICE: Risk of electrostatic discharge


Before performing any maintenance or service work, touch a metal part of the unit in order to eliminate static electricity and to protect the PCB.

10.1.1 To prevent electrical hazards

When performing service to inverter equipment:

- 1 Do NOT perform electrical work for 10 minutes after turning off the power supply.
- 2 Measure the voltage between terminals on the terminal block for power supply with a tester and confirm that the power supply is shut off. In addition, measure points as shown in the figure, with a tester and confirm that the voltage of the capacitor in the main circuit is less than 50 V DC. If the voltage measured is still higher than 50 V DC, discharge the capacitors in a safe manner by using a dedicated capacitor discharge pen to avoid possibility of sparking.



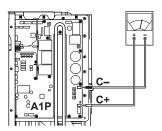

- To prevent damaging the PCB, touch a non-coated metal part to eliminate static electricity before pulling out or plugging in connectors.
- Pull out junction connectors for the fan motors in the outdoor unit before starting service operation on the inverter equipment. Be careful NOT to touch the live parts. (If a fan rotates due to strong wind, it may store electricity in the capacitor or in the main circuit and cause electrical shock.)

Junction connector X106A for M1F

5 After the service is finished, plug the junction connector back in. Otherwise the malfunction code £7 will be displayed and normal operation will NOT be performed.

For details refer to the wiring diagram labelled on the back of the service cover.

Pay attention to the fan. It is dangerous to inspect the unit while the fan is running. Make sure to turn off the main switch and to remove the fuses from the control circuit located in the outdoor unit.

10.2 Checklist for yearly maintenance of the outdoor unit

Check the following at least once a year:

Heat exchanger

The heat exchanger of the outdoor unit can get blocked up due to dust, dirt, leaves, etc. It is recommended to clean the heat exchanger yearly. A blocked heat exchanger can lead to too low pressure or too high pressure leading to worse performance.

10.3 About service mode operation

Refrigerant recovery operation/vacuuming operation is possible by applying setting [2-21]. Refer to "7.1 Making field settings" [> 66] for details how to set mode 2.

When vacuuming/recovery mode is used, check very carefully what should be vacuumed/recovered before starting. See installation manual of the indoor unit for more information about vacuuming and recovery.

10.3.1 To use vacuum mode

1 When the unit is at standstill, activate setting [2-21] to start vacuuming mode.

Result: When confirmed, the indoor and outdoor unit expansion valves will fully open. At that moment H1P lights and the user interface of all indoor units indicate TEST (test operation) and Ex (external control) and the operation will be prohibited.

2 Evacuate the system with a vacuum pump.



3 Press BS1 to stop vacuuming mode.

10.3.2 To recover refrigerant

This should be done with a refrigerant recovery unit. Follow the same procedure as for vacuuming method.



DANGER: RISK OF EXPLOSION

Pump down – Refrigerant leakage. If you want to pump down the system, and there is a leak in the refrigerant circuit:

- Do NOT use the unit's automatic pump down function, with which you can collect all refrigerant from the system into the outdoor unit. Possible consequence: Selfcombustion and explosion of the compressor because of air going into the operating compressor.
- Use a separate recovery system so that the unit's compressor does NOT have to operate.



NOTICE

Make sure to NOT recover any oil while recovering refrigerant. **Example:** By using an oil separator.



11 Troubleshooting

In this chapter

11.1	Overview: Troubleshooting	90
11.2	Precautions when troubleshooting	90
11.3	Solving problems based on error codes	90
	11.3.1 Error codes: Overview	91

11.1 Overview: Troubleshooting

Before troubleshooting

Carry out a thorough visual inspection of the unit and look for obvious defects such as loose connections or defective wiring.

11.2 Precautions when troubleshooting



DANGER: RISK OF ELECTROCUTION



DANGER: RISK OF BURNING/SCALDING



WARNING

- When carrying out an inspection on the switch box of the unit, ALWAYS make sure that the unit is disconnected from the mains. Turn off the respective circuit breaker.
- When a safety device was activated, stop the unit and find out why the safety device was activated before resetting it. NEVER shunt safety devices or change their values to a value other than the factory default setting. If you are unable to find the cause of the problem, call your dealer.



WARNING

Prevent hazards due to inadvertent resetting of the thermal cut-out: power to this appliance MUST NOT be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly turned ON and OFF by the utility.

11.3 Solving problems based on error codes

In case of a displayed malfunction code, perform correcting actions as explained in the malfunction code table.

After correcting the abnormality, press BS3 to reset the malfunction code and retry operation.



INFORMATION

If a malfunction occurs, the error code is displayed on the user interface of the indoor unit.





INFORMATION

If a malfunction occurs, the error code is displayed on the outdoor unit's 7-segments display and on the user interface of the indoor unit.

11.3.1 Error codes: Overview

Main code	Cause	Solution					
E3	 The stop valve of an outdoor unit is left closed. Refrigerant overcharge 	 Open the stop valve on both the gas and liquid side. Recalculate the required amount of refrigerant from the piping length and correct the refrigerant charge level by recovering any excessive refrigerant with a refrigerant recovery machine. 					
EH	The stop valve of an outdoor unit is left closed.Insufficient refrigerant	 Open the stop valve on both the gas and liquid side. Check if the additional refrigerant charge has been finished correctly. Recalculate the required amount of refrigerant from the piping length and add an adequate amount of refrigerant. 					
E9	Electronic expansion valve malfunction (Y1E) - A1P (X21A) (Y3E) - A1P (X22A)	Check connection on PCB or actuator.					
F3	 The stop valve of an outdoor unit is left closed. Insufficient refrigerant 	 Open the stop valve on both the gas and liquid side. Check if the additional refrigerant charge has been finished correctly. Recalculate the required amount of refrigerant from the piping length and add an adequate amount of refrigerant. 					
F5	Refrigerant overcharge	Recalculate the required amount of refrigerant from the piping length and correct the refrigerant charge level by recovering any excessive refrigerant with a refrigerant recovery machine.					
РН	Ambient temperature sensor malfunction (R1T) - A1P (X11A)	Check connection on PCB or actuator.					
J3	Discharge temperature sensor malfunction (R2T): open circuit / short circuit - A1P (X12A)	Check connection on PCB or actuator.					
JS	Suction temperature sensor malfunction (R3T) - A1P (X12A) (R5T) - A1P (X12A)	Check connection on PCB or actuator.					
J5	Liquid temperature sensor (coil) malfunction (R4T) - A1P (X12A)	Check connection on PCB or actuator.					
רנ	Liquid temperature sensor (after subcool HE) malfunction (R7T) - A1P (X13A)	Check connection on PCB or actuator.					

11 | Troubleshooting

Main code	Cause	Solution						
<i>P</i> L	Gas temperature sensor (after subcool HE) malfunction (R6T) - A1P (X13A)	Check connection on PCB or actuator.						
JR	High pressure sensor malfunction (S1NPH): open circuit / short circuit - A1P (X17A)	Check connection on PCB or actuator.						
JE	Low pressure sensor malfunction (S1NPL): open circuit / short circuit - A1P (X18A)	Check connection on PCB or actuator.						
LE	Transmission outdoor unit - inverter: INV1 / FAN1 transmission trouble	Check connection.						
P I	INV1 unbalanced power supply voltage	Check if power supply is within range.						
U2	Insufficient supply voltage	Check if the supply voltage is supplied properly.						
из	Malfunction code: System test run not yet executed (system operation not possible)	Execute system test run.						
		Check if the power wiring for the outdoor unit is connected correctly.						
רט	Faulty wiring to Q1/Q2	Check Q1/Q2 wiring.						
υя	System mismatch. Wrong type of indoor units combined (R410A, R407C, RA, etc) Indoor unit malfunction	Check if other indoor units have malfunction and confirm indoor unit mix is allowed.						
UR	Improper type of indoor units are connected.	Check the type of indoor units that are currently connected. If they are not proper, replace them with proper ones.						
υн	Incorrect interconnections between units.	Connect interconnections F1 and F2 of the connected BP unit correctly to the outdoor unit's PCB (TO BP UNIT). Make sure that the communication with the BP unit is enabled.						
UF	The stop valve of an outdoor unit is left closed.	• Open the stop valve on both the gas and liquid side.						
	The piping and wiring of the specified indoor unit are not connected correctly to the outdoor unit.	 Confirm that the piping and wiring of the specified indoor unit are connected correctly to the outdoor unit. 						



12 Disposal



NOTICE

Do NOT try to dismantle the system yourself: dismantling of the system, treatment of the refrigerant, oil and other parts MUST comply with applicable legislation. Units MUST be treated at a specialised treatment facility for reuse, recycling and recovery.



13 Technical data

A subset of the latest technical data is available on the regional Daikin website (publicly accessible). The full set of the latest technical data is available on the Daikin Business Portal (authentication required).

In this chapter

3.1	Service space: Outdoor unit	95
3.2	Piping diagram: Outdoor unit	97
3 3	Wiring diagram: Outdoor unit	98



13.1 Service space: Outdoor unit

When mounting units side by side, the piping route must be to the front or downwards. In this case the piping route to the side is not possible.

Single unit (\bigcirc) | Single row of units ($\stackrel{\frown}{\longleftrightarrow}$)

	A~E			(mm)							
	A~E		H _B H _D H _U		b	С	d	е	ев	e _D	
	В	_			≥100						
e _B	A, B, C	_		≥250	≥100	≥100					
, F	B, E	_			≥100			≥1000		≤500	
e _D E	A, B, C, E	_		≥250	≥150	≥150		≥1000		≤500	
e	D	_					≥500				
	D, E	_					≥500	≥1000	≤500		
C	B, D	_			≥100		≥500				
c H _u b H _B	B, D, E	H _B <h<sub>D</h<sub>	H _B ≤½H _U		≥250		≥750	≥1000	≤500		
T.B			½H _U <h<sub>B≤H_U</h<sub>		≥250		≥1000	≥1000	≤500		
			H _B >H _U				0],
n d a		H _B >H _D	H _D ≤½H _U		≥100		≥1000	≥1000		≤500	
H _D			½H _U <h<sub>D≤H_U</h<sub>		≥200		≥1000	≥1000		≤500	
			H _D >H _U				0				
	A, B, C	_		≥250	≥300	≥1000					
e	A, B, C, E	_		≥250	≥300	≥1000		≥1000		≤500	
E	D	_					≥1000				
e _D L	D, E	_					≥1000	≥1000	≤500		
e	B, D	H _D >H _U			≥300		≥1000				
		H _D ≤½H _U			≥250		≥1500				
B ≥250		$\frac{1}{2}H_{U} < H_{D}$	≤H _U		≥300		≥1500				
b H _B	B, D, E	H _B <h<sub>D</h<sub>	H _B ≤½H _U		≥300		≥1000	≥1000	≤500		
2250			½H _U <h<sub>B≤H_U</h<sub>		≥300		≥1250	≥1000	≤500		
d			H _B >H _U				0				1+
H _D		H _B >H _D	H _D ≤½H _U		≥250		≥1000	≥1000		≤500	
a A			½H _U <h<sub>D≤H_U</h<sub>		≥300		≥1000	≥1000		≤500	
			H _D >H _U				0				

A,B,C,D Obstacles (walls/baffle plates)

E Obstacle (roof)

a,b,c,d,e Minimum service space between the unit and obstacles A, B, C, D and E


- **e**_B Maximum distance between the unit and the edge of obstacle E, in the direction of obstacle B
- \mathbf{e}_{D} Maximum distance between the unit and the edge of obstacle E, in the direction of obstacle D
- **H**_u Height of the unit

 $\mathbf{H_{B}}, \mathbf{H_{D}}$ Height of obstacles B and D

- 1 Seal the bottom of the installation frame to prevent discharged air from flowing back to the suction side through the bottom of the unit.
- 2 Maximum two units can be installed.
- Not allowed




Multiple rows of units (

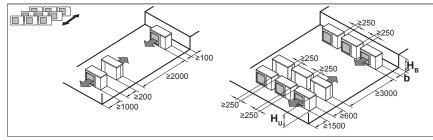

H _B H _U	b (mm)
H _B ≤½H _U	b≥250
½H _U <h<sub>B≤H_U</h<sub>	b≥300
H _B >H _U	0


Stacked units (max. 2 levels) ()

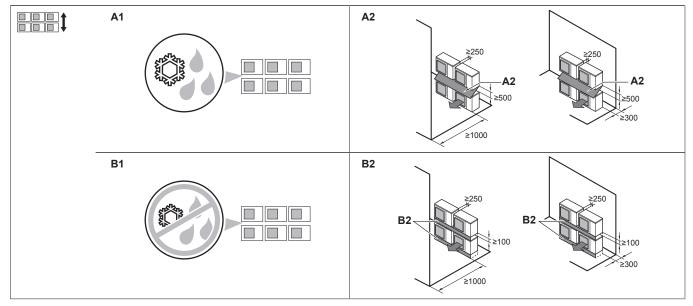

- A1=>A2 (A1) If there is danger of drainage dripping and freezing between the upper and lower units...
 - (A2) Then install a **roof** between the upper and lower units. Install the upper unit high enough above the lower unit to prevent ice buildup at the upper unit's bottom
- **B1=>B2** (B1) If there is no danger of drainage dripping and freezing between the upper and
 - (B2) Then it is not required to install a roof, but seal the gap between the upper and lower units to prevent discharged air from flowing back to the suction side through the bottom of the unit.



13.2 Piping diagram: Outdoor unit

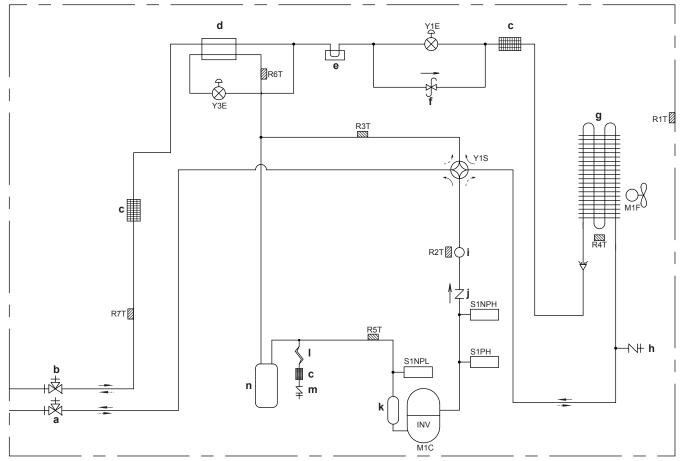

- a Stop valve (gas)
- **b** Stop valve (liquid)
- **c** Filter (3×)
- **d** Subcool heat exchanger
- e Heat sink PCB
- **f** Pressure regulating valve
- **g** Heat exchanger
- **h** Service port (high pressure)
- i Muffler
- **j** Check valve
- **k** Compressor accumulator
- l Capillary tube
- m Service port (refrigerant charge)
- n Accumulator
- M1C Compressor
- M1F Fan motor
- **R1T** Thermistor (air)
- **R2T** Thermistor (discharge)
- **R3T** Thermistor (suction 1)
- **R4T** Thermistor (heat exchanger de-icer) **R5T** Thermistor (suction 2)
- **R6T** Thermistor (subcool heat exchanger)
- **R7T** Thermistor (liquid pipe)
- **S1NPH** High pressure sensor
- **S1NPL** Low pressure sensor
- **S1PH** High pressure switch
- Y1E Electronic expansion valve (main)
- Y3E Electronic expansion valve (subcool heat exchanger)
- Y1S Solenoid valve (4-way valve)
- Heating
- --- Cooling



13.3 Wiring diagram: Outdoor unit

The wiring diagram is delivered with the unit, located at the inside of the service cover.

Notes for RXYSCQ4~6:

- This wiring diagram applies only to the outdoor unit.
- 2 Symbols (see below).
- Refer to the installation manual for how to use the BS1~BS5 and DS1+DS2 3 switches.
- When operating, do not short-circuit protective device S1PH.
- 5 Colours (see below).
- 6 Refer to the installation manual for connection wiring to INDOOR-OUTDOOR transmission F1-F2.
- 7 When using the central control system, connect OUTDOOR-OUTDOOR transmission F1-F2.

Symbols:

L Live Ν Neutral Field wiring Terminal strip Connector 00 Fixed connector ⊩ -0-Movable connector **(** Protective earth (screw)

Noiseless earth

Terminal

Colours:

Black BLK BLU Blue BRN Brown **GRN** Green **ORG** Orange Red RED WHT White Yellow YLW

Legend for wiring diagram RXYSCQ4~6:

Printed circuit board (main) A1P

Printed circuit board A2P



BS1~BS5 Push button switch

C1 Capacitor
DS1 DIP switch

E1HC Crankcase heater

F1U Fuse

F3U, F4U Fuse (T 6.3 A / 250 V) F6U Fuse (T 5.0 A / 250 V)

H1P~H8P Light-emitting diode (service monitor orange)

H2P:

Prepare, test: Flickering

Malfunction detection: Light up

HAP Light-emitting diode (service monitor is green)

HBP Light-emitting diode (service monitor is green)

K11M Magnetic contactor
K1R Magnetic relay (Y1S)
K4R Magnetic relay (E1HC)

K10R Magnetic relay

L1R~L3R Reactor

M1C Motor (compressor)

M1F Motor (fan)

PS Switching power supply

R1, R2 Resistor

R1T Thermistor (air)

R2T Thermistor (discharge)
R3T Thermistor (suction 1)

R4T Thermistor (heat exchanger de-icer)

R5T Thermistor (suction 2)

R6T Thermistor (subcool heat exchanger)

R7T Thermistor (liquid pipe)

FINTH Thermistor (fin)

S1NPH High pressure sensor
S1NPL Low pressure sensor
S1PH High pressure switch
V1R IGBT power module

V2R Diode module

V1T~V3T Insulated gate bipolar transistor (IGBT)

V1D~V3D Diode

X1M, X2M Terminal strip



X37A	Connector
Y1E	Electronic expansion valve (main)
Y3E	Electronic expansion valve (subcool heat exchanger)
Y1S	Solenoid valve (4-way valve)
Z1C~Z7C	Noise filter (ferrite core)
Z1F~Z5F	Noise filter



For the user



14 About the system

The indoor unit part of this VRV IV-S heat pump system can be used for heating/ cooling applications. The type of indoor unit which can be used depends on the outdoor units series.

In general following type of indoor units can be connected to a VRV IV-S heat pump system (not exhaustive list, depending on outdoor unit model and indoor unit model combinations):

- VRV direct expansion indoor units (air to air applications).
- RA direct expansion indoor units (air to air applications).
- AHU (air to air applications): EKEXV(A)-kit is required.
- Air curtain (air to air applications): See the combination table in the databook for more information.

AHU unit connection in pair to VRV IV-S heat pump outdoor unit is supported.

AHU unit connection in multi to VRV IV-S heat pump outdoor unit is supported, even combined with VRV IV-S direct expansion indoor unit(s).

For more specifications, see technical engineering data.



WARNING

- Do NOT modify, disassemble, remove, reinstall or repair the unit yourself as incorrect dismantling or installation may cause an electrical shock or fire. Contact
- In case of accidental refrigerant leaks, make sure there are no naked flames. The refrigerant itself is entirely safe, non-toxic and non-combustible, but it will generate toxic gas when it accidentally leaks into a room where combustion air from fan heaters, gas cookers, etc. is present. ALWAYS have qualified service personnel confirm that the point of leakage has been repaired or corrected before resuming operation.



NOTICE

Do NOT use the system for other purposes. In order to avoid any quality deterioration, do NOT use the unit for cooling precision instruments, food, plants, animals, or works of art.



NOTICE

For future modifications or expansions of your system:

A full overview of allowable combinations (for future system extensions) is available in technical engineering data and should be consulted. Contact your installer to receive more information and professional advice.



INFORMATION

- Combination of VRV DX and RA DX indoor units is not allowed.
- Combination of RA DX and AHU indoor units is not allowed.
- Combination of RA DX and air curtain indoor units is not allowed.




14.1 System layout

i

INFORMATION

The following figure is an example and may NOT completely match your system layout.

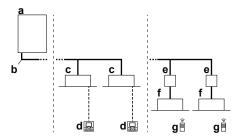

- a VRV IV-S Heat pump outdoor unit
- **b** Refrigerant piping
- c VRV direct expansion (DX) indoor unit
- **d** User interface (dedicated depending on indoor unit type)
- **e** BP box (required to connect Residential Air (RA) or Sky Air (SA) direct expansion (DX) indoor units)
- **f** Residential Air (RA) direct expansion (DX) indoor units
- **g** User interface (wireless, dedicated depending on indoor unit type)



15 User interface



CAUTION

- NEVER touch the internal parts of the controller.
- Do NOT remove the front panel. Some parts inside are dangerous to touch and appliance problems may happen. For checking and adjusting the internal parts, contact your dealer.

This operation manual offers a non-exhaustive overview of the main functions of the system.

Detailed information on required actions to achieve certain functions can be found in the dedicated installation and operation manual of the indoor unit.

Refer to the operation manual of the installed user interface.



16 Operation

In this chapter

16.1	Before operation		105
16.2			106
16.3	Operatii	perating the system	
	16.3.1	About operating the system	
	16.3.2	About cooling, heating, fan only, and automatic operation	106
	16.3.3	About the heating operation	107
	16.3.4	To operate the system	
16.4 Using the dry program		e dry program	108
	16.4.1	About the dry program	
	16.4.2	To use the dry program	
16.5			
	16.5.1	About the air flow flap	108
16.6	Setting the master user interface		
	16.6.1	About setting the master user interface	
	16.6.2	To designate the master user interface (VRV DX)	
	16.6.3	To designate the master user interface (RA DX)	
	16.6.4	About control systems	

16.1 Before operation



WARNING

This unit contains electrical and hot parts.



WARNING

Before operating the unit, be sure the installation has been carried out correctly by an installer.



CAUTION

- NEVER touch the internal parts of the controller.
- Do NOT remove the front panel. Some parts inside are dangerous to touch and appliance problems may happen. For checking and adjusting the internal parts, contact your dealer.



CAUTION

Do NOT insert fingers, rods or other objects into the air inlet or outlet. Do NOT remove the fan guard. When the fan is rotating at high speed, it will cause injury.



NOTICE

NEVER inspect or service the unit by yourself. Ask a qualified service person to perform this work.

This operation manual is for the following systems with standard control. Before initiating operation, contact your dealer for the operation that corresponds to your system type and mark. If your installation has a customised control system, ask your dealer for the operation that corresponds to your system.

Operation modes (depending on indoor unit type):

- Heating and cooling (air to air).
- Fan only operation (air to air).



Dedicated functions exist depending on the type of indoor unit, refer to dedicated installation/operation manual for more information.

16.2 Operation range

Use the system in the following temperature and humidity ranges for safe and effective operation.

	Cooling	Heating
Outdoor temperature	−5~46°C DB	−20~21°C DB
		−20~15.5°C WB
Indoor temperature	21~32°C DB	15~27°C DB
	14~25°C WB	
Indoor humidity	≤80% ^(a)	

⁽a) To avoid condensation and water dripping out of the unit. If the temperature or the humidity is beyond these conditions, safety devices may be put in action and the air conditioner may not operate.

Above operation range is only valid in case direct expansion indoor units are connected to the VRV system.

Special operation ranges are valid in case of using AHU. They can be found in the installation/operation manual of the dedicated unit. Latest information can be found in the technical engineering data.

16.3 Operating the system

16.3.1 About operating the system

- Operation procedure varies according to the combination of outdoor unit and user interface.
- To protect the unit, turn on the main power switch 6 hours before operation.
- If the main power supply is turned off during operation, operation will restart automatically after the power turns back on again.

16.3.2 About cooling, heating, fan only, and automatic operation

- Changeover cannot be made with a user interface whose display shows "changeover under centralised control" (refer to installation and operation manual of the user interface).
- When the display \(\bar{\text{LA}} \) "changeover under centralised control" flashes, refer to "16.6.1 About setting the master user interface" [▶ 109].
- The fan may keep on running for about 1 minute after the heating operation stops.
- The air flow rate may adjust itself depending on the room temperature or the fan may stop immediately. This is not a malfunction.



16.3.3 About the heating operation

It may take longer to reach the set temperature for general heating operation than for cooling operation.

The following operation is performed in order to prevent the heating capacity from dropping or cold air from blowing.

Defrost operation

In heating operation, freezing of the outdoor unit's air cooled coil increases over time, restricting the energy transfer to the outdoor unit's coil. Heating capability decreases and the system needs to go into defrost operation to be able to remove frost from the outdoor unit's coil. During defrost operation the heating capacity on the indoor unit side will temporarily drop until defrosting is completed. After defrosting, the unit will regain its full heating capacity.

The indoor unit will stop fan operation, the refrigerant cycle will reverse and energy from inside the building will be used to defrost the outdoor unit coil.

The indoor unit will indicate defrost operation on the display .

Hot start

In order to prevent cold air from blowing out of an indoor unit at the start of heating operation, the indoor fan is automatically stopped. The display of the user interface shows **6**/**3**. It may take some time before the fan starts. This is not a malfunction.



INFORMATION

- The heating capacity drops when the outside temperature falls. If this happens, use another heating device together with the unit. (When using together with appliances that produce open fire, ventilate the room constantly). Do not place appliances that produce open fire in places exposed to the air flow from the unit or under the unit.
- It takes some time to heat up the room from the time the unit is started since the unit uses a hot-air circulating system to heat the entire room.
- If the hot air rises to the ceiling, leaving the area above the floor cold, we recommend that you use the circulator (the indoor fan for circulating air). Contact your dealer for details.

16.3.4 To operate the system

- 1 Press the operation mode selector button on the user interface several times and select the operation mode of your choice.
 - Cooling operation
 - Heating operation
 - Fan only operation
- **2** Press the ON/OFF button on the user interface.

Result: The operation lamp lights up and the system starts operating.



16.4 Using the dry program

16.4.1 About the dry program

- The function of this program is to decrease the humidity in your room with minimal temperature decrease (minimal room cooling).
- The micro computer automatically determines temperature and fan speed (cannot be set by the user interface).
- The system does not go into operation if the room temperature is low (<20°C).

16.4.2 To use the dry program

To start

- Press the operation mode selector button on the user interface several times and select • (program dry operation).
- **2** Press the ON/OFF button of the user interface.

Result: The operation lamp lights up and the system starts operating.

3 Press the air flow direction adjust button (only for double-flow, multi-flow, corner, ceiling-suspended and wall-mounted). Refer to "16.5 Adjusting the air flow direction" [> 108] for details.

To stop

4 Press the ON/OFF button on the user interface once again.

Result: The operation lamp goes out and the system stops operating.



NOTICE

Do not turn off power immediately after the unit stops, but wait for at least 5 minutes.

16.5 Adjusting the air flow direction

Refer to the operation manual of the user interface.

16.5.1 About the air flow flap

Air flow flap types:







For the following conditions, a micro computer controls the air flow direction which may be different from the display.



Cooling	Heating
When the room temperature is lower than the set temperature.	When starting operation.When the room temperature is higher than the set temperature.At defrost operation.

- When operating continuously at horizontal air flow direction.
- When continuous operation with downward air flow is performed at the time of cooling with a ceiling-suspended or a wall-mounted unit, the micro computer may control the flow direction, and then the user interface indication will also change.

The air flow direction can be adjusted in one of the following ways:

- The air flow flap itself adjusts its position.
- The air flow direction can be fixed by the user.
- Automatic \checkmark and desired position \checkmark .



WARNING

NEVER touch the air outlet or the horizontal blades while the swing flap is in operation. Fingers may become caught or the unit may break down.



NOTICE

- The movable limit of the flap is changeable. Contact your dealer for details. (only for double-flow, multi-flow, corner, ceiling-suspended and wall-mounted).
- Avoid operating in the horizontal direction - □. It may cause dew or dust to settle on the ceiling or flap.


16.6 Setting the master user interface

16.6.1 About setting the master user interface



INFORMATION

The following figure is an example and may NOT completely match your system layout.

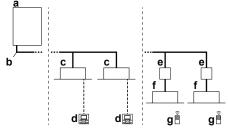

- a VRV IV-S Heat pump outdoor unit
- **b** Refrigerant piping
- c VRV direct expansion (DX) indoor unit
- **d** User interface (dedicated depending on indoor unit type)
- BP box (required to connect Residential Air (RA) or Sky Air (SA) direct expansion (DX) indoor units)
- **f** Residential Air (RA) direct expansion (DX) indoor units
- **g** User interface (wireless, dedicated depending on indoor unit type)



When the system is installed as shown in the figure above, it is necessary to designate one of the user interfaces as the master user interface.

The displays of slave user interfaces show (changeover under centralised control) and slave user interfaces automatically follow the operation mode directed by the master user interface.

Only the master user interface can select heating or cooling mode (cooling/heating masterhood).

16.6.2 To designate the master user interface (VRV DX)

In case only VRV DX indoor units are connected to the VRV system:

- Press the operation mode selector button of the current master user interface for 4 seconds. In case this procedure was not yet performed, the procedure can be executed on the first user interface operated.
 - **Result:** The display showing (changeover under centralised control) of all slave user interfaces connected to the same outdoor unit flashes.
- Press the operation mode selector button of the controller that you wish to designate as the master user interface.

Result: Designation is completed. This user interface is designated as the master user interface and the display showing (changeover under centralised control) vanishes. The displays of other user interfaces show (changeover under centralised control).

16.6.3 To designate the master user interface (RA DX)

In case only RA DX indoor units are connected to the VRV IV-S system:

- **1** Stop all indoor units.
- When the system is not operating (all indoor units thermo OFF), you can define the master RA DX indoor unit by addressing that unit with infrared user interface (instruct thermo ON in desired mode).

The only way to change the master unit is by repeating the previous procedure. A cool/heat switchover (or opposite) is only possible by changing the operation mode of the defined master indoor unit.

16.6.4 About control systems

This system provides two other control systems beside individual control system (one user interface controls one indoor unit). Confirm the following if your unit is of the following control system type:

Туре	Description
Group control system	One user interface controls up to 16 indoor units. All indoor units are equally set.
Two user interface control system	Two user interfaces control one indoor unit (in case of group control system, one group of indoor units). The unit is individually operated.



NOTICE

Contact your dealer in case of changing the combination or setting of group control and two user interface control systems.



17 Energy saving and optimum operation

Observe the following precautions to ensure the system operates properly.

- Adjust the air outlet properly and avoid direct air flow to room inhabitants.
- Adjust the room temperature properly for a comfortable environment. Avoid excessive heating or cooling.
- Prevent direct sunlight from entering a room during cooling operation by using curtains or blinds.
- Ventilate often. Extended use requires special attention to ventilation.
- Keep doors and windows closed. If the doors and windows remain open, air will flow out of your room causing a decrease in the cooling or heating effect.
- Be careful NOT to cool or heat too much. To save energy, keep the temperature setting at a moderate level.
- NEVER place objects near the air inlet or the air outlet of the unit. Doing so may cause a reduced heating/cooling effect or stop operation.
- Turn off the main power supply switch to the unit when the unit is not used for longer periods of time. If the switch is on, it consumes electricity. Before restarting the unit, turn on the main power supply switch 6 hours before operation to ensure smooth running. (Refer to "Maintenance" in the indoor unit manual.)
- When the display shows (time to clean the air filter), ask a qualified service person to clean the filters. (Refer to "Maintenance" in the indoor unit manual.)
- Keep the indoor unit and user interface at least 1 m away from televisions, radios, stereos, and other similar equipment. Failing to do so may cause static or distorted pictures.
- Do NOT place items under the indoor unit, as they may be damaged by water.
- Condensation may form if the humidity is above 80% or if the drain outlet gets blocked.

This heat pump system is equipped with advanced energy saving functionality. Depending on the priority, emphasis can be put on energy saving or comfort level. Several parameters can be selected, resulting in the optimal balance between energy consumption and comfort for the particular application.

Several patterns are available and roughly explained below. Contact your installer or dealer for advice or to modify the parameters to the needs of your building.

Detailed information is given for the installer in the installation manual. He can help you to realize the best balance between energy consumption and comfort.

In this chapter

17.1	Available main operation methods	111
17.2	Available comfort settings	112

17.1 Available main operation methods

Basic

The refrigerant temperature is fixed independent from the situation.



Automatic

The refrigerant temperature is set depending on the outdoor ambient conditions. As such adjusting the refrigerant temperature to match the required load (which is also related to the outdoor ambient conditions).

E.g., when your system is operating in cooling, you do not need as much cooling under low outdoor ambient temperatures (e.g., 25°C) as under high outdoor ambient temperatures (e.g., 35°C). Using this idea, the system automatically starts increasing its refrigerant temperature, automatically reducing the delivered capacity and increasing the system's efficiency.

Hi-sensible/economic (cooling/heating)

The refrigerant temperature is set higher/lower (cooling/heating) compared to basic operation. The focus under high sensible mode is comfort feeling for the customer.

The selection method of indoor units is important and has to be considered as the available capacity is not the same as under basic operation.

For details concerning to Hi-sensible applications, please contact your installer.

17.2 Available comfort settings

For each of above modes a comfort level can be selected. The comfort level is related to the timing and the effort (energy consumption) which is put in achieving a certain room temperature by temporarily changing the refrigerant temperature to different values in order to achieve requested conditions more quickly.

- Powerful
- Quick
- Mild
- Eco



18 Maintenance and service



WARNING

NEVER replace a fuse with a fuse of a wrong ampere ratings or other wires when a fuse blows out. Use of wire or copper wire may cause the unit to break down or cause a fire.



CAUTION: Pay attention to the fan!

It is dangerous to inspect the unit while the fan is running.

Make sure to turn OFF the main switch before executing any maintenance task.



CAUTION

Do NOT insert fingers, rods or other objects into the air inlet or outlet. Do NOT remove the fan guard. When the fan is rotating at high speed, it will cause injury.



CAUTION

After a long use, check the unit stand and fitting for damage. If damaged, the unit may fall and result in injury.



NOTICE

NEVER inspect or service the unit by yourself. Ask a qualified service person to perform this work.



NOTICE

Do NOT wipe the controller operation panel with benzine, thinner, chemical dust cloth, etc. The panel may get discoloured or the coating peeled off. If it is heavily dirty, soak a cloth in water-diluted neutral detergent, squeeze it well and wipe the panel clean. Wipe it with another dry cloth.

In this chapter

18.1	Mainter	ance after a long stop period	114
18.2	Mainter	ance before a long stop period	114
		ne refrigerant	
18.4	After-sa	les service and warranty	115
	18.4.1	Warranty period	115
	18.4.2	Recommended maintenance and inspection	115
	18.4.3	Recommended maintenance and inspection cycles	115
	18.4.4	Shortened maintenance and replacement cycles	116



18.1 Maintenance after a long stop period

E.g., at the beginning of the season.

- Check and remove everything that might be blocking inlet and outlet vents of indoor units and outdoor units.
- Clean air filters and casings of indoor units. Contact your installer or maintenance person to clean air filters and casings of the indoor unit. Maintenance tips and procedures for cleaning are provided in the installation/operation manuals of dedicated indoor units. Make sure to install cleaned air filters back in the same position.
- Turn on the power at least 6 hours before operating the system in order to ensure smoother operation. As soon as the power is turned on, the user interface display appears.

18.2 Maintenance before a long stop period

E.g., at the end of the season.

- Let the indoor units run in fan-only operation for about half a day in order to dry the interior of the units. Refer to "16.3.2 About cooling, heating, fan only, and automatic operation" [> 106] for details on fan-only operation.
- Turn off the power. The user interface display disappears.
- Clean air filters and casings of indoor units. Contact your installer or maintenance person to clean air filters and casings of the indoor unit. Maintenance tips and procedures for cleaning are provided in the installation/operation manuals of dedicated indoor units. Make sure to install cleaned air filters back in the same position.

18.3 About the refrigerant

This product contains fluorinated greenhouse gases. Do NOT vent gases into the atmosphere.

Refrigerant type: R410A

Global warming potential (GWP) value: 2087.5



NOTICE

Applicable legislation on **fluorinated greenhouse gases** requires that the refrigerant charge of the unit is indicated both in weight and CO₂ equivalent.

Formula to calculate the quantity in CO2 equivalent tonnes: GWP value of the refrigerant × total refrigerant charge [in kg]/1000

Contact your installer for more information.





WARNING

- The refrigerant in the system is safe and normally does NOT leak. If the refrigerant leaks in the room, contact with a fire of a burner, a heater or a cooker may result in a harmful gas.
- Turn OFF any combustible heating devices, ventilate the room and contact the dealer where you purchased the unit.
- Do NOT use the system until a service person confirms that the portion where the refrigerant leaks is repaired.

18.4 After-sales service and warranty

18.4.1 Warranty period

- This product includes a warranty card that was filled in by the dealer at the time
 of installation. The completed card has to be checked by the customer and
 stored carefully.
- If repairs to the product are necessary within the warranty period, contact your dealer and keep the warranty card at hand.

18.4.2 Recommended maintenance and inspection

Since dust collects when using the unit for several years, performance of the unit will deteriorate to some extent. As taking apart and cleaning interiors of units requires technical expertise and in order to ensure the best possible maintenance of your units, we recommend to enter into a maintenance and inspection contract on top of normal maintenance activities. Our network of dealers has access to a permanent stock of essential components in order to keep your unit in operation as long as possible. Contact your dealer for more information.

When asking your dealer for an intervention, always state:

- The complete model name of the unit.
- The manufacturing number (stated on the nameplate of the unit).
- The installation date.
- The symptoms or malfunction, and details of the defect.



WARNING

- Do NOT modify, disassemble, remove, reinstall or repair the unit yourself as incorrect dismantling or installation may cause an electrical shock or fire. Contact your dealer.
- In case of accidental refrigerant leaks, make sure there are no naked flames. The refrigerant itself is entirely safe, non-toxic and non-combustible, but it will generate toxic gas when it accidentally leaks into a room where combustion air from fan heaters, gas cookers, etc. is present. ALWAYS have qualified service personnel confirm that the point of leakage has been repaired or corrected before resuming operation.

18.4.3 Recommended maintenance and inspection cycles

Be aware that the mentioned maintenance and replacement cycles do not relate to the warranty period of the components.



Component	Inspection cycle	Maintenance cycle (replacements and/or repairs)
Electric motor	1 year	20,000 hours
PCB		25,000 hours
Heat exchanger		5 years
Sensor (thermistor, etc.)		5 years
User interface and switches		25,000 hours
Drain pan	-	8 years
Expansion valve		20,000 hours
Solenoid valve	-	20,000 hours

The table assumes the following conditions of use:

- Normal use without frequent starting and stopping of the unit. Depending on the model, we recommend not starting and stopping the machine more than 6 times/hour.
- Operation of the unit is assumed to be 10 hours/day and 2,500 hours/year.



NOTICE

- The table indicates main components. Refer to your maintenance and inspection contract for more details.
- The table indicates recommended intervals of maintenance cycles. However, in order to keep the unit operational as long as possible, maintenance work may be required sooner. Recommended intervals can be used for appropriate maintenance design in terms of budgeting maintenance and inspection fees. Depending on the content of the maintenance and inspection contract, inspection and maintenance cycles may in reality be shorter than listed.

18.4.4 Shortened maintenance and replacement cycles

Shortening of "maintenance cycle" and "replacement cycle" needs to be considered in following situations:

The unit is used in locations where:

- Heat and humidity fluctuate out of the ordinary.
- Power fluctuation is high (voltage, frequency, wave distortion, etc.) (the unit cannot be used if power fluctuation is outside the allowable range).
- Bumps and vibrations are frequent.
- Dust, salt, harmful gas or oil mist such as sulphurous acid and hydrogen sulfide may be present in the air.
- The machine is started and stopped frequently or operation time is long (sites with 24 hour air-conditioning).



Recommended replacement cycle of wear parts

Component	Inspection cycle	Maintenance cycle (replacements and/or repairs)
Air filter	1 year	5 years
High efficiency filter		1 year
Fuse		10 years
Crankcase heater		8 years
Pressure containing parts		In case of corrosion, contact your local dealer.



NOTICE

- The table indicates main components. Refer to your maintenance and inspection contract for more details.
- The table indicates recommended intervals of replacement cycles. However, in order to keep the unit operational as long as possible, maintenance work may be required sooner. Recommended intervals can be used for appropriate maintenance design in terms of budgeting maintenance and inspection fees. Contact your dealer for details.



INFORMATION

Damage due to taking apart or cleaning interiors of units by anyone other than our authorised dealers may not be included in the warranty.



19 Troubleshooting

If one of the following malfunctions occurs, take the measures shown below and contact your dealer.



WARNING

Stop operation and shut OFF the power if anything unusual occurs (burning smells

Leaving the unit running under such circumstances may cause breakage, electrical shock or fire. Contact your dealer.

The system MUST be repaired by a qualified service person.

Malfunction	Measure
If a safety device such as a fuse, a breaker or an earth leakage breaker frequently actuates or the ON/OFF switch does NOT properly work.	Turn OFF the main power switch.
If water leaks from the unit.	Stop the operation.
The operation switch does NOT work well.	Turn OFF the power supply.
If the user interface display indicates the unit number, the operation lamp flashes and the malfunction code appears.	Notify your installer and report the malfunction code.

If the system does NOT operate properly except for the above mentioned cases and none of the above mentioned malfunctions is evident, investigate the system in accordance with the following procedures.

Malfunction	Measure
If the system does not operate at all.	• Check if there is no power failure. Wait until power is restored. If power failure occurs during operation, the system automatically restarts immediately after power is restored.
	• Check if no fuse has blown or breaker is activated. Change the fuse or reset the breaker if necessary.
If the system goes into fan only operation, but as soon as it goes into heating or	Check if air inlet or outlet of outdoor or indoor unit is not blocked by obstacles. Remove any obstacles and make sure the air can flow freely.
cooling operation, the system stops.	• Check if the user interface display shows (time to clean the air filter). (Refer to "18 Maintenance and service" [▶ 113] and "Maintenance" in the indoor unit manual.)



Malfunction	Measure
The system operates but cooling or heating is insufficient.	 Check if air inlet or outlet of outdoor or indoor unit is not blocked by obstacles. Remove any obstacles and make sure the air can flow freely.
	• Check if the air filter is not clogged (refer to "Maintenance" in the indoor unit manual).
	Check the temperature setting.
	 Check the fan speed setting on your user interface.
	 Check for open doors or windows. Close doors and windows to prevent wind from coming in.
	 Check if there are too many occupants in the room during cooling operation. Check if the heat source of the room is excessive.
	 Check if direct sunlight enters the room. Use curtains or blinds.
	Check if the air flow angle is proper.

After checking all the items above, if it is impossible to fix the problem yourself, contact your installer and state the symptoms, the complete model name of the unit (with manufacturing number if possible) and the installation date.

In this chapter

19.1	Error cod	des: Overview	120
19.2	Sympton	ns that are NOT system malfunctions	121
	19.2.1	Symptom: The system does not operate	122
	19.2.2	Symptom: Fan operation is possible, but cooling and heating do not work	122
	19.2.3	Symptom: The fan speed does not correspond to the setting	122
	19.2.4	Symptom: The fan direction does not correspond to the setting	122
	19.2.5	Symptom: White mist comes out of a unit (Indoor unit)	122
	19.2.6	Symptom: White mist comes out of a unit (Indoor unit, outdoor unit)	122
	19.2.7	Symptom: The user interface reads "U4" or "U5" and stops, but then restarts after a few minutes	123
	19.2.8	Symptom: Noise of air conditioners (Indoor unit)	123
	19.2.9	Symptom: Noise of air conditioners (Indoor unit, outdoor unit)	123
	19.2.10	Symptom: Noise of air conditioners (Outdoor unit)	
	19.2.11	Symptom: Dust comes out of the unit	
	19.2.12	Symptom: The units can give off odours	123
	19.2.13	Symptom: The outdoor unit fan does not spin	
	19.2.14	Symptom: The display shows "88"	124
	19.2.15	Symptom: The compressor in the outdoor unit does not stop after a short heating operation	124
	19.2.16	Symptom: The inside of an outdoor unit is warm even when the unit has stopped	124
	19.2.17	Symptom: Hot air can be felt when the indoor unit is stopped	124



19.1 Error codes: Overview

In case a malfunction code appears on the indoor unit user interface display, contact your installer and inform the malfunction code, the unit type, and serial number (you can find this information on the nameplate of the unit).

For your reference, a list with malfunction codes is provided. You can, depending on the level of the malfunction code, reset the code by pushing the ON/OFF button. If not, ask your installer for advice.

Main code	Contents
RO.	External protection device was activated
R I	EEPROM failure (indoor)
<i>R</i> 3	Drain system malfunction (indoor)
<i>R</i> 5	Fan motor malfunction (indoor)
R7	Swing flap motor malfunction (indoor)
89	Expansion valve malfunction (indoor)
RF	Drain malfunction (indoor unit)
RH	Filter dust chamber malfunction (indoor)
RJ	Capacity setting malfunction (indoor)
EI	Transmission malfunction between main PCB and sub PCB (indoor)
ЕЧ	Heat exchanger thermistor malfunction (indoor; liquid)
£5	Heat exchanger thermistor malfunction (indoor; gas)
E9	Suction air thermistor malfunction (indoor)
ЕЯ	Discharge air thermistor malfunction (indoor)
CE	Movement detector or floor temperature sensor malfunction (indoor)
ΕJ	User interface thermistor malfunction (indoor)
ΕI	PCB malfunction (outdoor)
E3	High pressure switch was activated
E4	Low pressure malfunction (outdoor)
<i>E</i> 5	Compressor lock detection (outdoor)
E7	Fan motor malfunction (outdoor)
E9	Electronic expansion valve malfunction (outdoor)
F3	Discharge temperature malfunction (outdoor)
FY	Abnormal suction temperature (outdoor)
F5	Refrigerant overcharge detection
нз	High pressure switch malfunction
НЧ	Low pressure switch malfunction
н٦	Fan motor trouble (outdoor)
НЯ	Ambient temperature sensor malfunction (outdoor)
1 [Pressure sensor malfunction



Main code	Contents
J2	Current sensor malfunction
J3	Discharge temperature sensor malfunction (outdoor)
	Heat exchanger gas temperature sensor malfunction (outdoor)
JS	Suction temperature sensor malfunction (outdoor)
J5	De-icing temperature sensor malfunction (outdoor)
דע	Liquid temperature sensor (after subcool HE) malfunction (outdoor)
JP	Gas temperature sensor (after subcool HE) malfunction (outdoor)
JR	High pressure sensor malfunction (S1NPH)
JE	Low pressure sensor malfunction (S1NPL)
LI	INV PCB abnormal
LY	Fin temperature abnormal
L5	Inverter PCB faulty
L8	Compressor over current detected
L9	Compressor lock (startup)
LC	Transmission outdoor unit - inverter: INV transmission trouble
PI	INV unbalanced power supply voltage
PY	Fin thermistor malfunction
PJ	Capacity setting malfunction (outdoor)
ШΟ	Abnormal low pressure drop, faulty expansion valve
U2	INV voltage power shortage
из	System test run not yet executed
ЦЧ	Faulty wiring indoor/outdoor
U5	Abnormal user interface - indoor communication
רט	Faulty wiring to outdoor/outdoor
U8	Abnormal main-sub user interface communication
UЯ	System mismatch. Wrong type of indoor units combined. Indoor unit malfunction.
UR	Connection malfunction over indoor units or type mismatch
UΕ	Centralised address duplication
UE	Malfunction in communication centralised control device - indoor unit
UF	Auto address malfunction (inconsistency)
ЦΗ	Auto address malfunction (inconsistency)

19.2 Symptoms that are NOT system malfunctions

The following symptoms are NOT system malfunctions:



19.2.1 Symptom: The system does not operate

- The air conditioner does not start immediately after the ON/OFF button on the user interface is pressed. If the operation lamp lights, the system is in normal condition. To prevent overloading of the compressor motor, the air conditioner starts 5 minutes after it is turned ON again in case it was turned OFF just before. The same starting delay occurs after the operation mode selector button was used.
- If "Under Centralised Control" is displayed on the user interface, pressing the operation button causes the display to blink for a few seconds. The blinking display indicates that the user interface cannot be used.
- The system does not start immediately after the power supply is turned on. Wait one minute until the microcomputer is prepared for operation.

19.2.2 Symptom: Fan operation is possible, but cooling and heating do not work

Immediately after the power is turned on. The micro computer is getting ready to operate and is performing a communication check with all indoor units. Please wait 12 minutes maximally until this process is finished.

19.2.3 Symptom: The fan speed does not correspond to the setting

The fan speed does not change even if the fan speed adjustment button is pressed. During heating operation, when the room temperature reaches the set temperature, the outdoor unit goes off and the indoor unit changes to whisper fan speed. This is to prevent cold air blowing directly on occupants of the room. The fan speed will not change even when another indoor unit is in heating operation, if the button is pressed.

19.2.4 Symptom: The fan direction does not correspond to the setting

The fan direction does not correspond with the user interface display. The fan direction does not swing. This is because the unit is being controlled by the micro computer.

19.2.5 Symptom: White mist comes out of a unit (Indoor unit)

- When humidity is high during cooling operation. If the interior of an indoor unit is extremely contaminated, the temperature distribution inside a room becomes uneven. It is necessary to clean the interior of the indoor unit. Ask your dealer for details on cleaning the unit. This operation requires a qualified service person.
- Immediately after the cooling operation stops and if the room temperature and humidity are low. This is because warm refrigerant gas flows back into the indoor unit and generates steam.

19.2.6 Symptom: White mist comes out of a unit (Indoor unit, outdoor unit)

When the system is changed over to heating operation after defrost operation. Moisture generated by defrost becomes steam and is exhausted.



This is because the user interface is intercepting noise from electric appliances other than the air conditioner. The noise prevents communication between the units, causing them to stop. Operation automatically restarts when the noise ceases. A power reset may help to remove this error.

19.2.8 Symptom: Noise of air conditioners (Indoor unit)

- A "zeen" sound is heard immediately after the power supply is turned on. The electronic expansion valve inside an indoor unit starts working and makes the noise. Its volume will reduce in about one minute.
- A continuous low "shah" sound is heard when the system is in cooling operation or at a stop. When the drain pump (optional accessories) is in operation, this noise is heard.
- A "pishi-pishi" squeaking sound is heard when the system stops after heating operation. Expansion and contraction of plastic parts caused by temperature change make this noise.
- A low "sah", "choro-choro" sound is heard while the indoor unit is stopped. When another indoor unit is in operation, this noise is heard. In order to prevent oil and refrigerant from remaining in the system, a small amount of refrigerant is kept flowing.

19.2.9 Symptom: Noise of air conditioners (Indoor unit, outdoor unit)

- A continuous low hissing sound is heard when the system is in cooling or defrost operation. This is the sound of refrigerant gas flowing through both indoor and outdoor units.
- A hissing sound which is heard at the start or immediately after stopping operation or defrost operation. This is the noise of refrigerant caused by flow stop or flow change.

19.2.10 Symptom: Noise of air conditioners (Outdoor unit)

When the tone of operating noise changes. This noise is caused by the change of frequency.

19.2.11 Symptom: Dust comes out of the unit

When the unit is used for the first time in a long time. This is because dust has gotten into the unit.

19.2.12 Symptom: The units can give off odours

The unit can absorb the smell of rooms, furniture, cigarettes, etc., and then emit it again.

19.2.13 Symptom: The outdoor unit fan does not spin

During operation, the speed of the fan is controlled in order to optimise product operation.



19.2.14 Symptom: The display shows "88"

This is the case immediately after the main power supply switch is turned on and means that the user interface is in normal condition. This continues for 1 minute.

19.2.15 Symptom: The compressor in the outdoor unit does not stop after a short heating operation

This is to prevent refrigerant from remaining in the compressor. The unit will stop after 5 to 10 minutes.

19.2.16 Symptom: The inside of an outdoor unit is warm even when the unit has stopped

This is because the crankcase heater is warming the compressor so that the compressor can start smoothly.

19.2.17 Symptom: Hot air can be felt when the indoor unit is stopped

Several different indoor units are being run on the same system. When another unit is running, some refrigerant will still flow through the unit.



20 Relocation

Contact your dealer to remove and reinstall the entire unit. Moving units requires technical expertise.



21 Disposal

This unit uses hydrofluorocarbon. Contact your dealer when discarding this unit. It is required by law to collect, transport and discard the refrigerant in accordance with the "hydrofluorocarbon collection and destruction" regulations.



NOTICE

Do NOT try to dismantle the system yourself: dismantling of the system, treatment of the refrigerant, oil and other parts MUST comply with applicable legislation. Units MUST be treated at a specialised treatment facility for reuse, recycling and recovery.



22 Technical data

In this chapter

22.1 Eco Design requirements

Follow the steps below to consult the Energy Label – Lot 21 data of the unit and outdoor/indoor combinations.

- 1 Open the following webpage: https://energylabel.daikin.eu/
- **2** To continue, choose:
 - "Continue to Europe" for the international website.
 - "Other country" for a country related site.

Result: You are directed to the "Seasonal efficiency" webpage.

3 Under "Eco Design – Ener LOT 21", click "Generate your data".

Result: You are directed to the "Seasonal efficiency (LOT 21)" webpage.

4 Follow the instructions on the webpage to select the correct unit.

Result: When the selection is done, the LOT 21 datasheet can be viewed as a PDF or a HTML webpage.



INFORMATION

Other documents (e.g. manuals, ...) can also be consulted from the resulting webpage.



23 Glossary

Dealer

Sales distributor for the product.

Authorised installer

Technical skilled person who is qualified to install the product.

User

Person who is owner of the product and/or operates the product.

Applicable legislation

All international, European, national and local directives, laws, regulations and/or codes that are relevant and applicable for a certain product or domain.

Service company

Qualified company which can perform or coordinate the required service to the product.

Installation manual

Instruction manual specified for a certain product or application, explaining how to install, configure and maintain it.

Operation manual

Instruction manual specified for a certain product or application, explaining how to operate it.

Maintenance instructions

Instruction manual specified for a certain product or application, which explains (if relevant) how to install, configure, operate and/or maintain the product or application.

Accessories

Labels, manuals, information sheets and equipment that are delivered with the product and that need to be installed according to the instructions in the accompanying documentation.

Optional equipment

Equipment made or approved by Daikin that can be combined with the product according to the instructions in the accompanying documentation.

Field supply

Equipment NOT made by Daikin that can be combined with the product according to the instructions in the accompanying documentation.













