


Installer and user reference guide

VRV IV-S system air conditioner

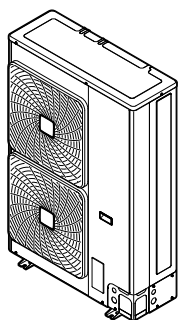

RXYSQ4T8VB▼

RXYSQ5T8VB▼

RXYSQ6T8VB▼

RXYSQ4T8YB▼

RXYSQ5T8YB▼

RXYSQ6T8YB▼

Table of contents

1	About the documentation	6
1.1	About this document.....	6
1.2	Meaning of warnings and symbols	6
2	General safety precautions	8
2.1	For the installer	8
2.1.1	General.....	8
2.1.2	Installation site.....	9
2.1.3	Refrigerant — in case of R410A or R32.....	9
2.1.4	Electrical.....	11
3	Specific installer safety instructions	13
	For the user	16
4	User safety instructions	17
4.1	General	17
4.2	Instructions for safe operation	18
5	About the system	20
5.1	System layout	21
6	User interface	22
7	Operation	23
7.1	Before operation	23
7.2	Operation range	23
7.3	Operating the system	24
7.3.1	About operating the system.....	24
7.3.2	About cooling, heating, fan only, and automatic operation.....	24
7.3.3	About the heating operation	24
7.3.4	To operate the system (WITHOUT cool/heat changeover remote control switch).....	25
7.3.5	To operate the system (WITH cool/heat changeover remote control switch)	25
7.4	Using the dry program	26
7.4.1	About the dry program	26
7.4.2	To use the dry program (WITHOUT cool/heat changeover remote control switch)	26
7.4.3	To use the dry program (WITH cool/heat changeover remote control switch).....	27
7.5	Adjusting the air flow direction.....	27
7.5.1	About the air flow flap	27
7.6	Setting the master user interface	28
7.6.1	About setting the master user interface	28
7.6.2	To designate the master user interface (VRV DX).....	29
7.6.3	To designate the master user interface (RA DX).....	29
7.6.4	About control systems	29
8	Energy saving and optimum operation	30
8.1	Available main operation methods.....	30
8.2	Available comfort settings.....	31
9	Maintenance and service	32
9.1	Maintenance after a long stop period	32
9.2	Maintenance before a long stop period	33
9.3	About the refrigerant	33
9.4	After-sales service and warranty	33
9.4.1	Warranty period	33
9.4.2	Recommended maintenance and inspection	34
9.4.3	Recommended maintenance and inspection cycles.....	34
9.4.4	Shortened maintenance and replacement cycles.....	35
10	Troubleshooting	36
10.1	Error codes: Overview	37
10.2	Symptoms that are NOT system malfunctions	39
10.2.1	Symptom: The system does not operate	39
10.2.2	Symptom: Cool/Heat cannot be changed over	40
10.2.3	Symptom: Fan operation is possible, but cooling and heating do not work.....	40
10.2.4	Symptom: The fan speed does not correspond to the setting	40

10.2.5	Symptom: The fan direction does not correspond to the setting	40
10.2.6	Symptom: White mist comes out of a unit (Indoor unit).....	40
10.2.7	Symptom: White mist comes out of a unit (Indoor unit, outdoor unit).....	40
10.2.8	Symptom: The user interface reads "U4" or "U5" and stops, but then restarts after a few minutes	40
10.2.9	Symptom: Noise of air conditioners (Indoor unit)	41
10.2.10	Symptom: Noise of air conditioners (Indoor unit, outdoor unit)	41
10.2.11	Symptom: Noise of air conditioners (Outdoor unit)	41
10.2.12	Symptom: Dust comes out of the unit	41
10.2.13	Symptom: The units can give off odours.....	41
10.2.14	Symptom: The outdoor unit fan does not spin	41
10.2.15	Symptom: The compressor in the outdoor unit does not stop after a short heating operation.....	41
10.2.16	Symptom: The inside of an outdoor unit is warm even when the unit has stopped.....	41
10.2.17	Symptom: Hot air can be felt when the indoor unit is stopped	42
11	Relocation	43
12	Disposal	44
13	Technical data	45
13.1	Eco Design requirements	45
For the installer		46
14	About the box	47
14.1	About LOOP BY DAIKIN	47
14.2	Outdoor unit.....	48
14.2.1	To unpack the outdoor unit.....	48
14.2.2	To handle the outdoor unit	48
14.2.3	To remove the accessories from the outdoor unit	49
15	About the units and options	50
15.1	Identification	50
15.1.1	Identification label: Outdoor unit.....	50
15.2	About the outdoor unit	51
15.3	System layout	51
15.4	Combining units and options	51
15.4.1	About combining units and options	51
15.4.2	Possible combinations of indoor units	52
15.4.3	Possible options for the outdoor unit	52
16	Unit installation	54
16.1	Preparing the installation site	54
16.1.1	Installation site requirements of the outdoor unit	54
16.1.2	Additional installation site requirements of the outdoor unit in cold climates	57
16.1.3	Securing safety against refrigerant leaks	57
16.2	Opening and closing the unit	59
16.2.1	About opening the units	59
16.2.2	To open the outdoor unit	60
16.2.3	To close the outdoor unit	60
16.3	Mounting the outdoor unit	60
16.3.1	About mounting the outdoor unit.....	60
16.3.2	Precautions when mounting the outdoor unit	61
16.3.3	To provide the installation structure.....	61
16.3.4	To install the outdoor unit.....	62
16.3.5	To provide drainage.....	62
16.3.6	To prevent the outdoor unit from falling over.....	62
17	Piping installation	64
17.1	Preparing refrigerant piping.....	64
17.1.1	Refrigerant piping requirements.....	64
17.1.2	Refrigerant piping material.....	65
17.1.3	To select the piping size.....	65
17.1.4	To select refrigerant branch kits	67
17.1.5	Refrigerant piping length and height difference.....	68
17.2	Connecting the refrigerant piping.....	70
17.2.1	About connecting the refrigerant piping	70
17.2.2	Precautions when connecting the refrigerant piping	71
17.2.3	Guidelines when connecting the refrigerant piping	72
17.2.4	Pipe bending guidelines.....	72
17.2.5	To flare the pipe end	72

Table of contents

17.2.6	To braze the pipe end	73
17.2.7	Using the stop valve and service port	74
17.2.8	To connect the refrigerant piping to the outdoor unit	75
17.2.9	To connect the refrigerant branching kit	77
17.3	Checking the refrigerant piping	78
17.3.1	About checking the refrigerant piping	78
17.3.2	Checking refrigerant piping: General guidelines	79
17.3.3	Checking refrigerant piping: Setup	80
17.3.4	To perform a leak test	80
17.3.5	To perform vacuum drying	81
17.3.6	To insulate the refrigerant piping	81
17.4	Charging refrigerant	82
17.4.1	About charging refrigerant	82
17.4.2	Precautions when charging refrigerant	82
17.4.3	To determine the additional refrigerant amount	83
17.4.4	To charge refrigerant	84
17.4.5	Error codes when charging refrigerant	86
17.4.6	To fix the fluorinated greenhouse gases label	86
18	Electrical installation	88
18.1	About connecting the electrical wiring	88
18.1.1	Precautions when connecting the electrical wiring	88
18.1.2	Field wiring: Overview	90
18.1.3	Guidelines for making knockout holes	91
18.1.4	Guidelines when connecting the electrical wiring	91
18.1.5	About electrical compliance	93
18.1.6	Safety device requirements	93
18.2	To connect the electrical wiring to the outdoor unit	93
18.3	To finish the interconnection wiring	96
18.4	To check the insulation resistance of the compressor	97
19	Configuration	98
19.1	Making field settings	98
19.1.1	About making field settings	98
19.1.2	To access the field setting components	99
19.1.3	Field setting components	99
19.1.4	To access mode 1 or 2	100
19.1.5	To use mode 1	101
19.1.6	To use mode 2	102
19.1.7	Mode 1 (and default situation): Monitoring settings	102
19.1.8	Mode 2: field settings	104
19.1.9	To connect the PC configurator to the outdoor unit	107
19.2	Energy saving and optimum operation	108
19.2.1	Available main operation methods	108
19.2.2	Available comfort settings	109
19.2.3	Example: Automatic mode during cooling	111
19.2.4	Example: Automatic mode during heating	112
20	Commissioning	113
20.1	Overview: Commissioning	113
20.2	Precautions when commissioning	113
20.3	Checklist before commissioning	114
20.4	Checklist during commissioning	115
20.4.1	About the system test run	115
20.4.2	To perform a test run (7-LEDs display)	115
20.4.3	Correcting after abnormal completion of the test run	116
21	Hand-over to the user	117
22	Maintenance and service	118
22.1	Maintenance safety precautions	118
22.1.1	To prevent electrical hazards	118
22.2	Checklist for yearly maintenance of the outdoor unit	119
22.3	About service mode operation	119
22.3.1	To use vacuum mode	119
22.3.2	To recover refrigerant	120
23	Troubleshooting	121
23.1	Overview: Troubleshooting	121
23.2	Precautions when troubleshooting	121
23.3	Solving problems based on error codes	121

23.3.1	Error codes: Overview	122
24	Disposal	124
25	Technical data	125
25.1	Service space: Outdoor unit	126
25.2	Piping diagram: Outdoor unit	128
25.3	Wiring diagram: Outdoor unit.....	129
26	Glossary	133

1 About the documentation

In this chapter

1.1	About this document.....	6
1.2	Meaning of warnings and symbols.....	6

1.1 About this document

Target audience

Authorised installers + end users



INFORMATION

This appliance is intended to be used by expert or trained users in shops, in light industry and on farms, or for commercial use by lay persons.

Documentation set

This document is part of a documentation set. The complete set consists of:

- **General safety precautions:**
 - Safety instructions that you must read before installing
 - Format: paper (in the box of the outdoor unit)
- **Outdoor unit installation and operation manual:**
 - Installation and operation instructions
 - Format: paper (in the box of the outdoor unit)
- **Installer and user reference guide:**
 - Preparation of the installation, reference data,...
 - Detailed step-by-step instructions and background information for basic and advanced usage
 - Format: Digital files on <https://www.daikin.eu>. Use the search function 🔍 to find your model.

The latest revision of the supplied documentation is published on the regional Daikin website and is available via your dealer.

The original instructions are written in English. All other languages are translations of the original instructions.

Technical engineering data

- A **subset** of the latest technical data is available on the regional Daikin website (publicly accessible).
- The **full set** of the latest technical data is available on the Daikin Business Portal (authentication required).

1.2 Meaning of warnings and symbols



DANGER

Indicates a situation that results in death or serious injury.

**DANGER: RISK OF ELECTROCUTION**

Indicates a situation that could result in electrocution.

**DANGER: RISK OF BURNING/SCALDING**

Indicates a situation that could result in burning/scalding because of extreme hot or cold temperatures.

**DANGER: RISK OF EXPLOSION**

Indicates a situation that could result in explosion.

**WARNING**

Indicates a situation that could result in death or serious injury.

**WARNING: FLAMMABLE MATERIAL****CAUTION**

Indicates a situation that could result in minor or moderate injury.

**NOTICE**

Indicates a situation that could result in equipment or property damage.

**INFORMATION**

Indicates useful tips or additional information.

Symbols used on the unit:

Symbol	Explanation
	Before installation, read the installation and operation manual, and the wiring instruction sheet.
	Before performing maintenance and service tasks, read the service manual.
	For more information, see the installer and user reference guide.
	The unit contains rotating parts. Be careful when servicing or inspecting the unit.

Symbols used in the documentation:

Symbol	Explanation
	Indicates a figure title or a reference to it. Example: "▲ 1–3 Figure title" means "Figure 3 in chapter 1".
	Indicates a table title or a reference to it. Example: "■ 1–3 Table title" means "Table 3 in chapter 1".

2 General safety precautions

In this chapter

2.1	For the installer.....	8
2.1.1	General.....	8
2.1.2	Installation site.....	9
2.1.3	Refrigerant — in case of R410A or R32.....	9
2.1.4	Electrical.....	11

2.1 For the installer

2.1.1 General

If you are NOT sure how to install or operate the unit, contact your dealer.



DANGER: RISK OF BURNING/SCALDING

- Do NOT touch the refrigerant piping, water piping or internal parts during and immediately after operation. It could be too hot or too cold. Give it time to return to normal temperature. If you MUST touch it, wear protective gloves.
- Do NOT touch any accidental leaking refrigerant.



WARNING

Improper installation or attachment of equipment or accessories could result in electrical shock, short-circuit, leaks, fire or other damage to the equipment. ONLY use accessories, optional equipment and spare parts made or approved by Daikin unless otherwise specified.



WARNING

Make sure installation, testing and applied materials comply with applicable legislation (on top of the instructions described in the Daikin documentation).



WARNING

Tear apart and throw away plastic packaging bags so that nobody, especially children, can play with them. **Possible consequence:** suffocation.



WARNING

Provide adequate measures to prevent that the unit can be used as a shelter by small animals. Small animals that make contact with electrical parts can cause malfunctions, smoke or fire.



CAUTION

Wear adequate personal protective equipment (protective gloves, safety glasses,...) when installing, maintaining or servicing the system.



CAUTION

Do NOT touch the air inlet or aluminium fins of the unit.



CAUTION

- Do NOT place any objects or equipment on top of the unit.
- Do NOT sit, climb or stand on the unit.

**NOTICE**

Works executed on the outdoor unit are best done under dry weather conditions to avoid water ingress.

In accordance with the applicable legislation, it might be necessary to provide a logbook with the product containing at least: information on maintenance, repair work, results of tests, stand-by periods,...

Also, at least, following information **MUST** be provided at an accessible place at the product:

- Instructions for shutting down the system in case of an emergency
- Name and address of fire department, police and hospital
- Name, address and day and night telephone numbers for obtaining service

In Europe, EN378 provides the necessary guidance for this logbook.

2.1.2 Installation site

- Provide sufficient space around the unit for servicing and air circulation.
- Make sure the installation site withstands the weight and vibration of the unit.
- Make sure the area is well ventilated. Do NOT block any ventilation openings.
- Make sure the unit is level.

Do NOT install the unit in the following places:

- In potentially explosive atmospheres.
- In places where there is machinery that emits electromagnetic waves. Electromagnetic waves may disturb the control system, and cause malfunction of the equipment.
- In places where there is a risk of fire due to the leakage of flammable gases (example: thinner or gasoline), carbon fibre, ignitable dust.
- In places where corrosive gas (example: sulphurous acid gas) is produced. Corrosion of copper pipes or soldered parts may cause the refrigerant to leak.

2.1.3 Refrigerant — in case of R410A or R32

If applicable. See the installation manual or installer reference guide of your application for more information.

**DANGER: RISK OF EXPLOSION**

Pump down – Refrigerant leakage. If you want to pump down the system, and there is a leak in the refrigerant circuit:

- Do NOT use the unit's automatic pump down function, with which you can collect all refrigerant from the system into the outdoor unit. **Possible consequence:** Self-combustion and explosion of the compressor because of air going into the operating compressor.
- Use a separate recovery system so that the unit's compressor does NOT have to operate.

**WARNING**

During tests, NEVER pressurise the product with a pressure higher than the maximum allowable pressure (as indicated on the nameplate of the unit).



WARNING

Take sufficient precautions in case of refrigerant leakage. If refrigerant gas leaks, ventilate the area immediately. Possible risks:

- Excessive refrigerant concentrations in a closed room can lead to oxygen deficiency.
- Toxic gas might be produced if refrigerant gas comes into contact with fire.



WARNING

ALWAYS recover the refrigerant. Do NOT release directly into the environment. Use a vacuum pump to evacuate the installation.



WARNING

Make sure there is no oxygen in the system. Refrigerant may ONLY be charged after performing the leak test and the vacuum drying.

Possible consequence: Self-combustion and explosion of the compressor because of oxygen going into the operating compressor.



NOTICE

- To avoid compressor breakdown, do NOT charge more than the specified amount of refrigerant.
- When the refrigerant system is to be opened, refrigerant MUST be treated according to the applicable legislation.



NOTICE

Make sure refrigerant piping installation complies with applicable legislation. In Europe, EN378 is the applicable standard.



NOTICE

Make sure the field piping and connections are NOT subjected to stress.



NOTICE

After all the piping has been connected, make sure there is no gas leak. Use nitrogen to perform a gas leak detection.

- In case recharge is required, see the nameplate or the refrigerant charge label of the unit. It states the type of refrigerant and necessary amount.
- Whether the unit is factory charged with refrigerant or non-charged, in both cases you might need to charge additional refrigerant, depending on the pipe sizes and pipe lengths of the system.
- ONLY use tools exclusively for the refrigerant type used in the system, this to ensure pressure resistance and prevent foreign materials from entering into the system.
- Charge the liquid refrigerant as follows:

If	Then
A siphon tube is present (i.e., the cylinder is marked with "Liquid filling siphon attached")	Charge with the cylinder upright. 

If	Then
A siphon tube is NOT present	Charge with the cylinder upside down. 

- Open refrigerant cylinders slowly.
- Charge the refrigerant in liquid form. Adding it in gas form may prevent normal operation.

**CAUTION**

When the refrigerant charging procedure is done or when pausing, close the valve of the refrigerant tank immediately. If the valve is NOT closed immediately, remaining pressure might charge additional refrigerant. **Possible consequence:** Incorrect refrigerant amount.

2.1.4 Electrical

**DANGER: RISK OF ELECTROCUTION**

- Turn OFF all power supply before removing the switch box cover, connecting electrical wiring or touching electrical parts.
- Disconnect the power supply for more than 10 minutes, and measure the voltage at the terminals of main circuit capacitors or electrical components before servicing. The voltage MUST be less than 50 V DC before you can touch electrical components. For the location of the terminals, see the wiring diagram.
- Do NOT touch electrical components with wet hands.
- Do NOT leave the unit unattended when the service cover is removed.

**WARNING**

If NOT factory installed, a main switch or other means for disconnection, having a contact separation in all poles providing full disconnection under overvoltage category III condition, MUST be installed in the fixed wiring.

**WARNING**

- ONLY use copper wires.
- Make sure the field wiring complies with the national wiring regulations.
- All field wiring MUST be performed in accordance with the wiring diagram supplied with the product.
- NEVER squeeze bundled cables and make sure they do NOT come in contact with the piping and sharp edges. Make sure no external pressure is applied to the terminal connections.
- Make sure to install earth wiring. Do NOT earth the unit to a utility pipe, surge absorber, or telephone earth. Incomplete or incorrect earthing may cause electrical shock.
- Make sure to use a dedicated power circuit. NEVER use a power supply shared by another appliance.
- Make sure to install the required fuses or circuit breakers.
- Make sure to install an earth leakage protector. Failure to do so may cause electrical shock or fire.
- When installing the earth leakage protector, make sure it is compatible with the inverter (resistant to high frequency electric noise) to avoid unnecessary opening of the earth leakage protector.



WARNING

- After finishing the electrical work, confirm that each electrical component and terminal inside the switch box is connected securely.
- Make sure all covers are closed before starting up the unit.



CAUTION

- When connecting the power supply: connect the earth cable first, before making the current-carrying connections.
- When disconnecting the power supply: disconnect the current-carrying cables first, before separating the earth connection.
- The length of the conductors between the power supply stress relief and the terminal block itself **MUST** be as such that the current-carrying wires are tautened before the earth wire is in case the power supply is pulled loose from the stress relief.



NOTICE

Precautions when laying power wiring:



- Do NOT connect wiring of different thicknesses to the power terminal block (slack in the power wiring may cause abnormal heat).
- When connecting wiring which is the same thickness, do as shown in the figure above.
- For wiring, use the designated power wire and connect firmly, then secure to prevent outside pressure being exerted on the terminal board.
- Use an appropriate screwdriver for tightening the terminal screws. A screwdriver with a small head will damage the head and make proper tightening impossible.
- Over-tightening the terminal screws may break them.

Install power cables at least 1 meter away from televisions or radios to prevent interference. Depending on the radio waves, a distance of 1 meter may NOT be sufficient.



NOTICE

ONLY applicable if the power supply is three-phase, and the compressor has an ON/OFF starting method.

If there exists the possibility of reversed phase after a momentary black out and the power goes ON and OFF while the product is operating, attach a reversed phase protection circuit locally. Running the product in reversed phase can break the compressor and other parts.

3 Specific installer safety instructions

Always observe the following safety instructions and regulations.



WARNING

Tear apart and throw away plastic packaging bags so that nobody, especially children, can play with them. **Possible consequence:** suffocation.



CAUTION

Appliance NOT accessible to the general public, install it in a secured area, protected from easy access.

This unit, both indoor and outdoor, is suitable for installation in a commercial and light industrial environment.



CAUTION

Excessive refrigerant concentrations in a closed room can lead to oxygen deficiency.



DANGER: RISK OF ELECTROCUTION

Do NOT leave the unit unattended when the service cover is removed.



DANGER: RISK OF BURNING/SCALDING



DANGER: RISK OF ELECTROCUTION



WARNING

Take sufficient precautions in case of refrigerant leakage. If refrigerant gas leaks, ventilate the area immediately. Possible risks:

- Excessive refrigerant concentrations in a closed room can lead to oxygen deficiency.
- Toxic gas might be produced if refrigerant gas comes into contact with fire.



WARNING

ALWAYS recover the refrigerant. Do NOT release directly into the environment. Use a vacuum pump to evacuate the installation.



WARNING

During tests, NEVER pressurise the product with a pressure higher than the maximum allowable pressure (as indicated on the nameplate of the unit).



CAUTION

Do NOT vent gases into the atmosphere.



WARNING

Any gas or oil remaining inside the stop valve may blow off the pinched piping. If these instructions are NOT followed correctly it may result in property damage or personal injury, which may be serious depending on the circumstances.



WARNING



NEVER remove the pinched piping by brazing.

Any gas or oil remaining inside the stop valve may blow off the pinched piping.



WARNING

- ONLY use R410A as refrigerant. Other substances may cause explosions and accidents.
- R410A contains fluorinated greenhouse gases. Its global warming potential (GWP) value is 2087.5. Do NOT vent these gases into the atmosphere.
- When charging refrigerant, ALWAYS use protective gloves and safety glasses.



CAUTION

Do NOT push or place redundant cable length into the unit.



WARNING

- If the power supply has a missing or wrong N-phase, equipment might break down.
- Establish proper earthing. Do NOT earth the unit to a utility pipe, surge absorber, or telephone earth. Incomplete earthing may cause electrical shocks.
- Install the required fuses or circuit breakers.
- Secure the electrical wiring with cable ties so that the cables do NOT come in contact with sharp edges or piping, particularly on the high-pressure side.
- Do NOT install a phase advancing capacitor, because this unit is equipped with an inverter. A phase advancing capacitor will reduce performance and may cause accidents.



WARNING

- All wiring MUST be performed by an authorised electrician and MUST comply with the national wiring regulation.
- Make electrical connections to the fixed wiring.
- All components procured on-site and all electrical construction MUST comply with the applicable legislation.



WARNING

ALWAYS use multicore cable for power supply cables.



WARNING

Do NOT extend the power supply or the interconnection cable by using wire connectors, wire connection clamps, taped wires, extension cords.

These can cause overheating, electric shock or fire.

**CAUTION**

- When connecting the power supply: connect the earth cable first, before making the current-carrying connections.
- When disconnecting the power supply: disconnect the current-carrying cables first, before separating the earth connection.
- The length of the conductors between the power supply stress relief and the terminal block itself **MUST** be as such that the current-carrying wires are tautened before the earth wire is in case the power supply is pulled loose from the stress relief.

**CAUTION**

Do NOT perform the test operation while working on the indoor unit(s).

When performing the test operation, **NOT ONLY** the outdoor unit, but the connected indoor unit will operate as well. Working on an indoor unit while performing a test operation is dangerous.

**CAUTION**

Do **NOT** insert fingers, rods or other objects into the air inlet or outlet. Do **NOT** remove the fan guard. When the fan is rotating at high speed, it will cause injury.

For the user

4 User safety instructions

Always observe the following safety instructions and regulations.

In this chapter

4.1	General.....	17
4.2	Instructions for safe operation.....	18

4.1 General



WARNING

If you are NOT sure how to operate the unit, contact your installer.



WARNING

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children SHALL NOT play with the appliance.

Cleaning and user maintenance SHALL NOT be made by children without supervision.



WARNING

To prevent electrical shocks or fire:

- Do NOT rinse the unit.
- Do NOT operate the unit with wet hands.
- Do NOT place any objects containing water on the unit.



CAUTION

- Do NOT place any objects or equipment on top of the unit.
- Do NOT sit, climb or stand on the unit.

- Units are marked with the following symbol:



This means that electrical and electronic products may NOT be mixed with unsorted household waste. Do NOT try to dismantle the system yourself: dismantling the system, treatment of the refrigerant, of oil and of other parts MUST be done by an authorised installer and MUST comply with applicable legislation.

Units MUST be treated at a specialised treatment facility for reuse, recycling and recovery. By ensuring this product is disposed of correctly, you will help to prevent potential negative consequences for the environment and human health. For more information, contact your installer or local authority.

- Batteries are marked with the following symbol:



This means that the batteries may NOT be mixed with unsorted household waste. If a chemical symbol is printed beneath the symbol, this chemical symbol means that the battery contains a heavy metal above a certain concentration.

Possible chemical symbols are: Pb: lead (>0.004%).

Waste batteries MUST be treated at a specialised treatment facility for reuse. By ensuring waste batteries are disposed of correctly, you will help to prevent potential negative consequences for the environment and human health.

4.2 Instructions for safe operation



CAUTION

- NEVER touch the internal parts of the controller.
- Do NOT remove the front panel. Some parts inside are dangerous to touch and appliance problems may happen. For checking and adjusting the internal parts, contact your dealer.



CAUTION

Do NOT operate the system when using a room fumigation-type insecticide. Chemicals could collect in the unit, and endanger the health of people who are hypersensitive to chemicals.



CAUTION

It is unhealthy to expose your body to the air flow for a long time.



CAUTION

To avoid oxygen deficiency, ventilate the room sufficiently if equipment with burner is used together with the system.



CAUTION

Do NOT insert fingers, rods or other objects into the air inlet or outlet. Do NOT remove the fan guard. When the fan is rotating at high speed, it will cause injury.



CAUTION: Pay attention to the fan!

It is dangerous to inspect the unit while the fan is running.
Make sure to turn OFF the main switch before executing any maintenance task.



CAUTION

After a long use, check the unit stand and fitting for damage. If damaged, the unit may fall and result in injury.



CAUTION

NEVER expose little children, plants or animals directly to the airflow.

**CAUTION**

Do NOT touch the heat exchanger fins. These fins are sharp and could result in cutting injuries.

**WARNING**

This unit contains electrical and hot parts.

**WARNING**

Before operating the unit, be sure the installation has been carried out correctly by an installer.

**WARNING**

NEVER touch the air outlet or the horizontal blades while the swing flap is in operation. Fingers may become caught or the unit may break down.

**WARNING**

NEVER replace a fuse with a fuse of a wrong ampere ratings or other wires when a fuse blows out. Use of wire or copper wire may cause the unit to break down or cause a fire.

**WARNING**

- Do NOT modify, disassemble, remove, reinstall or repair the unit yourself as incorrect dismantling or installation may cause an electrical shock or fire. Contact your dealer.
- In case of accidental refrigerant leaks, make sure there are no naked flames. The refrigerant itself is entirely safe, non-toxic and non-combustible, but it will generate toxic gas when it accidentally leaks into a room where combustion air from fan heaters, gas cookers, etc. is present. ALWAYS have qualified service personnel confirm that the point of leakage has been repaired or corrected before resuming operation.

**WARNING**

Stop operation and shut OFF the power if anything unusual occurs (burning smells etc.).

Leaving the unit running under such circumstances may cause breakage, electrical shock or fire. Contact your dealer.

**WARNING**

- The refrigerant in the system is safe and normally does NOT leak. If the refrigerant leaks in the room, contact with a fire of a burner, a heater or a cooker may result in a harmful gas.
- Turn OFF any combustible heating devices, ventilate the room and contact the dealer where you purchased the unit.
- Do NOT use the system until a service person confirms that the portion where the refrigerant leaks is repaired.

**WARNING**

NEVER inspect or service the unit by yourself. Ask a qualified service person to perform this work.

5 About the system

The indoor unit part of this VRV IV-S heat pump system can be used for heating/cooling applications. The type of indoor unit which can be used depends on the outdoor units series.

In general following type of indoor units can be connected to a VRV IV-S heat pump system (not exhaustive list, depending on outdoor unit model and indoor unit model combinations):

- VRV direct expansion indoor units (air to air applications).
- RA direct expansion indoor units (air to air applications).
- AHU (air to air applications): EKEXV(A)-kit is required.
- Air curtain (air to air applications): See the combination table in the databook for more information.

AHU unit connection in pair to VRV IV-S heat pump outdoor unit is supported.

AHU unit connection in multi to VRV IV-S heat pump outdoor unit is supported, even combined with VRV IV-S direct expansion indoor unit(s).

For more specifications, see technical engineering data.



WARNING

- Do NOT modify, disassemble, remove, reinstall or repair the unit yourself as incorrect dismantling or installation may cause an electrical shock or fire. Contact your dealer.
- In case of accidental refrigerant leaks, make sure there are no naked flames. The refrigerant itself is entirely safe, non-toxic and non-combustible, but it will generate toxic gas when it accidentally leaks into a room where combustion air from fan heaters, gas cookers, etc. is present. ALWAYS have qualified service personnel confirm that the point of leakage has been repaired or corrected before resuming operation.



NOTICE

Do NOT use the system for other purposes. In order to avoid any quality deterioration, do NOT use the unit for cooling precision instruments, food, plants, animals, or works of art.



NOTICE

For future modifications or expansions of your system:

A full overview of allowable combinations (for future system extensions) is available in technical engineering data and should be consulted. Contact your installer to receive more information and professional advice.



INFORMATION


- Combination of VRV DX and RA DX indoor units is not allowed.
- Combination of RA DX and AHU indoor units is not allowed.
- Combination of RA DX and air curtain indoor units is not allowed.

5.1 System layout



INFORMATION

The following figure is an example and may NOT completely match your system layout.

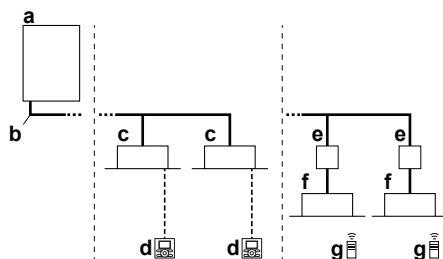

- a** VRV IV-S Heat pump outdoor unit
- b** Refrigerant piping
- c** VRV direct expansion (DX) indoor unit
- d** User interface (dedicated depending on indoor unit type)
- e** BP box (required to connect Residential Air (RA) or Sky Air (SA) direct expansion (DX) indoor units)
- f** Residential Air (RA) direct expansion (DX) indoor units
- g** User interface (wireless, dedicated depending on indoor unit type)

6 User interface



CAUTION

- NEVER touch the internal parts of the controller.
- Do NOT remove the front panel. Some parts inside are dangerous to touch and appliance problems may happen. For checking and adjusting the internal parts, contact your dealer.

This operation manual offers a non-exhaustive overview of the main functions of the system.

Detailed information on required actions to achieve certain functions can be found in the dedicated installation and operation manual of the indoor unit.

Refer to the operation manual of the installed user interface.

7 Operation

In this chapter

7.1	Before operation	23
7.2	Operation range.....	23
7.3	Operating the system	24
7.3.1	About operating the system	24
7.3.2	About cooling, heating, fan only, and automatic operation	24
7.3.3	About the heating operation	24
7.3.4	To operate the system (WITHOUT cool/heat changeover remote control switch)	25
7.3.5	To operate the system (WITH cool/heat changeover remote control switch)	25
7.4	Using the dry program.....	26
7.4.1	About the dry program	26
7.4.2	To use the dry program (WITHOUT cool/heat changeover remote control switch).....	26
7.4.3	To use the dry program (WITH cool/heat changeover remote control switch)	27
7.5	Adjusting the air flow direction.....	27
7.5.1	About the air flow flap	27
7.6	Setting the master user interface	28
7.6.1	About setting the master user interface	28
7.6.2	To designate the master user interface (VRV DX)	29
7.6.3	To designate the master user interface (RA DX)	29
7.6.4	About control systems	29

7.1 Before operation



CAUTION

See "4 User safety instructions" [▶ 17] to acknowledge all related safety instructions.



NOTICE

NEVER inspect or service the unit by yourself. Ask a qualified service person to perform this work.



NOTICE

Turn ON the power 6 hours before operation in order to have power running to the crankcase heater and to protect the compressor.

This operation manual is for the following systems with standard control. Before initiating operation, contact your dealer for the operation that corresponds to your system type and mark. If your installation has a customised control system, ask your dealer for the operation that corresponds to your system.

Operation modes (depending on indoor unit type):

- Heating and cooling (air to air).
- Fan only operation (air to air).

Dedicated functions exist depending on the type of indoor unit, refer to dedicated installation/operation manual for more information.

7.2 Operation range

Use the system in the following temperature and humidity ranges for safe and effective operation.

	Cooling	Heating
Outdoor temperature	–5~46°C DB	–20~21°C DB –20~15.5°C WB
Indoor temperature	21~32°C DB 14~25°C WB	15~27°C DB
Indoor humidity	≤80% ^(a)	

^(a) To avoid condensation and water dripping out of the unit. If the temperature or the humidity is beyond these conditions, safety devices may be put in action and the air conditioner may not operate.

Above operation range is only valid in case direct expansion indoor units are connected to the VRV system.

Special operation ranges are valid in case of using AHU. They can be found in the installation/operation manual of the dedicated unit. Latest information can be found in the technical engineering data.

7.3 Operating the system

7.3.1 About operating the system

- Operation procedure varies according to the combination of outdoor unit and user interface.
- To protect the unit, turn on the main power switch 6 hours before operation.

7.3.2 About cooling, heating, fan only, and automatic operation

- Changeover cannot be made with a user interface whose display shows  "changeover under centralised control" (refer to installation and operation manual of the user interface).
- When the display  "changeover under centralised control" flashes, refer to ["7.6.1 About setting the master user interface"](#) [▶ 28].
- The fan may keep on running for about 1 minute after the heating operation stops.
- The air flow rate may adjust itself depending on the room temperature or the fan may stop immediately. This is not a malfunction.

7.3.3 About the heating operation

It may take longer to reach the set temperature for general heating operation than for cooling operation.

The following operation is performed in order to prevent the heating capacity from dropping or cold air from blowing.

Defrost operation

In heating operation, freezing of the outdoor unit's air cooled coil increases over time, restricting the energy transfer to the outdoor unit's coil. Heating capability decreases and the system needs to go into defrost operation to be able to remove frost from the outdoor unit's coil. During defrost operation the heating capacity on the indoor unit side will temporarily drop until defrosting is completed. After defrosting, the unit will regain its full heating capacity.

The indoor unit will stop fan operation, the refrigerant cycle will reverse and energy from inside the building will be used to defrost the outdoor unit coil.

The indoor unit will indicate defrost operation on the display .

Hot start

In order to prevent cold air from blowing out of an indoor unit at the start of heating operation, the indoor fan is automatically stopped. The display of the user interface shows . It may take some time before the fan starts. This is not a malfunction.



INFORMATION

- The heating capacity drops when the outside temperature falls. If this happens, use another heating device together with the unit. (When using together with appliances that produce open fire, ventilate the room constantly). Do not place appliances that produce open fire in places exposed to the air flow from the unit or under the unit.
- It takes some time to heat up the room from the time the unit is started since the unit uses a hot-air circulating system to heat the entire room.
- If the hot air rises to the ceiling, leaving the area above the floor cold, we recommend that you use the circulator (the indoor fan for circulating air). Contact your dealer for details.

7.3.4 To operate the system (WITHOUT cool/heat changeover remote control switch)

- 1 Press the operation mode selector button on the user interface several times and select the operation mode of your choice.


-  Cooling operation
-  Heating operation
-  Fan only operation

- 2 Press the ON/OFF button on the user interface.

Result: The operation lamp lights up and the system starts operating.

7.3.5 To operate the system (WITH cool/heat changeover remote control switch)

Overview of the changeover remote control switch

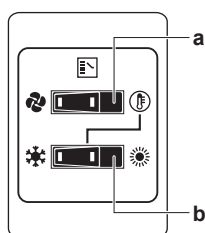

- a** FAN ONLY/AIR CONDITIONING SELECTOR SWITCH

Set the switch to  for fan only operation or to  for heating or cooling operation.

- b** COOL/HEAT CHANGEOVER SWITCH


Set the switch to  for cooling or to  for heating

Note: In case a cool/heat changeover remote control switch is used, the position of DIP switch 1 (DS1-1) on the main PCB needs to be switched to the ON position.


To start

- 1 Select operation mode with the cool/heat changeover switch as follows:


Cooling operation

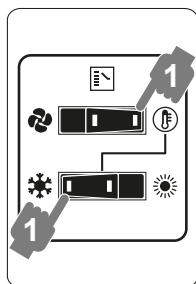

Heating operation

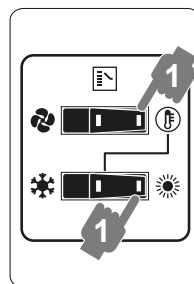

Fan only operation

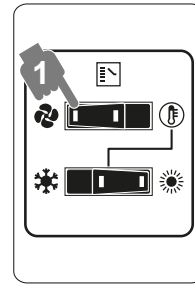

- 2 Press the ON/OFF button on the user interface.

Result: The operation lamp lights up and the system starts operating.

To stop

- 3 Press the ON/OFF button on the user interface once again.

Result: The operation lamp goes out and the system stops operating.



NOTICE

Do not turn off power immediately after the unit stops, but wait for at least 5 minutes.

To adjust

For programming temperature, fan speed and air flow direction refer to the operation manual of the user interface.

7.4 Using the dry program

7.4.1 About the dry program

- The function of this program is to decrease the humidity in your room with minimal temperature decrease (minimal room cooling).
- The micro computer automatically determines temperature and fan speed (cannot be set by the user interface).
- The system does not go into operation if the room temperature is low (<20°C).

7.4.2 To use the dry program (WITHOUT cool/heat changeover remote control switch)

To start

- 1 Press the operation mode selector button on the user interface several times and select (program dry operation).
- 2 Press the ON/OFF button of the user interface.

Result: The operation lamp lights up and the system starts operating.

- 3 Press the air flow direction adjust button (only for double-flow, multi-flow, corner, ceiling-suspended and wall-mounted). Refer to ["7.5 Adjusting the air flow direction"](#) [▶ 27] for details.

To stop

- 4 Press the ON/OFF button on the user interface once again.

Result: The operation lamp goes out and the system stops operating.


**NOTICE**

Do not turn off power immediately after the unit stops, but wait for at least 5 minutes.

7.4.3 To use the dry program (WITH cool/heat changeover remote control switch)

To start

- 1 Select cooling operation mode with the cool/heat changeover remote control switch.

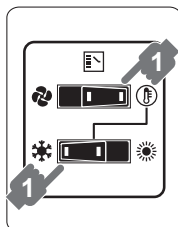

- 2 Press the operation mode selector button on the user interface several times and select (program dry operation).
- 3 Press the ON/OFF button of the user interface.
Result: The operation lamp lights up and the system starts operating.
- 4 Press the air flow direction adjust button (only for double-flow, multi-flow, corner, ceiling-suspended and wall-mounted). Refer to "7.5 Adjusting the air flow direction" [▶ 27] for details.

To stop

- 5 Press the ON/OFF button on the user interface once again.

Result: The operation lamp goes out and the system stops operating.

**NOTICE**

Do not turn off power immediately after the unit stops, but wait for at least 5 minutes.

7.5 Adjusting the air flow direction

Refer to the operation manual of the user interface.

7.5.1 About the air flow flap

Air flow flap types:

- Double flow + multi-flow units
- Corner units
- Ceiling suspended units
- Wall-mounted units

For the following conditions, a micro computer controls the air flow direction which may be different from the display.

Cooling	Heating
When the room temperature is lower than the set temperature.	- When starting operation. - When the room temperature is higher than the set temperature. - At defrost operation.
- When operating continuously at horizontal air flow direction. - When continuous operation with downward air flow is performed at the time of cooling with a ceiling-suspended or a wall-mounted unit, the micro computer may control the flow direction, and then the user interface indication will also change.	

The air flow direction can be adjusted in one of the following ways:

- The air flow flap itself adjusts its position.
- The air flow direction can be fixed by the user.
- Automatic  and desired position .



WARNING

NEVER touch the air outlet or the horizontal blades while the swing flap is in operation. Fingers may become caught or the unit may break down.



NOTICE

- The movable limit of the flap is changeable. Contact your dealer for details. (only for double-flow, multi-flow, corner, ceiling-suspended and wall-mounted).
- Avoid operating in the horizontal direction . It may cause dew or dust to settle on the ceiling or flap.


7.6 Setting the master user interface

7.6.1 About setting the master user interface



INFORMATION

The following figure is an example and may NOT completely match your system layout.

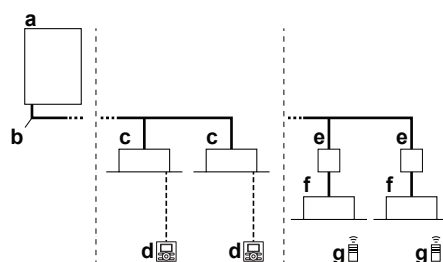

- a** VRV IV-S Heat pump outdoor unit
- b** Refrigerant piping
- c** VRV direct expansion (DX) indoor unit
- d** User interface (dedicated depending on indoor unit type)
- e** BP box (required to connect Residential Air (RA) or Sky Air (SA) direct expansion (DX) indoor units)
- f** Residential Air (RA) direct expansion (DX) indoor units
- g** User interface (wireless, dedicated depending on indoor unit type)

When the system is installed as shown in the figure above, it is necessary to designate one of the user interfaces as the master user interface.

The displays of slave user interfaces show  (changeover under centralised control) and slave user interfaces automatically follow the operation mode directed by the master user interface.

Only the master user interface can select heating or cooling mode (cooling/heating masterhood).

7.6.2 To designate the master user interface (VRV DX)

In case only VRV DX indoor units are connected to the VRV system:

- 1 Press the operation mode selector button of the current master user interface for 4 seconds. In case this procedure was not yet performed, the procedure can be executed on the first user interface operated.

Result: The display showing  (changeover under centralised control) of all slave user interfaces connected to the same outdoor unit flashes.

- 2 Press the operation mode selector button of the controller that you wish to designate as the master user interface.

Result: Designation is completed. This user interface is designated as the master user interface and the display showing  (changeover under centralised control) vanishes. The displays of other user interfaces show  (changeover under centralised control).

7.6.3 To designate the master user interface (RA DX)

In case only RA DX indoor units are connected to the VRV IV-S system:

- 1 Stop all indoor units.
- 2 When the system is not operating (all indoor units thermo OFF), you can define the master RA DX indoor unit by addressing that unit with infrared user interface (instruct thermo ON in desired mode).

The only way to change the master unit is by repeating the previous procedure. A cool/heat switchover (or opposite) is only possible by changing the operation mode of the defined master indoor unit.

7.6.4 About control systems



NOTICE

Contact your dealer in case of changing the combination or setting of group control and two user interface control systems.

8 Energy saving and optimum operation

Observe the following precautions to ensure the system operates properly.

- Adjust the air outlet properly and avoid direct air flow to room inhabitants.
- Adjust the room temperature properly for a comfortable environment. Avoid excessive heating or cooling.
- Prevent direct sunlight from entering a room during cooling operation by using curtains or blinds.
- Ventilate often. Extended use requires special attention to ventilation.
- Keep doors and windows closed. If the doors and windows remain open, air will flow out of your room causing a decrease in the cooling or heating effect.
- Be careful NOT to cool or heat too much. To save energy, keep the temperature setting at a moderate level.
- NEVER place objects near the air inlet or the air outlet of the unit. Doing so may cause a reduced heating/cooling effect or stop operation.
- Turn off the main power supply switch to the unit when the unit is not used for longer periods of time. If the switch is on, it consumes electricity. Before restarting the unit, turn on the main power supply switch 6 hours before operation to ensure smooth running. (Refer to "Maintenance" in the indoor unit manual.)
- When the display shows  (time to clean the air filter), ask a qualified service person to clean the filters. (Refer to "Maintenance" in the indoor unit manual.)
- Keep the indoor unit and user interface at least 1 m away from televisions, radios, stereos, and other similar equipment. Failing to do so may cause static or distorted pictures.
- Do NOT place items under the indoor unit, as they may be damaged by water.
- Condensation may form if the humidity is above 80% or if the drain outlet gets blocked.

This heat pump system is equipped with advanced energy saving functionality. Depending on the priority, emphasis can be put on energy saving or comfort level. Several parameters can be selected, resulting in the optimal balance between energy consumption and comfort for the particular application.

Several patterns are available and roughly explained below. Contact your installer or dealer for advice or to modify the parameters to the needs of your building.

Detailed information is given for the installer in the installation manual. He can help you to realize the best balance between energy consumption and comfort.

In this chapter

8.1	Available main operation methods.....	30
8.2	Available comfort settings.....	31

8.1 Available main operation methods

Basic

The refrigerant temperature is fixed independent from the situation.

Automatic

The refrigerant temperature is set depending on the outdoor ambient conditions. As such adjusting the refrigerant temperature to match the required load (which is also related to the outdoor ambient conditions).

E.g., when your system is operating in cooling, you do not need as much cooling under low outdoor ambient temperatures (e.g., 25°C) as under high outdoor ambient temperatures (e.g., 35°C). Using this idea, the system automatically starts increasing its refrigerant temperature, automatically reducing the delivered capacity and increasing the system's efficiency.

Hi-sensible/economic (cooling/heating)

The refrigerant temperature is set higher/lower (cooling/heating) compared to basic operation. The focus under high sensible mode is comfort feeling for the customer.

The selection method of indoor units is important and has to be considered as the available capacity is not the same as under basic operation.

For details concerning to Hi-sensible applications, please contact your installer.

8.2 Available comfort settings

For each of above modes a comfort level can be selected. The comfort level is related to the timing and the effort (energy consumption) which is put in achieving a certain room temperature by temporarily changing the refrigerant temperature to different values in order to achieve requested conditions more quickly.

- Powerful
- Quick
- Mild
- Eco

9 Maintenance and service



WARNING

NEVER replace a fuse with a fuse of a wrong ampere ratings or other wires when a fuse blows out. Use of wire or copper wire may cause the unit to break down or cause a fire.



CAUTION: Pay attention to the fan!

It is dangerous to inspect the unit while the fan is running.
Make sure to turn OFF the main switch before executing any maintenance task.



CAUTION

Do NOT insert fingers, rods or other objects into the air inlet or outlet. Do NOT remove the fan guard. When the fan is rotating at high speed, it will cause injury.



CAUTION

After a long use, check the unit stand and fitting for damage. If damaged, the unit may fall and result in injury.



WARNING

NEVER inspect or service the unit by yourself. Ask a qualified service person to perform this work.



NOTICE

Do NOT wipe the controller operation panel with benzine, thinner, chemical dust cloth, etc. The panel may get discoloured or the coating peeled off. If it is heavily dirty, soak a cloth in water-diluted neutral detergent, squeeze it well and wipe the panel clean. Wipe it with another dry cloth.

In this chapter

9.1	Maintenance after a long stop period	32
9.2	Maintenance before a long stop period	33
9.3	About the refrigerant	33
9.4	After-sales service and warranty.....	33
9.4.1	Warranty period.....	33
9.4.2	Recommended maintenance and inspection.....	34
9.4.3	Recommended maintenance and inspection cycles	34
9.4.4	Shortened maintenance and replacement cycles.....	35

9.1 Maintenance after a long stop period

E.g., at the beginning of the season.

- Check and remove everything that might be blocking inlet and outlet vents of indoor units and outdoor units.
- Clean air filters and casings of indoor units. Contact your installer or maintenance person to clean air filters and casings of the indoor unit. Maintenance tips and procedures for cleaning are provided in the installation/operation manuals of dedicated indoor units. Make sure to install cleaned air filters back in the same position.

- Turn on the power at least 6 hours before operating the system in order to ensure smoother operation. As soon as the power is turned on, the user interface display appears.

9.2 Maintenance before a long stop period

E.g., at the end of the season.

- Let the indoor units run in fan-only operation for about half a day in order to dry the interior of the units. Refer to "[7.3.2 About cooling, heating, fan only, and automatic operation](#)" [▶ 24] for details on fan-only operation.
- Turn off the power. The user interface display disappears.
- Clean air filters and casings of indoor units. Contact your installer or maintenance person to clean air filters and casings of the indoor unit. Maintenance tips and procedures for cleaning are provided in the installation/operation manuals of dedicated indoor units. Make sure to install cleaned air filters back in the same position.

9.3 About the refrigerant

This product contains fluorinated greenhouse gases. Do NOT vent gases into the atmosphere.

Refrigerant type: R410A

Global warming potential (GWP) value: 2087.5



NOTICE

Applicable legislation on **fluorinated greenhouse gases** requires that the refrigerant charge of the unit is indicated both in weight and CO₂ equivalent.

Formula to calculate the quantity in CO₂ equivalent tonnes: GWP value of the refrigerant × total refrigerant charge [in kg]/1000

Contact your installer for more information.



WARNING

- The refrigerant in the system is safe and normally does NOT leak. If the refrigerant leaks in the room, contact with a fire of a burner, a heater or a cooker may result in a harmful gas.
- Turn OFF any combustible heating devices, ventilate the room and contact the dealer where you purchased the unit.
- Do NOT use the system until a service person confirms that the portion where the refrigerant leaks is repaired.

9.4 After-sales service and warranty

9.4.1 Warranty period

- This product includes a warranty card that was filled in by the dealer at the time of installation. The completed card has to be checked by the customer and stored carefully.
- If repairs to the product are necessary within the warranty period, contact your dealer and keep the warranty card at hand.

9.4.2 Recommended maintenance and inspection

Since dust collects when using the unit for several years, performance of the unit will deteriorate to some extent. As taking apart and cleaning interiors of units requires technical expertise and in order to ensure the best possible maintenance of your units, we recommend to enter into a maintenance and inspection contract on top of normal maintenance activities. Our network of dealers has access to a permanent stock of essential components in order to keep your unit in operation as long as possible. Contact your dealer for more information.

When asking your dealer for an intervention, always state:

- The complete model name of the unit.
- The manufacturing number (stated on the nameplate of the unit).
- The installation date.
- The symptoms or malfunction, and details of the defect.

**WARNING**

- Do NOT modify, disassemble, remove, reinstall or repair the unit yourself as incorrect dismantling or installation may cause an electrical shock or fire. Contact your dealer.
- In case of accidental refrigerant leaks, make sure there are no naked flames. The refrigerant itself is entirely safe, non-toxic and non-combustible, but it will generate toxic gas when it accidentally leaks into a room where combustion air from fan heaters, gas cookers, etc. is present. ALWAYS have qualified service personnel confirm that the point of leakage has been repaired or corrected before resuming operation.

9.4.3 Recommended maintenance and inspection cycles

Be aware that the mentioned maintenance and replacement cycles do not relate to the warranty period of the components.

Component	Inspection cycle	Maintenance cycle (replacements and/or repairs)
Electric motor	1 year	20,000 hours
PCB		25,000 hours
Heat exchanger		5 years
Sensor (thermistor, etc.)		5 years
User interface and switches		25,000 hours
Drain pan		8 years
Expansion valve		20,000 hours
Solenoid valve		20,000 hours

The table assumes the following conditions of use:

- Normal use without frequent starting and stopping of the unit. Depending on the model, we recommend not starting and stopping the machine more than 6 times/hour.
- Operation of the unit is assumed to be 10 hours/day and 2,500 hours/year.

**NOTICE**

- The table indicates main components. Refer to your maintenance and inspection contract for more details.
- The table indicates recommended intervals of maintenance cycles. However, in order to keep the unit operational as long as possible, maintenance work may be required sooner. Recommended intervals can be used for appropriate maintenance design in terms of budgeting maintenance and inspection fees. Depending on the content of the maintenance and inspection contract, inspection and maintenance cycles may in reality be shorter than listed.

9.4.4 Shortened maintenance and replacement cycles

Shortening of "maintenance cycle" and "replacement cycle" needs to be considered in following situations:

The unit is used in locations where:

- Heat and humidity fluctuate out of the ordinary.
- Power fluctuation is high (voltage, frequency, wave distortion, etc.) (the unit cannot be used if power fluctuation is outside the allowable range).
- Bumps and vibrations are frequent.
- Dust, salt, harmful gas or oil mist such as sulphurous acid and hydrogen sulfide may be present in the air.
- The machine is started and stopped frequently or operation time is long (sites with 24 hour air-conditioning).

Recommended replacement cycle of wear parts

Component	Inspection cycle	Maintenance cycle (replacements and/or repairs)
Air filter	1 year	5 years
High efficiency filter		1 year
Fuse		10 years
Crankcase heater		8 years
Pressure containing parts		In case of corrosion, contact your local dealer.

**NOTICE**

- The table indicates main components. Refer to your maintenance and inspection contract for more details.
- The table indicates recommended intervals of replacement cycles. However, in order to keep the unit operational as long as possible, maintenance work may be required sooner. Recommended intervals can be used for appropriate maintenance design in terms of budgeting maintenance and inspection fees. Contact your dealer for details.

**INFORMATION**

Damage due to taking apart or cleaning interiors of units by anyone other than our authorised dealers may not be included in the warranty.

10 Troubleshooting

If one of the following malfunctions occurs, take the measures shown below and contact your dealer.



WARNING

Stop operation and shut OFF the power if anything unusual occurs (burning smells etc.).

Leaving the unit running under such circumstances may cause breakage, electrical shock or fire. Contact your dealer.

The system **MUST** be repaired by a qualified service person.

Malfunction	Measure
If a safety device such as a fuse, a breaker or an earth leakage breaker frequently actuates or the ON/OFF switch does NOT properly work.	Turn OFF the main power switch.
If water leaks from the unit.	Stop the operation.
The operation switch does NOT work well.	Turn OFF the power supply.
If the user interface display indicates the unit number, the operation lamp flashes and the malfunction code appears.	Notify your installer and report the malfunction code.

If the system does NOT operate properly except for the above mentioned cases and none of the above mentioned malfunctions is evident, investigate the system in accordance with the following procedures.

Malfunction	Measure
If the system does not operate at all.	- Check if there is no power failure. Wait until power is restored. If power failure occurs during operation, the system automatically restarts immediately after power is restored. - Check if no fuse has blown or breaker is activated. Change the fuse or reset the breaker if necessary.
If the system goes into fan only operation, but as soon as it goes into heating or cooling operation, the system stops.	- Check if air inlet or outlet of outdoor or indoor unit is not blocked by obstacles. Remove any obstacles and make sure the air can flow freely. - Check if the user interface display shows  (time to clean the air filter). (Refer to "9 Maintenance and service" [▶ 32] and "Maintenance" in the indoor unit manual.)

Malfunction	Measure
The system operates but cooling or heating is insufficient.	- Check if air inlet or outlet of outdoor or indoor unit is not blocked by obstacles. Remove any obstacles and make sure the air can flow freely. - Check if the air filter is not clogged (refer to "Maintenance" in the indoor unit manual). - Check the temperature setting. - Check the fan speed setting on your user interface. - Check for open doors or windows. Close doors and windows to prevent wind from coming in. - Check if there are too many occupants in the room during cooling operation. Check if the heat source of the room is excessive. - Check if direct sunlight enters the room. Use curtains or blinds. - Check if the air flow angle is proper.

After checking all the items above, if it is impossible to fix the problem yourself, contact your installer and state the symptoms, the complete model name of the unit (with manufacturing number if possible) and the installation date.

In this chapter

10.1	Error codes: Overview	37
10.2	Symptoms that are NOT system malfunctions	39
10.2.1	Symptom: The system does not operate	39
10.2.2	Symptom: Cool/Heat cannot be changed over	40
10.2.3	Symptom: Fan operation is possible, but cooling and heating do not work	40
10.2.4	Symptom: The fan speed does not correspond to the setting	40
10.2.5	Symptom: The fan direction does not correspond to the setting	40
10.2.6	Symptom: White mist comes out of a unit (Indoor unit)	40
10.2.7	Symptom: White mist comes out of a unit (Indoor unit, outdoor unit)	40
10.2.8	Symptom: The user interface reads "U4" or "U5" and stops, but then restarts after a few minutes	40
10.2.9	Symptom: Noise of air conditioners (Indoor unit)	41
10.2.10	Symptom: Noise of air conditioners (Indoor unit, outdoor unit)	41
10.2.11	Symptom: Noise of air conditioners (Outdoor unit)	41
10.2.12	Symptom: Dust comes out of the unit	41
10.2.13	Symptom: The units can give off odours	41
10.2.14	Symptom: The outdoor unit fan does not spin	41
10.2.15	Symptom: The compressor in the outdoor unit does not stop after a short heating operation	41
10.2.16	Symptom: The inside of an outdoor unit is warm even when the unit has stopped	41
10.2.17	Symptom: Hot air can be felt when the indoor unit is stopped	42

10.1 Error codes: Overview

In case a malfunction code appears on the indoor unit user interface display, contact your installer and inform the malfunction code, the unit type, and serial number (you can find this information on the nameplate of the unit).

For your reference, a list with malfunction codes is provided. You can, depending on the level of the malfunction code, reset the code by pushing the ON/OFF button. If not, ask your installer for advice.

Main code	Contents
<i>R0</i>	External protection device was activated
<i>R1</i>	EEPROM failure (indoor)

Main code	Contents
<i>R3</i>	Drain system malfunction (indoor)
<i>R5</i>	Fan motor malfunction (indoor)
<i>R7</i>	Swing flap motor malfunction (indoor)
<i>R9</i>	Expansion valve malfunction (indoor)
<i>RF</i>	Drain malfunction (indoor unit)
<i>RH</i>	Filter dust chamber malfunction (indoor)
<i>RJ</i>	Capacity setting malfunction (indoor)
<i>Ł1</i>	Transmission malfunction between main PCB and sub PCB (indoor)
<i>Ł4</i>	Heat exchanger thermistor malfunction (indoor; liquid)
<i>Ł5</i>	Heat exchanger thermistor malfunction (indoor; gas)
<i>Ł9</i>	Suction air thermistor malfunction (indoor)
<i>ŁR</i>	Discharge air thermistor malfunction (indoor)
<i>ŁE</i>	Movement detector or floor temperature sensor malfunction (indoor)
<i>ŁJ</i>	User interface thermistor malfunction (indoor)
<i>E1</i>	PCB malfunction (outdoor)
<i>E3</i>	High pressure switch was activated
<i>E4</i>	Low pressure malfunction (outdoor)
<i>E5</i>	Compressor lock detection (outdoor)
<i>E7</i>	Fan motor malfunction (outdoor)
<i>E9</i>	Electronic expansion valve malfunction (outdoor)
<i>F3</i>	Discharge temperature malfunction (outdoor)
<i>F4</i>	Abnormal suction temperature (outdoor)
<i>F5</i>	Refrigerant overcharge detection
<i>H3</i>	High pressure switch malfunction
<i>H4</i>	Low pressure switch malfunction
<i>H7</i>	Fan motor trouble (outdoor)
<i>H9</i>	Ambient temperature sensor malfunction (outdoor)
<i>J1</i>	Pressure sensor malfunction
<i>J2</i>	Current sensor malfunction
<i>J3</i>	Discharge temperature sensor malfunction (outdoor)
<i>J4</i>	Heat exchanger gas temperature sensor malfunction (outdoor)
<i>J5</i>	Suction temperature sensor malfunction (outdoor)
<i>J5</i>	De-icing temperature sensor malfunction (outdoor)
<i>J7</i>	Liquid temperature sensor (after subcool HE) malfunction (outdoor)
<i>J9</i>	Gas temperature sensor (after subcool HE) malfunction (outdoor)

Main code	Contents
JR	High pressure sensor malfunction (S1NPH)
JL	Low pressure sensor malfunction (S1NPL)
L1	INV PCB abnormal
L4	Fin temperature abnormal
L5	Inverter PCB faulty
LB	Compressor over current detected
L9	Compressor lock (startup)
LC	Transmission outdoor unit - inverter: INV transmission trouble
P1	INV unbalanced power supply voltage
P4	Fin thermistor malfunction
PJ	Capacity setting malfunction (outdoor)
UD	Abnormal low pressure drop, faulty expansion valve
U1	Reversed power supply phase malfunction
U2	INV voltage power shortage
U3	System test run not yet executed
U4	Faulty wiring indoor/outdoor
U5	Abnormal user interface - indoor communication
U7	Faulty wiring to outdoor/outdoor
U8	Abnormal main-sub user interface communication
U9	System mismatch. Wrong type of indoor units combined. Indoor unit malfunction.
UR	Connection malfunction over indoor units or type mismatch
UC	Centralised address duplication
UE	Malfunction in communication centralised control device - indoor unit
UF	Auto address malfunction (inconsistency)
UH	Auto address malfunction (inconsistency)

10.2 Symptoms that are NOT system malfunctions

The following symptoms are NOT system malfunctions:

10.2.1 Symptom: The system does not operate

- The air conditioner does not start immediately after the ON/OFF button on the user interface is pressed. If the operation lamp lights, the system is in normal condition. To prevent overloading of the compressor motor, the air conditioner starts 5 minutes after it is turned ON again in case it was turned OFF just before. The same starting delay occurs after the operation mode selector button was used.

- If "Under Centralised Control" is displayed on the user interface, pressing the operation button causes the display to blink for a few seconds. The blinking display indicates that the user interface cannot be used.
- The system does not start immediately after the power supply is turned on. Wait one minute until the microcomputer is prepared for operation.

10.2.2 Symptom: Cool/Heat cannot be changed over

- When the display shows  (changeover under centralised control), it shows that this is a slave user interface.
- When the cool/heat changeover remote control switch is installed and the display shows  (changeover under centralised control), this is because cool/heat changeover is controlled by the cool/heat changeover remote control switch. Ask your dealer where the remote control switch is installed.

10.2.3 Symptom: Fan operation is possible, but cooling and heating do not work

Immediately after the power is turned on. The micro computer is getting ready to operate and is performing a communication check with the indoor unit(s). Please wait 12 minutes maximally until this process is finished.

10.2.4 Symptom: The fan speed does not correspond to the setting

The fan speed does not change even if the fan speed adjustment button is pressed. During heating operation, when the room temperature reaches the set temperature, the outdoor unit goes off and the indoor unit changes to whisper fan speed. This is to prevent cold air blowing directly on occupants of the room. The fan speed will not change even when another indoor unit is in heating operation, if the button is pressed.

10.2.5 Symptom: The fan direction does not correspond to the setting

The fan direction does not correspond with the user interface display. The fan direction does not swing. This is because the unit is being controlled by the micro computer.

10.2.6 Symptom: White mist comes out of a unit (Indoor unit)

- When humidity is high during cooling operation. If the interior of an indoor unit is extremely contaminated, the temperature distribution inside a room becomes uneven. It is necessary to clean the interior of the indoor unit. Ask your dealer for details on cleaning the unit. This operation requires a qualified service person.
- Immediately after the cooling operation stops and if the room temperature and humidity are low. This is because warm refrigerant gas flows back into the indoor unit and generates steam.

10.2.7 Symptom: White mist comes out of a unit (Indoor unit, outdoor unit)

When the system is changed over to heating operation after defrost operation. Moisture generated by defrost becomes steam and is exhausted.

10.2.8 Symptom: The user interface reads "U4" or "U5" and stops, but then restarts after a few minutes

This is because the user interface is intercepting noise from electric appliances other than the air conditioner. The noise prevents communication between the

units, causing them to stop. Operation automatically restarts when the noise ceases. A power reset may help to remove this error.

10.2.9 Symptom: Noise of air conditioners (Indoor unit)

- A "zeen" sound is heard immediately after the power supply is turned on. The electronic expansion valve inside an indoor unit starts working and makes the noise. Its volume will reduce in about one minute.
- A continuous low "shah" sound is heard when the system is in cooling operation or at a stop. When the drain pump (optional accessories) is in operation, this noise is heard.
- A "pishi-pishi" squeaking sound is heard when the system stops after heating operation. Expansion and contraction of plastic parts caused by temperature change make this noise.
- A low "sah", "choro-choro" sound is heard while the indoor unit is stopped. When another indoor unit is in operation, this noise is heard. In order to prevent oil and refrigerant from remaining in the system, a small amount of refrigerant is kept flowing.

10.2.10 Symptom: Noise of air conditioners (Indoor unit, outdoor unit)

- A continuous low hissing sound is heard when the system is in cooling or defrost operation. This is the sound of refrigerant gas flowing through both indoor and outdoor units.
- A hissing sound which is heard at the start or immediately after stopping operation or defrost operation. This is the noise of refrigerant caused by flow stop or flow change.

10.2.11 Symptom: Noise of air conditioners (Outdoor unit)

When the tone of operating noise changes. This noise is caused by the change of frequency.

10.2.12 Symptom: Dust comes out of the unit

When the unit is used for the first time in a long time. This is because dust has gotten into the unit.

10.2.13 Symptom: The units can give off odours

The unit can absorb the smell of rooms, furniture, cigarettes, etc., and then emit it again.

10.2.14 Symptom: The outdoor unit fan does not spin

During operation, the speed of the fan is controlled in order to optimise product operation.

10.2.15 Symptom: The compressor in the outdoor unit does not stop after a short heating operation

This is to prevent refrigerant from remaining in the compressor. The unit will stop after 5 to 10 minutes.

10.2.16 Symptom: The inside of an outdoor unit is warm even when the unit has stopped

This is because the crankcase heater is warming the compressor so that the compressor can start smoothly.

10.2.17 Symptom: Hot air can be felt when the indoor unit is stopped

Several different indoor units are being run on the same system. When another unit is running, some refrigerant will still flow through the unit.

11 Relocation

Contact your dealer to remove and reinstall the entire unit. Moving units requires technical expertise.

12 Disposal

This unit uses hydrofluorocarbon. Contact your dealer when discarding this unit. It is required by law to collect, transport and discard the refrigerant in accordance with the "hydrofluorocarbon collection and destruction" regulations.

**NOTICE**

Do NOT try to dismantle the system yourself: dismantling of the system, treatment of the refrigerant, oil and other parts **MUST** comply with applicable legislation. Units **MUST** be treated at a specialised treatment facility for reuse, recycling and recovery.

13 Technical data

13.1 Eco Design requirements

Follow the steps below to consult the Energy Label – Lot 21 data of the unit and outdoor/indoor combinations.

- 1 Open the following webpage: <https://energylabel.daikin.eu/>
- 2 To continue, choose:
 - "Continue to Europe" for the international website.
 - "Other country" for a country related site.

Result: You are directed to the "Seasonal efficiency" webpage.

- 3 Under "Eco Design – Ener LOT 21", click "Generate your data".

Result: You are directed to the "Seasonal efficiency (LOT 21)" webpage.

- 4 Follow the instructions on the webpage to select the correct unit.

Result: When the selection is done, the LOT 21 datasheet can be viewed as a PDF or a HTML webpage.



INFORMATION

Other documents (e.g. manuals, ...) can also be consulted from the resulting webpage.

For the installer

14 About the box

Keep the following in mind:

- At delivery, the unit **MUST** be checked for damage and completeness. Any damage or missing parts **MUST** be reported immediately to the claims agent of the carrier.
- Bring the packed unit as close as possible to its final installation position to prevent damage during transport.
- Prepare in advance the path along which you want to bring the unit to its final installation position.
- When handling the unit, take into account the following:



Fragile.



Keep the unit upright in order to avoid compressor damage.

In this chapter


14.1	About LOOP BY DAIKIN	47
14.2	Outdoor unit	48
14.2.1	To unpack the outdoor unit	48
14.2.2	To handle the outdoor unit	48
14.2.3	To remove the accessories from the outdoor unit	49

14.1 About LOOP BY DAIKIN

 is part of Daikin's wider commitment to reduce our environmental footprint. With  we want to create a circular economy for refrigerants. One of the actions to achieve this, is the reuse of reclaimed refrigerant in VRV units produced and sold in Europe. For more information about the countries that are in scope, visit: <http://www.daikin.eu/loop-by-daikin>.

14.2 Outdoor unit

14.2.1 To unpack the outdoor unit

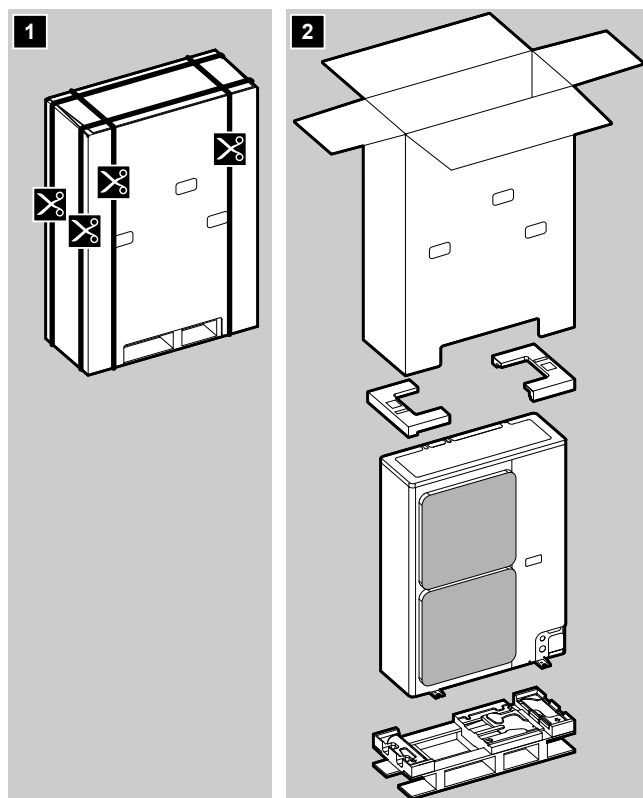


14.2.2 To handle the outdoor unit




CAUTION

To avoid injury, do NOT touch the air inlet or aluminium fins of the unit.

Forklift. As long as the unit remains on its pallet, you can also use a forklift.

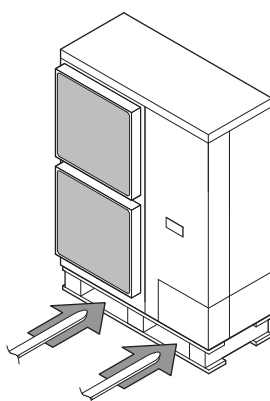


Carry the unit slowly as shown:

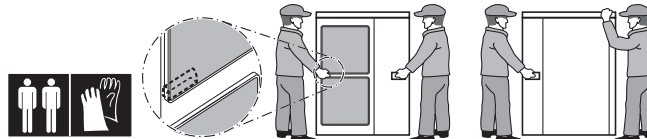

14.2.3 To remove the accessories from the outdoor unit

- 1 Remove the service cover. See "[16.2.2 To open the outdoor unit](#)" [▶ 60].
- 2 Remove the accessories.

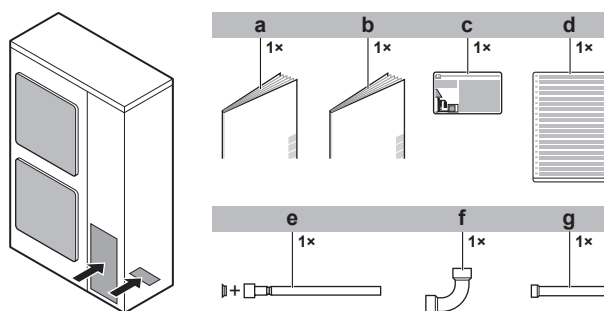

- a** General safety precautions
- b** Outdoor unit installation and operation manual
- c** Fluorinated greenhouse gases label
- d** Multilingual fluorinated greenhouse gases label
- e** Gas piping accessory 1 + copper gasket (only for RXYSQ6)
- f** Gas piping accessory 2 (only for RXYSQ6)
- g** Gas piping accessory 3 (only for RXYSQ6)

15 About the units and options

In this chapter

15.1

Identification.....

50

15.1.1

Identification label: Outdoor unit.....

50

15.2

About the outdoor unit.....

51

15.3

System layout.....

51

15.4

Combining units and options

51

15.4.1

About combining units and options

51

15.4.2

Possible combinations of indoor units

52

15.4.3

Possible options for the outdoor unit.....

52

15.1 Identification




NOTICE

When installing or servicing several units at the same time, make sure NOT to switch the service panels between different models.

15.1.1 Identification label: Outdoor unit

Location

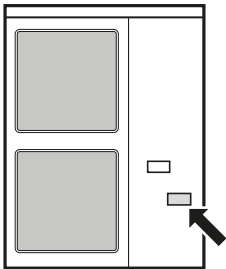

Model identification

Example: R X Y S Q 6 T8 Y B [*]

Code	Explanation
R	Outdoor air cooled
X	Heat pump (no continuous heating)
Y	Single module
S	S series
Q	Refrigerant R410A
4~6	Capacity class
T8	VRV IV series
V	Power supply
Y	
B	European market
[*]	Minor model change indication

15.2 About the outdoor unit

This installation manual concerns the VRV IV-S, full inverter driven, heat pump system.

These units are intended for outdoor installation and aimed for air to air heat pump applications.

Specification		RXYSQ4~6
Capacity	Heating	14.2~18.0 kW
	Cooling	12.1~15.5 kW
Ambient design temperature	Heating	-20~15.5°C WB
	Cooling	-5~46°C DB

15.3 System layout




INFORMATION

The following figure is an example and may NOT completely match your system layout.



INFORMATION

Not all combinations of indoor units are allowed, for guidance, see "[15.4.2 Possible combinations of indoor units](#)" [▶ 52].

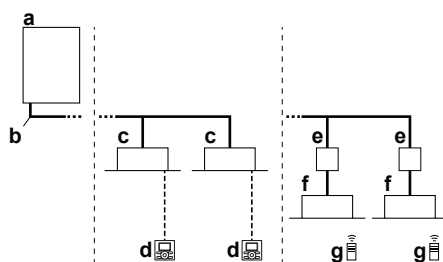

- a** VRV IV-S Heat pump outdoor unit
- b** Refrigerant piping
- c** VRV direct expansion (DX) indoor unit
- d** User interface (dedicated depending on indoor unit type)
- e** BP box (required to connect Residential Air (RA) or Sky Air (SA) direct expansion (DX) indoor units)
- f** Residential Air (RA) direct expansion (DX) indoor units
- g** User interface (wireless, dedicated depending on indoor unit type)

15.4 Combining units and options



INFORMATION

Certain options may NOT be available in your country.

15.4.1 About combining units and options



NOTICE

To be sure your system setup (outdoor unit+indoor unit(s)) will work, you have to consult the latest technical engineering data for the VRV heat pump.

The VRV IV-S heat pump system can be combined with several types of indoor units and is intended for R410A use only.

For an overview which units are available you can consult the product catalogue for VRV IV-S.

An overview is given indicating the allowed combinations of indoor units and outdoor units. Not all combinations are allowed. They are subject to rules (combination between outdoor-indoor, combinations between indoor units, etc.) mentioned in the technical engineering data.

15.4.2 Possible combinations of indoor units

In general following type of indoor units can be connected to a VRV heat pump system. The list is non-exhaustive and is depending on both outdoor unit model and indoor unit model combinations.

- VRV direct expansion (DX) indoor units (air to air applications).
- SA/RA (Sky Air/Residential Air) direct expansion (DX) indoor units (air to air applications). Further referred to as RA DX indoor units. These indoor units require a BP box.
- AHU (air to air applications): one of the following two combinations must be installed:
 - EKEXV-kit + EKEQ-box.
 - EKEXVA-kit + EKEACBVE-box.
- Air curtain (air to air applications): See the combination table in the databook for more information.



INFORMATION

- Combination of VRV DX and RA DX indoor units is not allowed.
- Combination of RA DX and AHU indoor units is not allowed.
- Combination of RA DX and air curtain indoor units is not allowed.

15.4.3 Possible options for the outdoor unit



INFORMATION

Refer to the technical engineering data for the latest option names.

Refrigerant branching kit

Description	Model name
Refnet header	KHRQ22M29H
Refnet joint	KHRQ22M20TA

For the selection of the optimal branching kit, please refer to ["17.1.4 To select refrigerant branch kits"](#) [▶ 67].

Cool/heat selector

In order to control the cooling or heating operation from a central location, the following option can be connected:

Description	RXYSQ4~6_V	RXYSQ4~6_Y
Cool/heat selector switch	KRC19-26A	KRC19-26A
Cool/heat selector PCB	EBRP2B	—

Description	RXYSQ4~6_V	RXYSQ4~6_Y
Cool/heat selector cable	—	EKCHSC
With optional fixing box for the switch	KJB111A	KJB111A

External control adaptor (DTA104A61/62)

To instruct specific operation with an external input coming from a central control the external control adaptor can be used. Instructions (group or individual) can be instructed for low noise operation and power consumption limitation operation.

The external control adapter has to be installed in the indoor unit.

PC configurator cable (EKPCCAB*)

You can make several commissioning field settings through a personal computer interface. For this option EKPCCAB* is required which is a dedicated cable to communicate with the outdoor unit. The user interface software is available on <http://www.daikineurope.com/support-and-manuals/software-downloads/>.

16 Unit installation

In this chapter

16.1	Preparing the installation site	54
16.1.1	Installation site requirements of the outdoor unit	54
16.1.2	Additional installation site requirements of the outdoor unit in cold climates	57
16.1.3	Securing safety against refrigerant leaks.....	57
16.2	Opening and closing the unit	59
16.2.1	About opening the units	59
16.2.2	To open the outdoor unit	60
16.2.3	To close the outdoor unit	60
16.3	Mounting the outdoor unit	60
16.3.1	About mounting the outdoor unit	60
16.3.2	Precautions when mounting the outdoor unit.....	61
16.3.3	To provide the installation structure	61
16.3.4	To install the outdoor unit	62
16.3.5	To provide drainage	62
16.3.6	To prevent the outdoor unit from falling over	62

16.1 Preparing the installation site

Choose an installation location with sufficient space to transport the unit in and out of the site.

Do NOT install the unit in places often used as work place. In case of construction works (e.g. grinding works) where a lot of dust is created, the unit MUST be covered.

16.1.1 Installation site requirements of the outdoor unit



INFORMATION

Also read the following requirements:

- General installation site requirements. See the "General safety precautions" chapter.
- Service space requirements. See the "Technical data" chapter.
- Refrigerant piping requirements (length, height difference). See further in this "Preparation" chapter.



CAUTION

Appliance is NOT accessible to the general public. Install it in a secured area, protected from easy access.


This unit is suitable for installation in a commercial and light industrial environment.



NOTICE

The equipment described in this manual may cause electronic noise generated from radio-frequency energy. The equipment complies with specifications that are designed to provide reasonable protection against such interference. However, there is no guarantee that interference will not occur in a particular installation.

It is therefore recommended to install the equipment and electric wires in such a way that they keep a proper distance from stereo equipment, personal computers, etc.

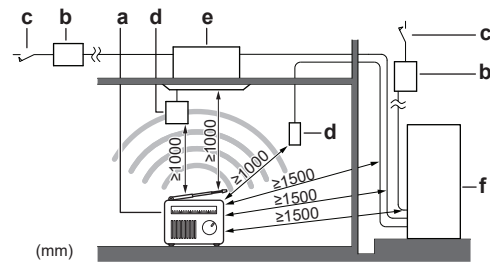

- a Personal computer or radio
- b Fuse
- c Earth leakage protector
- d User interface
- e Indoor unit (for illustrative purposes only)
- f Outdoor unit

- In places with weak reception, keep distances of 3 m or more to avoid electromagnetic disturbance of other equipment and use conduit tubes for power and transmission lines.
- Select a place where rain can be avoided as much as possible.
- Ensure that in the event of a water leak, no damage occurs to the installation space or its surroundings.
- Choose a location where the operation noise or the hot/cold air discharged from the unit will not disturb anyone and the location is selected according to the applicable legislation.
- Heat exchanger fins are sharp and injury is possible. Choose an installation location where there is no risk for injury (especially in areas where children play).

Do NOT install the unit in the following places:

- Sound sensitive areas (e.g. near a bedroom), so that the operation noise will cause no trouble.

Note: If the sound is measured under actual installation conditions, the measured value might be higher than the sound pressure level mentioned in Sound spectrum in the data book due to environmental noise and sound reflections.

- In places where a mineral oil mist, spray or vapour may be present in the atmosphere. Plastic parts may deteriorate and fall off or cause water leakage.


It is NOT recommended to install the unit in the following places because it may shorten the life of the unit:

- Where the voltage fluctuates a lot
- In vehicles or vessels
- Where acidic or alkaline vapour is present

Seaside installation. Make sure the outdoor unit is NOT directly exposed to sea winds. This is to prevent corrosion caused by high levels of salt in the air, which might shorten the life of the unit.

Install the outdoor unit away from direct sea winds.

Example: Behind the building.

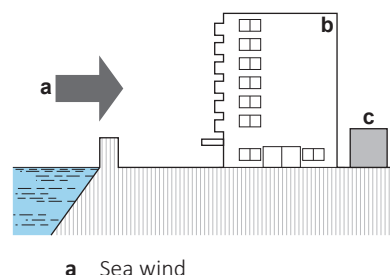


a Sea wind

- b** Building
- c** Outdoor unit

If the outdoor unit is exposed to direct sea winds, install a windbreaker.

- Height of windbreaker $\geq 1.5 \times$ height of outdoor unit
- Mind the service space requirements when installing the windbreaker.

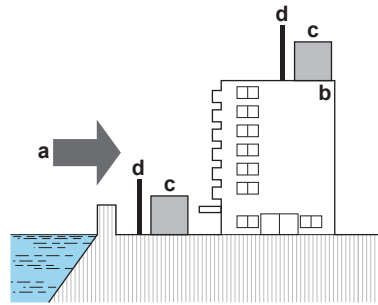


- a** Sea wind
- b** Building
- c** Outdoor unit
- d** Windbreaker

Strong winds (≥ 18 km/h) blowing against the outdoor unit's air outlet causes short circuit (suction of discharge air). This may result in:

- deterioration of the operational capacity;
- frequent frost acceleration in heating operation;
- disruption of operation due to decrease of low pressure or increase of high pressure;
- a broken fan (if a strong wind blows continuously on the fan, it may start rotating very fast, until it breaks).


It is recommended to install a baffle plate when the air outlet is exposed to wind.

Turn the air outlet side towards the building's wall, fence or screen.

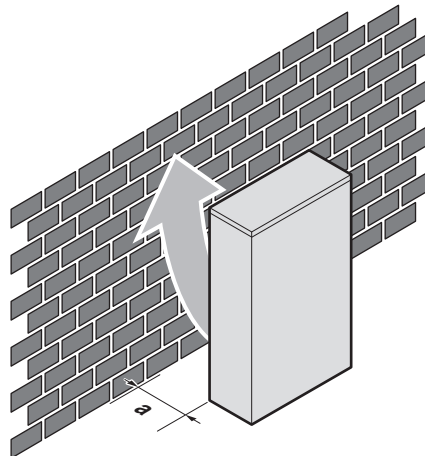

- a** Make sure there is enough installation space

Set the air outlet side at a right angle to the direction of the wind.

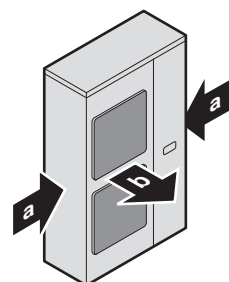


- a** Prevailing wind direction


b Air outlet

16.1.2 Additional installation site requirements of the outdoor unit in cold climates

Protect the outdoor unit against direct snowfall and take care that the outdoor unit is NEVER snowed up.

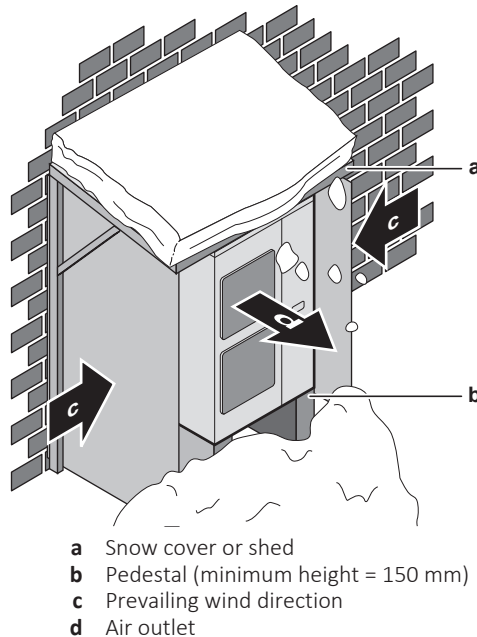**NOTICE**

When operating the unit **in heating** in a low outdoor ambient temperature with high humidity conditions, make sure to take precautions to keep the drain holes of the unit free by using proper equipment.

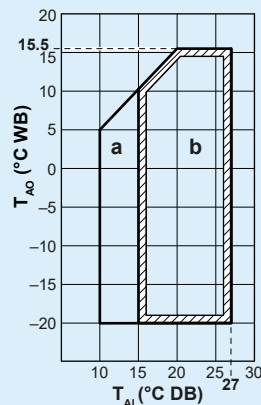

a: Warming up operation range; **b:** Heating operation range; T_{Ai} : Ambient indoor temperature; T_{Ao} : Ambient outdoor temperature

If the unit is selected to operate at ambient temperatures lower than -5°C for 5 days or longer, with relative humidity levels exceeding 95%, we recommend to apply a Daikin range specifically designed for such application and/or to contact your dealer for further advice.

16.1.3 Securing safety against refrigerant leaks

About safety against refrigerant leaks

The installer and system specialist shall secure safety against leakage according to local regulations or standards. The following standards may be applicable if local regulations are not available.

This system uses R410A as refrigerant. R410A itself is an entirely safe non-toxic, non-combustible refrigerant. Nevertheless care must be taken to ensure that the system is installed in a room which is sufficiently large. This assures that the maximum concentration level of refrigerant gas is not exceeded, in the unlikely event of major leak in the system and this in accordance to the local applicable regulations and standards.


About the maximum concentration level

The maximum charge of refrigerant and the calculation of the maximum concentration of refrigerant is directly related to the humanly occupied space in to which it could leak.

The unit of measurement of the concentration is kg/m³ (the weight in kg of the refrigerant gas in 1 m³ volume of the occupied space).

Compliance to the local applicable regulations and standards for the maximum allowable concentration level is required.

According to the appropriate European Standard, the maximum allowed concentration level of refrigerant to a humanly space for R410A is limited to 0.44 kg/m³.

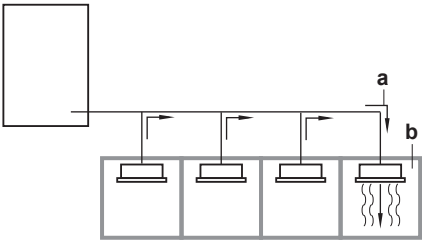

- a Direction of the refrigerant flow
- b Room where refrigerant leak has occurred (outflow of all the refrigerant from the system)

Pay special attention to places, such as basements etc., where refrigerant can stay, because refrigerant is heavier than air.

To check the maximum concentration level

Check the maximum concentration level in accordance with steps 1 to 4 below and take whatever action is necessary to comply.

- 1 Calculate the amount of refrigerant (kg) charged to each system separately.



Formula	A+B=C
A	Amount of refrigerant in a single unit system (amount of refrigerant with which the system is charged before leaving the factory)
B	Additional charging amount (amount of refrigerant added locally)
C	Total amount of refrigerant (kg) in the system



NOTICE

Where a single refrigerant facility is divided into 2 entirely independent refrigerant systems, use the amount of refrigerant with which each separate system is charged.

- 2 Calculate the volume of the room (m³) where the indoor unit is installed. In a case such as the following, calculate the volume of (D), (E) as a single room or as the smallest room.

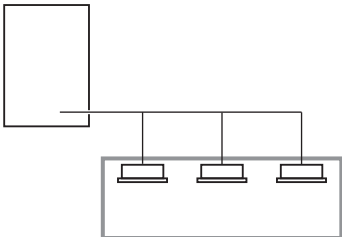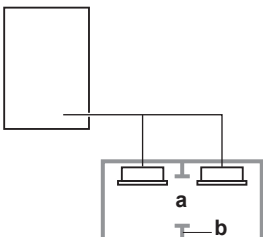D	When there are no smaller room divisions: 
E	When there is a room division that has an opening sufficiently large to permit free air flow.  a Opening between the rooms. In case there is a door the openings above and below the door each must be equivalent in size to 0.15% or more of the floor area. b Room division

- 3** Calculate the refrigerant density using the results of the calculations in steps 1 and 2 above. If the result of the above calculation exceeds the maximum concentration level, a ventilation opening to the adjacent room shall be made.

Formula	$F/G \leq H$
F	Total volume of refrigerant in the refrigerant system
G	Size (m ³) of smallest room in which there is an indoor unit installed
H	Maximum concentration level (kg/m ³)

- 4** Calculate the refrigerant density taking the volume of the room where the indoor unit is installed and the adjacent room. Install ventilation openings in the door of adjacent rooms until the refrigerant density is smaller than the maximum concentration level.

16.2 Opening and closing the unit

16.2.1 About opening the units

At certain times, you have to open the unit. **Example:**

- When connecting the refrigerant piping
- When connecting the electrical wiring
- When maintaining or servicing the unit



DANGER: RISK OF ELECTROCUTION

Do NOT leave the unit unattended when the service cover is removed.


16.2.2 To open the outdoor unit



DANGER: RISK OF ELECTROCUTION



DANGER: RISK OF BURNING/SCALDING

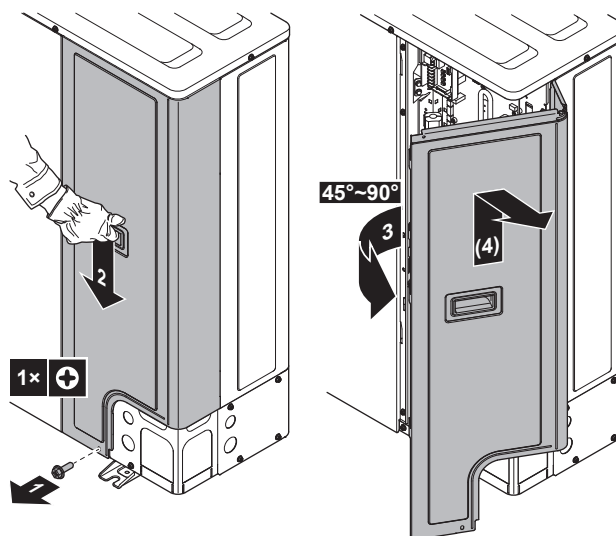


16.2.3 To close the outdoor unit



NOTICE

When closing the outdoor unit cover, make sure that the tightening torque does NOT exceed 4.1 N•m.

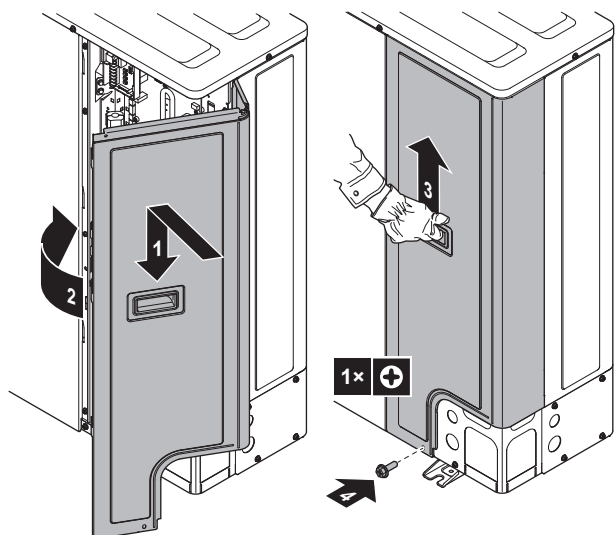

16.3 Mounting the outdoor unit

16.3.1 About mounting the outdoor unit

Typical workflow

Mounting the outdoor unit typically consists of the following stages:

- 1 Providing the installation structure.
- 2 Installing the outdoor unit.
- 3 Providing drainage.
- 4 Preventing the unit from falling over.

16.3.2 Precautions when mounting the outdoor unit



INFORMATION

Also read the precautions and requirements in the following chapters:


- "2 General safety precautions" [▶ 8]
- "16.1 Preparing the installation site" [▶ 54].

16.3.3 To provide the installation structure

Check the strength and level of the installation ground so that the unit will not cause any operating vibration or noise.

Fix the unit securely by means of foundation bolts in accordance with the foundation drawing.

Prepare four sets of anchor bolts, nuts, and washers (field supply) as follows:

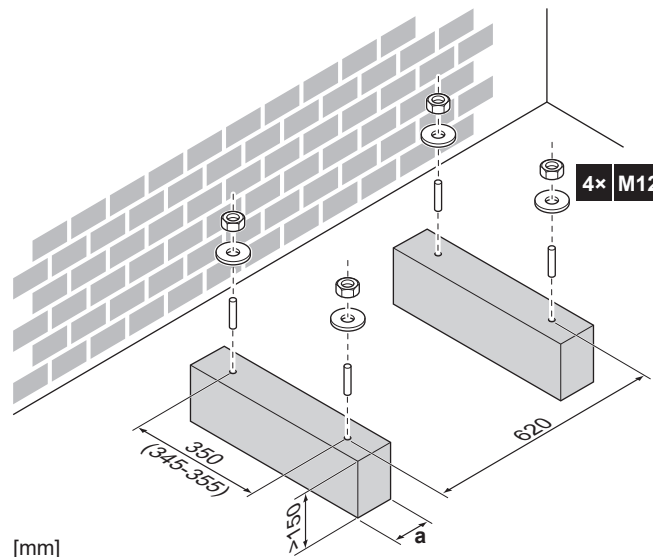


- a** Make sure not to cover the drain holes of the bottom plate of the unit.



INFORMATION

The recommended height of the upper protruding part of the bolts is 20 mm.

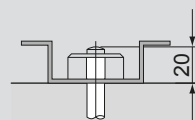


NOTICE

Fix the outdoor unit to the foundation bolts using nuts with resin washers (a). If the coating on the fastening area is stripped off, the metal can rust easily.



16.3.4 To install the outdoor unit

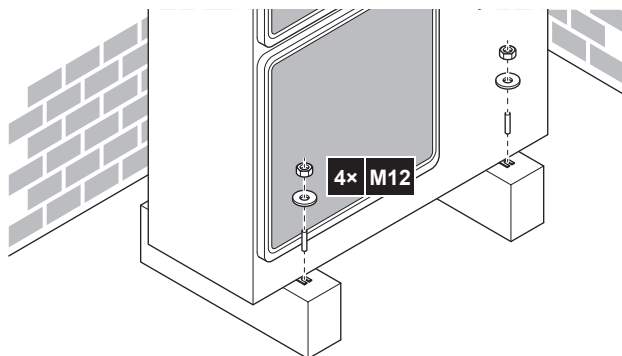


16.3.5 To provide drainage

- Make sure that condensation water can be evacuated properly.
- Install the unit on a base to make sure that there is proper drainage in order to avoid ice accumulation.
- Prepare a water drainage channel around the foundation to drain waste water away from the unit.
- Avoid drain water flowing over the footpath, so that it does NOT become slippery in case of ambient freezing temperatures.
- If you install the unit on a frame, install a waterproof plate within 150 mm of the bottom side of the unit in order to prevent water from getting into the unit and to avoid drain water dripping (see the following figure).




NOTICE

If drain holes of the outdoor unit are covered by a mounting base or by floor surface, raise the unit to provide a free space of more than 150 mm under the outdoor unit.

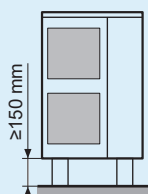

Drain holes (dimensions in mm)

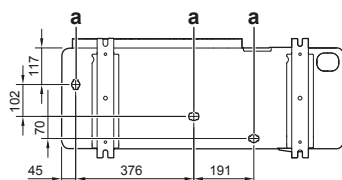


a Drain holes

16.3.6 To prevent the outdoor unit from falling over

In case the unit is installed in places where strong wind can tilt the unit, take following measure:

- 1** Prepare 2 cables as indicated in the following illustration (field supply).
- 2** Place the 2 cables over the outdoor unit.
- 3** Insert a rubber sheet between the cables and the outdoor unit to prevent the cables from scratching the paint (field supply).
- 4** Attach the ends of the cables.
- 5** Tighten the cables.

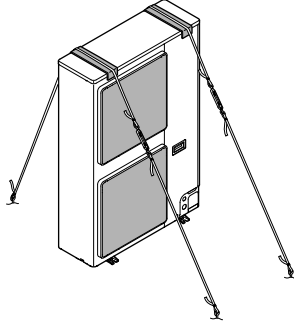

17 Piping installation

In this chapter

17.1	Preparing refrigerant piping.....	64
17.1.1	Refrigerant piping requirements	64
17.1.2	Refrigerant piping material.....	65
17.1.3	To select the piping size.....	65
17.1.4	To select refrigerant branch kits.....	67
17.1.5	Refrigerant piping length and height difference	68
17.2	Connecting the refrigerant piping.....	70
17.2.1	About connecting the refrigerant piping.....	70
17.2.2	Precautions when connecting the refrigerant piping	71
17.2.3	Guidelines when connecting the refrigerant piping	72
17.2.4	Pipe bending guidelines	72
17.2.5	To flare the pipe end.....	72
17.2.6	To braze the pipe end	73
17.2.7	Using the stop valve and service port.....	74
17.2.8	To connect the refrigerant piping to the outdoor unit	75
17.2.9	To connect the refrigerant branching kit	77
17.3	Checking the refrigerant piping.....	78
17.3.1	About checking the refrigerant piping.....	78
17.3.2	Checking refrigerant piping: General guidelines	79
17.3.3	Checking refrigerant piping: Setup	80
17.3.4	To perform a leak test.....	80
17.3.5	To perform vacuum drying	81
17.3.6	To insulate the refrigerant piping.....	81
17.4	Charging refrigerant	82
17.4.1	About charging refrigerant	82
17.4.2	Precautions when charging refrigerant	82
17.4.3	To determine the additional refrigerant amount.....	83
17.4.4	To charge refrigerant	84
17.4.5	Error codes when charging refrigerant	86
17.4.6	To fix the fluorinated greenhouse gases label	86

17.1 Preparing refrigerant piping

17.1.1 Refrigerant piping requirements



NOTICE

The refrigerant R410A requires strict cautions for keeping the system clean, dry and tight.

- Clean and dry: foreign materials (including mineral oils or moisture) should be prevented from getting mixed into the system.
- Tight: R410A does not contain any chlorine, does not destroy the ozone layer, and does not reduce earth's protection against harmful ultraviolet radiation. R410A can contribute to the greenhouse effect if it is released. Therefore pay special attention to check the tightness of the installation.



NOTICE

The piping and other pressure-containing parts shall be suitable for refrigerant. Use phosphoric acid deoxidised seamless copper for refrigerant piping.



INFORMATION

Also read the precautions and requirements in the "2 General safety precautions" [▶ 8].

- Foreign materials inside pipes (including oils for fabrication) must be ≤ 30 mg/10 m.

17.1.2 Refrigerant piping material

Piping material

Phosphoric acid deoxidised seamless copper

Flare connections

Only use annealed material.

Piping temper grade and thickness

Outer diameter (Ø)	Temper grade	Thickness (t) ^(a)	
6.4 mm (1/4")	Annealed (O)	≥0.80 mm	
9.5 mm (3/8")			
12.7 mm (1/2")			
15.9 mm (5/8")	Annealed (O)	≥0.99 mm	
19.1 mm (3/4")	Half hard (1/2H)	≥0.80 mm	

^(a) Depending on the applicable legislation and the maximum working pressure of the unit (see "PS High" on the unit name plate), larger piping thickness might be required.

17.1.3 To select the piping size

Determine the proper size using the following tables for connections to DX indoor units and AHU units (the reference figure is only for indication).




INFORMATION

- Combination of VRV DX and RA DX indoor units is not allowed.
- Combination of RA DX and AHU indoor units is not allowed.
- Combination of RA DX and air curtain indoor units is not allowed.



INFORMATION

If you install RA DX indoor units, you have to configure field setting [2-38] (= type of installed indoor units). See "19.1.8 Mode 2: field settings" [▶ 104].

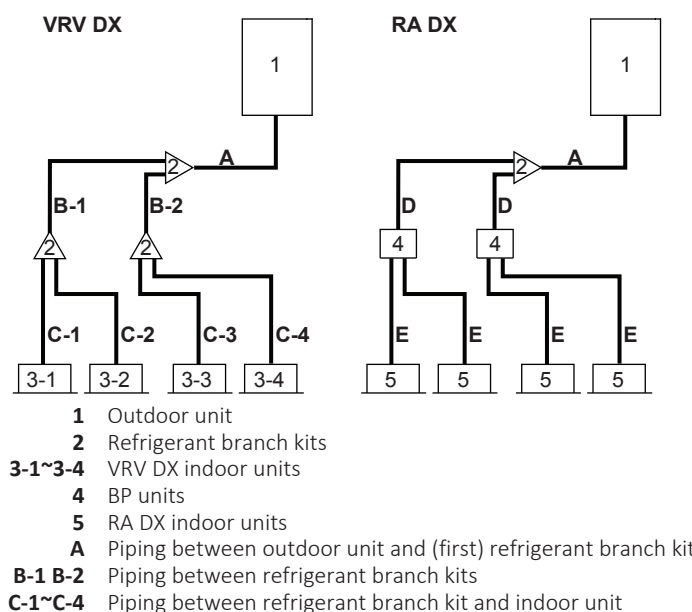

D Piping between refrigerant branch kit and BP unit


E Piping between BP unit and RA DX indoor unit

In case the required pipe sizes (inch sizes) are not available, it is also allowed to use other diameters (mm sizes), taken the following into account:

- Select the pipe size nearest to the required size.
- Use the suitable adapters for the changeover from inch to mm pipes (field supply).
- The additional refrigerant calculation has to be adjusted as mentioned in ["17.4.3 To determine the additional refrigerant amount"](#) [▶ 83].

A: Piping between outdoor unit and (first) refrigerant branch kit

When the equivalent pipe length between outdoor unit and the furthest indoor unit is 90 m or more (b+d), the size of the main gas pipe (b) must be increased (size-up). If the recommended gas pipe (size-up) is not available, you must use the standard size (which might result in a small capacity decrease).

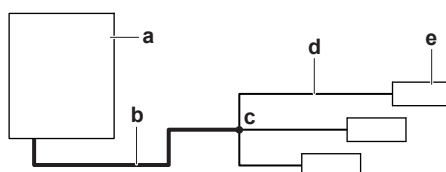

- a** Outdoor unit
- b** Main gas pipe (increase piping size if length $b+d \geq 90$ m)
- c** First refrigerant branch kit
- d** Piping between indoor unit and first refrigerant branch kit
- e** Furthest indoor unit

Outdoor unit capacity type (HP)	Piping outer diameter size (mm)		
	Gas pipe		Liquid pipe
	Standard	Size-up	
4+5	15.9	19.1	9.5
6	19.1	22.2	

B: Piping between refrigerant branch kits

Choose from the following table in accordance with the indoor unit total capacity type, connected downstream. Do not let the connection piping exceed the refrigerant piping size chosen by the general system model name.

Indoor unit capacity index	Piping outer diameter size (mm)	
	Gas pipe	Liquid pipe
<150	15.9	9.5
$150 \leq x \leq 182$	19.1	

Example: Downstream capacity for B-1 = capacity index of unit 3-1 + capacity index of unit 3-2

C: Piping between refrigerant branch kit and indoor unit

Use the same diameters as the connections (liquid, gas) on the indoor units. The diameters of the indoor units are as follows:

Indoor unit capacity index	Piping outer diameter size (mm)	
	Gas pipe	Liquid pipe
15~50	12.7	6.4
63~140	15.9	9.5

D: Piping between refrigerant branch kit and BP unit

Total capacity index of connected indoor units	Piping outer diameter size (mm)	
	Gas pipe	Liquid pipe
15~62	12.7	6.4
63~149	15.9	9.5
150~182	19.1	

E: Piping between BP unit and RA DX indoor unit

Indoor unit capacity index	Piping outer diameter size (mm)	
	Gas pipe	Liquid pipe
15~42	9.5	6.4
50	12.7	
60		9.5
71	15.9	

17.1.4 To select refrigerant branch kits

For piping example, refer to "17.1.3 To select the piping size" [▶ 65].

Refnet joint at first branch (counting from outdoor unit)

When using refnet joints at the first branch counted from the outdoor unit side, choose from the following table in accordance with the capacity of the outdoor unit. **Example:** Refnet joint A→B-1.

Outdoor unit capacity type (HP)	Refrigerant branch kit
4~6	KHRQ22M20TA

Refnet joints at other branches

For refnet joints other than the first branch, select the proper branch kit model based on the total capacity index of all indoor units connected after the refrigerant branch. **Example:** Refnet joint B-1→C-1.

Indoor unit capacity index	Refrigerant branch kit
<182	KHRQ22M20TA

Refnet headers

Concerning refnet headers, choose from the following table in accordance with the total capacity of all the indoor units connected below the refnet header.

Indoor unit capacity index	Refrigerant branch kit
<182	KHRQ22M29H

**INFORMATION**

Maximum 8 branches can be connected to a header.

17.1.5 Refrigerant piping length and height difference



Connection with only VRV DX and RA DX indoor units

The piping lengths and height differences must comply with the following requirements. Two patterns will be discussed:

- Outdoor with 100% VRV DX indoor units
- Outdoor with 100% RA DX indoor units

Requirement		Limit	
		VRV DX	RA DX
Maximum actual piping length - Example 1.1, unit 8: $a+b+c+d+e+f+g+p \leq \text{Limit}$ - Example 1.2, unit 6: $a+b+h \leq \text{Limit}$ - Example 1.2, unit 8: $a+i+k \leq \text{Limit}$ - Example 1.3, unit 8: $a+i \leq \text{Limit}$ - Example 2, unit 18: $a+b+m \leq \text{Limit}$		120 m	65 m
Maximum equivalent piping length^(a)		150 m	85 m
Maximum total piping length - Example 1.1: $a+b+c+d+e+f+g+h+i+j+k+l+m+n+p \leq \text{Limit}$ - Example 2: $a+b+c+d+e+f+g+h+i+j+k+l+m \leq \text{Limit}$		300 m	140 m
Minimum length outdoor-first refrigerant branch kit Example 2: $\text{Limit} \leq a$		N/A	5 m
Maximum length first branch kit-indoor unit - Example 1.1, unit 8: $b+c+d+e+f+g+p \leq \text{Limit}$ - Example 1.2, unit 6: $b+h \leq \text{Limit}$ - Example 1.2, unit 8: $i+k \leq \text{Limit}$ - Example 1.3, unit 8: $i \leq \text{Limit}$ - Example 2, unit 18: $b+m \leq \text{Limit}$		40 m	40 m
Maximum length outdoor-BP Example 2, BP3: $a+b \leq \text{Limit}$		N/A	55 m
Minimum and maximum length BP-indoor Example 2, unit 18: $\text{Min.} \leq m \leq \text{Max.}$	Indoor unit capacity index < 60	N/A	2~15 m
	Indoor unit capacity index = 60	N/A	2~12 m
	Indoor unit capacity index = 71	N/A	2~8 m
Maximum height difference outdoor-indoor	Outdoor higher than indoor Examples: $H1 \leq \text{Limit}$	50 m	30 m
	Outdoor lower than indoor	40 m	
Maximum height difference indoor-indoor Examples: $H2 \leq \text{Limit}$		15 m	15 m
Maximum height difference outdoor-BP Example 2: $H3 \leq \text{Limit}$		N/A	30 m
Maximum height difference BP-BP Example 2: $H4 \leq \text{Limit}$		N/A	15 m
Maximum height difference BP-indoor Example 2: $H5 \leq \text{Limit}$		N/A	5 m

^(a) Assume equivalent piping length of refnet joint=0.5 m and refnet header=1 m (for calculation purposes of equivalent piping length, not for refrigerant charge calculations).

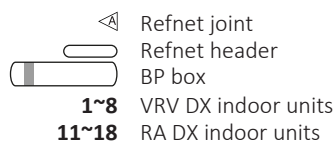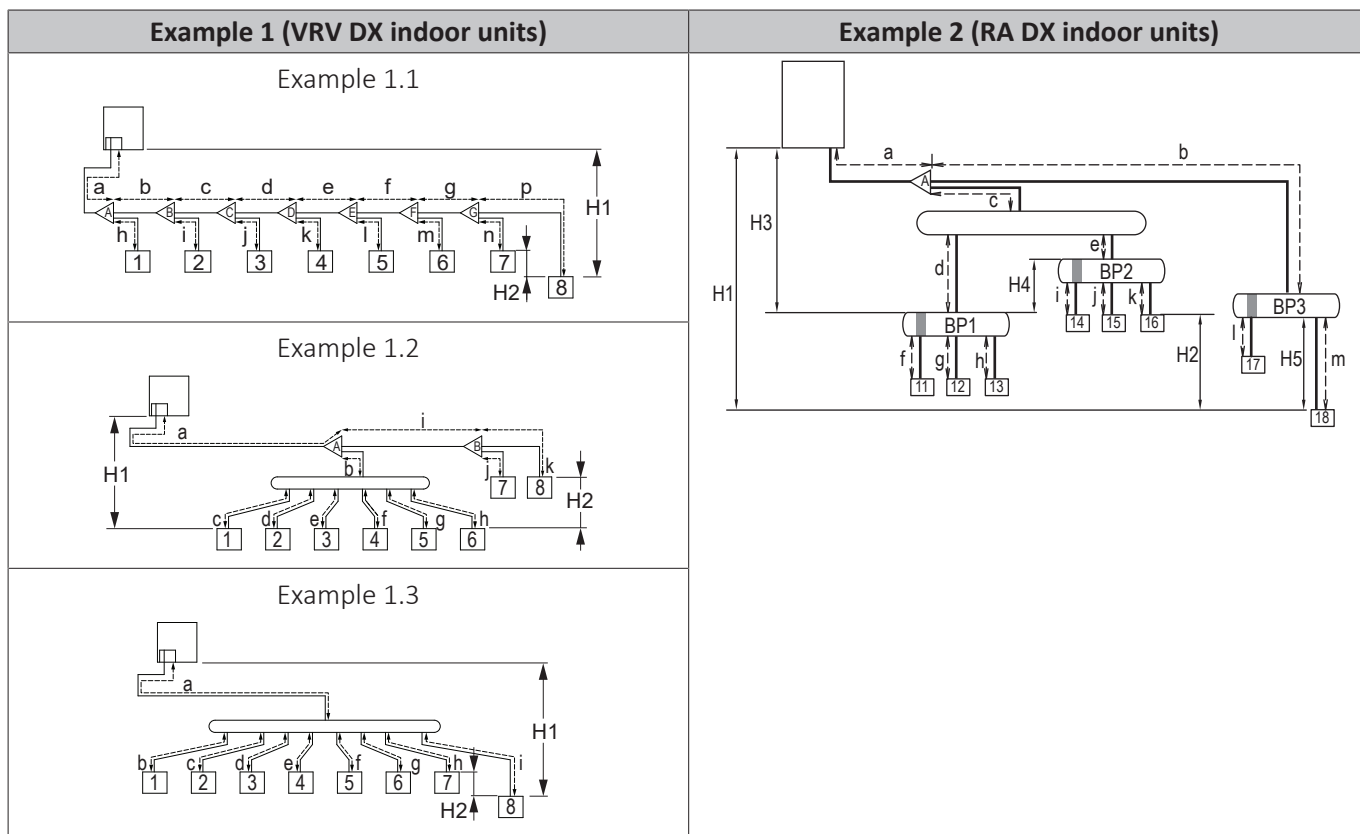

Connection with only one air handling unit (pair layout)

Pipe	Maximum length (actual/equivalent)
Longest pipe from the outdoor unit	50 m/55 m ^(a)
Total pipe length	150 m/— ^(b)

^(a) The allowable minimum length is 5 m.


^(b) Up to three piping branches are possible in case of an AHU with an interlaced heat exchanger.

Connection with VRV DX indoor units and air handling units (mix layout) and connection with only air handling units (multi layout)



INFORMATION

The following figure is an example and may NOT completely match your system layout.

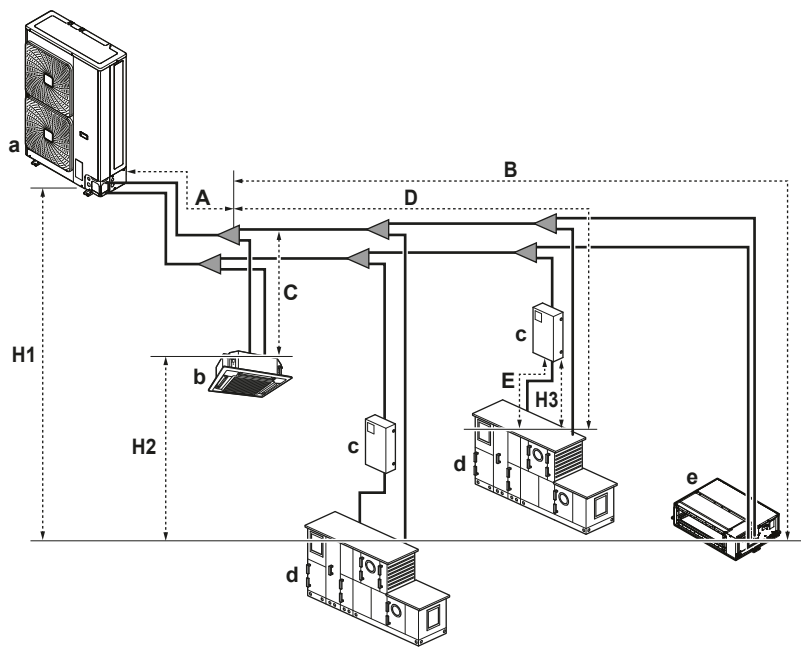

- a Outdoor unit
- b VRV DX indoor unit
- c EKEXV(A)-kit
- d Air handling unit (AHU)
- e VRV DX indoor unit (duct)

Pipe	Maximum length (actual/equivalent)
Longest pipe from the outdoor unit or the last multi-outdoor piping branch (A + [B, D])	50 m/55 m ^(a)
Longest pipe after the first branch (B, D)	40 m/—
Total pipe length	300 m/—

^(a) The allowable minimum length is 5 m.

Allowable height difference

Term	Definition	Height difference [m]
H1	Height difference between outdoor and indoor units	50/55
H2	Height difference between indoor units	15
H3	Height difference between EKEXV(A)-kits and AHU units	5

17.2 Connecting the refrigerant piping

17.2.1 About connecting the refrigerant piping

Before connecting the refrigerant piping

Make sure the outdoor and indoor units are mounted.

Typical workflow

Connecting the refrigerant piping involves:

- Connecting the refrigerant piping to the outdoor unit
- Connecting refrigerant branch kits
- Connecting the refrigerant piping to the indoor units (see the installation manual of the indoor units)
- Insulating the refrigerant piping
- Keeping in mind the guidelines for:
 - Pipe bending
 - Flaring pipe ends
 - Brazing
 - Using the stop valves

17.2.2 Precautions when connecting the refrigerant piping



INFORMATION

Also read the precautions and requirements in the following chapters:

- "2 General safety precautions" [▶ 8]
- "17.1 Preparing refrigerant piping" [▶ 64].




DANGER: RISK OF BURNING/SCALDING



NOTICE

Take the following precautions on refrigerant piping into account:

- Avoid anything but the designated refrigerant to get mixed into the refrigerant cycle (e.g. air).
- Only use R410A when adding refrigerant.
- Only use installation tools (e.g. manifold gauge set) that are exclusively used for R410A installations to withstand the pressure and to prevent foreign materials (e.g. mineral oils and moisture) from mixing into the system.
- Install the piping so that the flare is NOT subjected to mechanical stress
- Do NOT leave pipes unattended at the site. If the installation is NOT done within 1 day, protect the piping as described in the following table to prevent dirt, liquid or dust from entering the piping.
- Use caution when passing copper tubes through walls (see figure below).

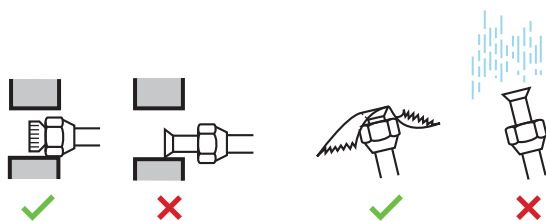

Unit	Installation period	Protection method
Outdoor unit	>1 month	Pinch the pipe
	<1 month	Pinch or tape the pipe
Indoor unit	Regardless of the period	


**NOTICE**

 Do NOT open the refrigerant stop valve before checking the refrigerant piping. When you need to charge additional refrigerant it is recommended to open the refrigerant stop valve after charging.


17.2.3 Guidelines when connecting the refrigerant piping

Take the following guidelines into account when connecting pipes:

- Coat the flare inner surface with ether oil or ester oil when connecting a flare nut. Tighten 3 or 4 turns by hand, before tightening firmly.



- ALWAYS use 2 wrenches together when loosening a flare nut.
- ALWAYS use a spanner and torque wrench together to tighten the flare nut when connecting the piping. This to prevent nut cracking and leaks.

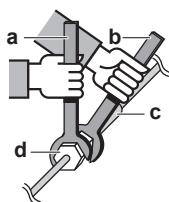

- a Torque wrench
- b Spanner
- c Piping union
- d Flare nut

Piping size (mm)	Tightening torque (N•m)	Flare dimensions (A) (mm)	Flare shape (mm)
Ø6.4	15~17	8.7~9.1	
Ø9.5	33~39	12.8~13.2	
Ø12.7	50~60	16.2~16.6	
Ø15.9	62~75	19.3~19.7	
Ø19.1	90~110	23.6~24.0	

17.2.4 Pipe bending guidelines


Use a pipe bender for bending. All pipe bends should be as gentle as possible (bending radius should be 30~40 mm or larger).

17.2.5 To flare the pipe end

**CAUTION**


- Incomplete flaring may cause refrigerant gas leakage.
- Do NOT re-use flares. Use new flares to prevent refrigerant gas leakage.
- Use flare nuts that are included with the unit. Using different flare nuts may cause refrigerant gas leakage.

- Cut the pipe end with a pipe cutter.
- Remove burrs with the cut surface facing down so that the chips do NOT enter the pipe.

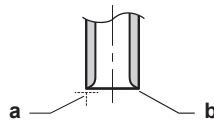


- a** Cut exactly at right angles.
b Remove burrs.

 - 3** Remove the flare nut from the stop valve and put the flare nut on the pipe.
4 Flare the pipe. Set exactly at the position as shown in the following figure.



	Flare tool for R410A (clutch type)	Conventional flare tool	
		Clutch type (Ridgid-type)	Wing nut type (Imperial-type)
A	0~0.5 mm	1.0~1.5 mm	1.5~2.0 mm

- 5** Check that the flaring is properly made.

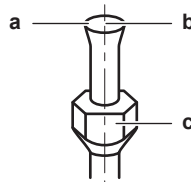

- a** Flare's inner surface MUST be flawless.
b The pipe end MUST be evenly flared in a perfect circle.
c Make sure the flare nut is fitted.

17.2.6 To braze the pipe end



DANGER: RISK OF BURNING/SCALDING




NOTICE

Precautions when connecting field piping. Add brazing material as shown in the figure.

≤Ø25.4



- When brazing, blow through with nitrogen to prevent creation of large quantities of oxidised film on the inside of the piping. This film adversely affects valves and compressors in the refrigerating system and prevents proper operation.
- Set the nitrogen pressure to 20 kPa (0.2 bar) (just enough so it can be felt on the skin) with a pressure-reducing valve.

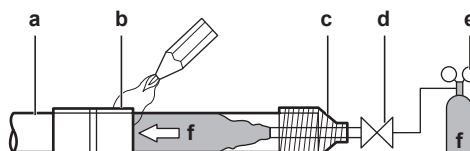

- a Refrigerant piping
- b Part to be brazed
- c Taping
- d Manual valve
- e Pressure-reducing valve
- f Nitrogen


- Do NOT use anti-oxidants when brazing pipe joints. Residue can clog pipes and break equipment.
- Do NOT use flux when brazing copper-to-copper refrigerant piping. Use phosphor copper brazing filler alloy (BCuP), which does NOT require flux.
Flux has an extremely harmful influence on refrigerant piping systems. For instance, if chlorine based flux is used, it will cause pipe corrosion or, in particular, if the flux contains fluorine, it will deteriorate the refrigerant oil.
- ALWAYS protect the surrounding surfaces (e.g. insulation foam) from heat when brazing.

17.2.7 Using the stop valve and service port


To handle the stop valve

Take the following guidelines into account:

- The gas and liquid stop valves are factory closed.
- Make sure to keep all stop valves open during operation.
- The figures below show the name of each part required in handling the stop valve.

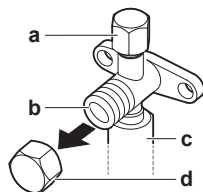


- a Service port and service port cover
- b Stop valve
- c Field piping connection
- d Stop valve cover

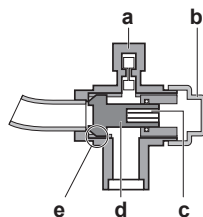

- a Service port
- b Stop valve cover
- c Hexagon hole
- d Shaft
- e Valve seat

- Do NOT apply excessive force to the stop valve. Doing so may break the valve body.

To open/close the stop valve

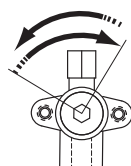


Counterclockwise to open

Clockwise to close

Result: The valve is now open/closed.**To handle the stop valve cover**

- The stop valve cover is sealed where indicated by the arrow. Do NOT damage it.
- After handling the stop valve, tighten the stop valve cover securely, and check for refrigerant leaks. For the tightening torque, refer to the table below.

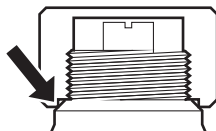**To handle the service port**

- Always use a charge hose equipped with a valve depressor pin, since the service port is a Schrader type valve.
- After handling the service port, make sure to tighten the service port cover securely. For the tightening torque, refer to the table below.
- Check for refrigerant leaks after tightening the service port cover.

Tightening torques


Stop valve size [mm]	Tightening torque [N•m] (turn clockwise to close)			
	Shaft			
	Valve body	Hexagonal wrench	Cap (valve lid)	Service port
Ø9.5	5.4~6.6	4 mm	13.5~16.5	11.5~13.9
Ø15.9	13.5~16.5	6 mm	22.5~27.5	

17.2.8 To connect the refrigerant piping to the outdoor unit


**NOTICE**

Be sure that the field installed piping does not touch other pipes, the bottom panel or side panel. Especially for the bottom and side connection, be sure to protect the piping with suitable insulation, to prevent it from coming into contact with the casing.


- 1 Do the following:
 - Remove the service cover (a) with screw (b).
 - Remove the piping intake plate (c) with screw (d).

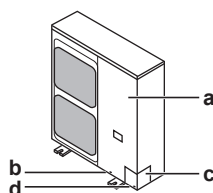

- 2 Choose a piping route (a, b, c or d).

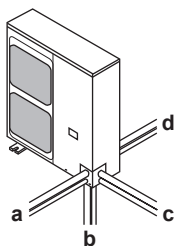

INFORMATION

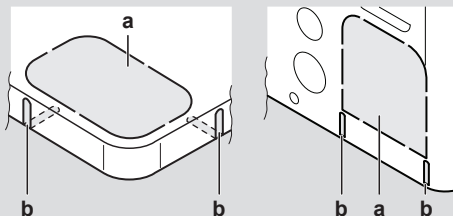

- Punch out the knockout (a) in the bottom plate or cover plate by tapping on the attachment points with a flat head screwdriver and a hammer.
- Optionally, cut out the slits (b) with a metal saw.




NOTICE

Precautions when making knockout holes:

- Avoid damaging the casing and underlying piping.
- After making the knockout holes, we recommend to remove the burrs and paint the edges and areas around the edges using repair paint to prevent rusting.
- When passing electrical wiring through the knockout holes, wrap the wiring with protective tape to prevent damage.


3 Do the following:

- Connect the liquid pipe (a) to the liquid stop valve.
- Connect the gas pipe (b) to the gas stop valve.

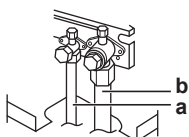



- In case of RXYSQ6: Connect the gas piping accessories (c, c1, d, e), and cut them to the required length (e1). This is necessary because the size of the gas stop valve is $\varnothing 15.9$ while the piping between outdoor unit and first refrigerant branch kit is $\varnothing 19.1$.

Possibility 1: To the front

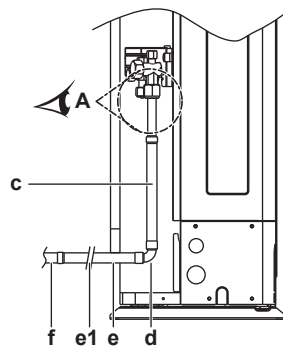


Possibility 2: To the back

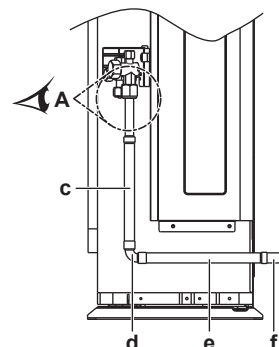

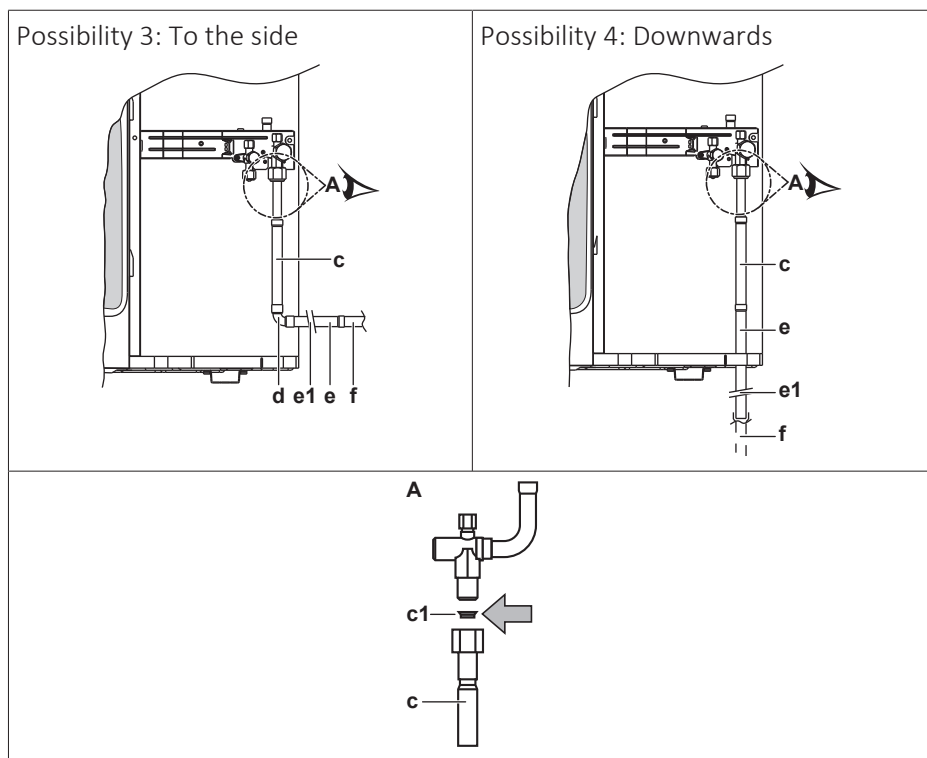

- c, c1** Gas piping accessory 1 + copper gasket (always use it)
d Gas piping accessory 2
e, e1 Gas piping accessory 3 (cut it to the required length)
f Field supply

- 4 Reattach the service cover and the piping intake plate.
- 5 Seal all gaps (example: a) to prevent snow and small animals from entering the system.

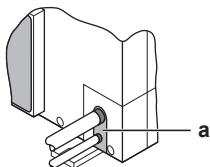**WARNING**

Provide adequate measures to prevent that the unit can be used as a shelter by small animals. Small animals that make contact with electrical parts can cause malfunctions, smoke or fire.


**NOTICE**

Make sure to open the stop valves after installing the refrigerant piping and performing vacuum drying. Running the system with the stop valves closed may break the compressor.

17.2.9 To connect the refrigerant branching kit


For installation of the refrigerant branching kit, refer to the installation manual delivered with the kit.

- Mount the refnet joint so that it branches either horizontally or vertically.
- Mount the refnet header so that it branches horizontally.

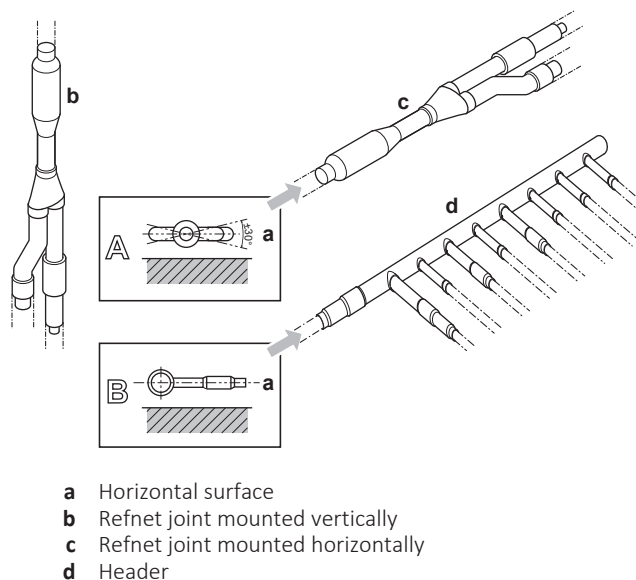

17.3 Checking the refrigerant piping

17.3.1 About checking the refrigerant piping

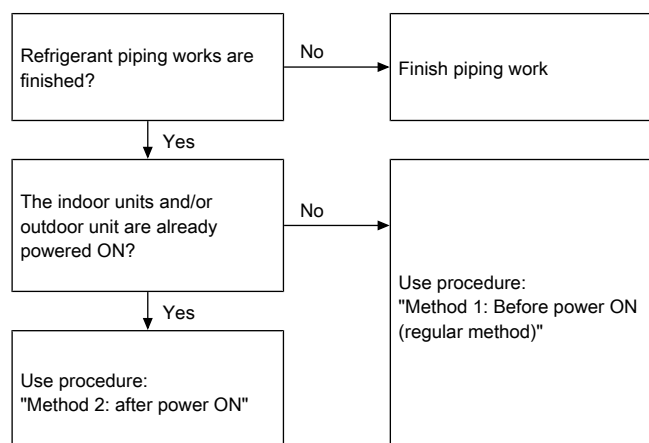

It is very important that all refrigerant piping work is done before the units (outdoor or indoor) are powered on. When the units are powered on, the expansion valves will initialise. This means that the valves will close.



NOTICE

Leak test and vacuum drying of field piping and indoor units is impossible when field expansion valves are closed.

Method 1: Before power ON

If the system has not yet been powered on, no special action is required to perform the leak test and the vacuum drying.

Method 2: After power ON

If the system has already been powered on, activate setting [2-21] (refer to "19.1.4 To access mode 1 or 2" [▶ 100]). This setting will open field expansion valves to guarantee a refrigerant piping pathway and make it possible to perform the leak test and the vacuum drying.

**DANGER: RISK OF ELECTROCUTION****NOTICE**

Make sure that all indoor units connected to the outdoor unit are powered on.

**NOTICE**

Wait to apply setting [2-21] until the outdoor unit has finished the initialisation.

Leak test and vacuum drying

Checking the refrigerant piping involves:

- Checking for any leakages in the refrigerant piping.
- Performing vacuum drying to remove all moisture, air or nitrogen in the refrigerant piping.

If there is a possibility of moisture being present in the refrigerant piping (for example, water may have entered the piping), first carry out the vacuum drying procedure below until all moisture has been removed.

All piping inside the unit has been factory tested for leaks.

Only field installed refrigerant piping needs to be checked. Therefore, make sure that all the outdoor unit stop valves are firmly closed before performing leak test or vacuum drying.

**NOTICE**

Make sure that all (field supplied) field piping valves are OPEN (not outdoor unit stop valves!) before you start leak test and vacuuming.

For more information on the state of the valves, refer to ["17.3.3 Checking refrigerant piping: Setup" \[▶ 80\]](#).

17.3.2 Checking refrigerant piping: General guidelines

Connect the vacuum pump through a manifold to the service port of all stop valves to increase efficiency (refer to ["17.3.3 Checking refrigerant piping: Setup" \[▶ 80\]](#)).

**NOTICE**

Use a 2-stage vacuum pump with a non-return valve or a solenoid valve that can evacuate to a gauge pressure of -100.7 kPa (-1.007 bar).


**NOTICE**

Make sure the pump oil does not flow oppositely into the system while the pump is not working.

**NOTICE**

Do NOT purge the air with refrigerants. Use a vacuum pump to evacuate the installation.

17.3.3 Checking refrigerant piping: Setup

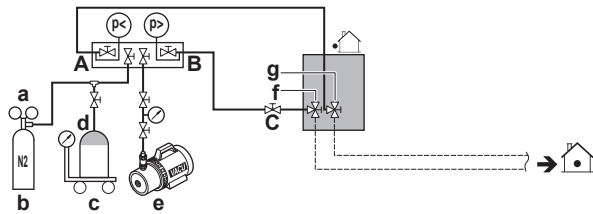

- a Pressure reducing valve
- b Nitrogen
- c Weighing scales
- d Refrigerant R410A tank (siphon system)
- e Vacuum pump
- f Liquid line stop valve
- g Gas line stop valve
- A Valve A
- B Valve B
- C Valve C

Valve	Status
Valve A	Open
Valve B	Open
Valve C	Open
Liquid line stop valve	Close
Gas line stop valve	Close



NOTICE

The connections to the indoor units and all indoor units should also be leak and vacuum tested. Keep any possible (field supplied) field piping valves open as well.

Refer to the indoor unit installation manual for more details. Leak test and vacuum drying should be done before the power supply is set to the unit. If not, see also the flow chart earlier described in this chapter (see "17.3.1 About checking the refrigerant piping" [▶ 78]).

17.3.4 To perform a leak test

The leak test must satisfy the specifications of EN378-2.

Vacuum leak test

- 1 Evacuate the system from the liquid and gas piping to a gauge pressure of −100.7 kPa (−1.007 bar) for more than 2 hours.
- 2 Once reached, turn off the vacuum pump and check that the pressure does not rise for at least 1 minute.
- 3 Should the pressure rise, the system may either contain moisture (see vacuum drying below) or have leaks.

Pressure leak test

- 1 Break the vacuum by pressurising with nitrogen gas to a minimum gauge pressure of 0.2 MPa (2 bar). Never set the gauge pressure higher than the maximum operation pressure of the unit, i.e. 4.0 MPa (40 bar).
- 2 Test for leaks by applying a bubble test solution to all piping connections.
- 3 Discharge all nitrogen gas.

**NOTICE**

ALWAYS use a recommended bubble test solution from your wholesaler.

NEVER use soap water:

- Soap water may cause cracking of components, such as flare nuts or stop valve caps.
- Soap water may contain salt, which absorbs moisture that will freeze when the piping gets cold.
- Soap water contains ammonia which may lead to corrosion of flared joints (between the brass flare nut and the copper flare).

17.3.5 To perform vacuum drying

**NOTICE**

The connections to the indoor units and all indoor units should also be leak and vacuum tested. Keep, if existing, all (field supplied) field valves to the indoor units open as well.

Leak test and vacuum drying should be done before the power supply is set to the unit. If not, see "[17.3.1 About checking the refrigerant piping](#)" [▶ 78] for more information.

To remove all moisture from the system, proceed as follows:

- 1 Evacuate the system for at least two hours to a target vacuum of -100.7 kPa (-1.007 bar)(5 Torr absolute).
- 2 Check that, with the vacuum pump turned off, the target vacuum is maintained for at least one hour.
- 3 Should you fail to reach the target vacuum within 2 hours or maintain the vacuum for one hour, the system may contain too much moisture. In that case, break the vacuum by pressurising with nitrogen gas to a gauge pressure of 0.05 MPa (0.5 bar) and repeat steps 1 to 3 until all moisture has been removed.
- 4 Depending on whether you want to immediately charge refrigerant through the refrigerant charge port or first pre-charge a portion of refrigerant through the liquid line, either open the outdoor unit stop valves, or keep them closed. See "[17.4.4 To charge refrigerant](#)" [▶ 84] for more information.

**INFORMATION**

After opening the stop valve, it is possible that the pressure in the refrigerant piping does NOT increase. This might be caused by e.g. the closed state of the expansion valve in the outdoor unit circuit, but does NOT present any problem for correct operation of the unit.


17.3.6 To insulate the refrigerant piping

After finishing the leak test and vacuum drying, the piping must be insulated. Take into account the following points:

- Make sure to insulate the connection piping and refrigerant branch kits entirely.
- Be sure to insulate the liquid and gas piping (for all units).
- Use heat resistant polyethylene foam which can withstand a temperature of 70°C for liquid piping and polyethylene foam which can withstand a temperature of 120°C for gas piping.
- Reinforce the insulation on the refrigerant piping according to the installation environment.

Ambient temperature	Humidity	Minimum thickness
≤30°C	75% to 80% RH	15 mm
>30°C	≥80% RH	20 mm

- If there is a possibility that condensation on the stop valve might drip down into the indoor unit through gaps in the insulation and piping because the outdoor unit is located higher than the indoor unit, this must be prevented by sealing up the connections. See below figure.

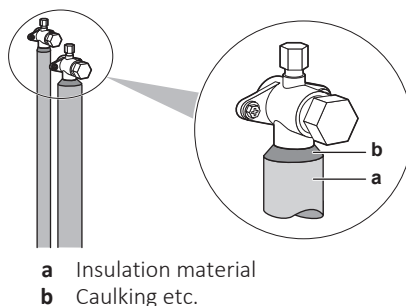

17.4 Charging refrigerant

17.4.1 About charging refrigerant

The outdoor unit is factory charged with refrigerant, but depending on the field piping you have to charge additional refrigerant.

Before charging refrigerant

Make sure the outdoor unit's **external** refrigerant piping is checked (leak test, vacuum drying).

Typical workflow

Charging additional refrigerant typically consists of the following stages:

- 1 Determining how much you have to charge additionally.
- 2 Charging additional refrigerant (pre-charging and/or charging).
- 3 Filling in the fluorinated greenhouse gases label, and fixing it to the inside of the outdoor unit.

17.4.2 Precautions when charging refrigerant



INFORMATION

Also read the precautions and requirements in the following chapters:

- "2 General safety precautions" [▶ 8]
- "17.1 Preparing refrigerant piping" [▶ 64].



WARNING

- ONLY use R410A as refrigerant. Other substances may cause explosions and accidents.
- R410A contains fluorinated greenhouse gases. Its global warming potential (GWP) value is 2087.5. Do NOT vent these gases into the atmosphere.
- When charging refrigerant, ALWAYS use protective gloves and safety glasses.

**NOTICE**

If the power of some units is turned off, the charging procedure cannot be finished properly.

**NOTICE**

Turn ON the power 6 hours before operation in order to have power running to the crankcase heater and to protect the compressor.

**NOTICE**

If operation is performed within 12 minutes after the indoor and outdoor unit(s) are powered on, the compressor will not operate before the communication is established in a correct way between outdoor unit(s) and indoor unit(s).

**NOTICE**

Before starting charging procedures, check if the 7-LEDs display is as normal (see "19.1.4 To access mode 1 or 2" [▶ 100]), and there is no malfunction code on the user interface of the indoor unit. If a malfunction code is present, see "23.3 Solving problems based on error codes" [▶ 121].

**NOTICE**

Make sure all connected indoor units are recognised (setting [1-5]).

**NOTICE**

Close the front panel before any refrigerant charge operation is executed. Without the front panel attached the unit cannot judge correctly whether it is operating properly or not.

**NOTICE**

In case of maintenance and the system (outdoor unit+field piping+indoor unit(s)) does not contain any refrigerant any more (e.g., after refrigerant reclaim operation), the unit has to be charged with its original amount of refrigerant (refer to the nameplate on the unit) and the determined additional refrigerant amount.

17.4.3 To determine the additional refrigerant amount

**INFORMATION**

For final charge adjustment in a test laboratory, contact your dealer.

**INFORMATION**

Note down the amount of additional refrigerant that is calculated here, for later use on the additional refrigerant charge label. See "17.4.6 To fix the fluorinated greenhouse gases label" [▶ 86].

Formula:

$$R = [(X_1 \times \text{Ø}9.5) \times 0.059 + (X_2 \times \text{Ø}6.4) \times 0.022]$$

R Additional refrigerant to be charged [in kg and rounded off to 1 decimal place]
X_{1...2} Total length [m] of liquid piping size at **Øa**

Metric piping. When using metric piping, replace the weight factors in the formula by the ones from the following table:

Inch piping		Metric piping	
Piping	Weight factor	Piping	Weight factor
Ø6.4 mm	0.022	Ø6 mm	0.018
Ø9.5 mm	0.059	Ø10 mm	0.065

Connection ratio requirements. When selecting indoor units, the connection ratio must comply with the following requirements. For more information, see the technical engineering data.

Indoor units	Total CR ^(a)	CR per type ^(b)		
		VRV DX	RA DX	AHU
VRV DX only	50~130%	50~130%	—	—
RA DX only	80~130%	—	80~130%	—
VRV DX + AHU	50~110%	50~110%	—	0~60%
AHU only (EKEQ+ EKEXV) Pair + multi	90~110%	—	—	90~110%
AHU only (EKEACBVE+ EKEXVA) Pair + multi	75 ^(c) ~110%	—	—	75 ^(c) ~110%

^(a) Total CR = Total indoor unit capacity connection ratio

^(b) CR per type = Allowable capacity connection ratio per indoor unit type

^(c) Additional restrictions might apply for connection ratio lower than 75% (65~110%). Please refer to the EKEA+EKEXVA manual.


17.4.4 To charge refrigerant

To speed up the refrigerant charging process, it is in case of larger systems recommended to first pre-charge a portion of refrigerant through the liquid line before proceeding with the manual charging. It can be skipped, but charging will take longer then.

Pre-charging refrigerant

Pre-charging can be done without compressor operation, by connecting the refrigerant bottle to the service port of the liquid stop valve.

- 1 Connect as shown. Make sure that all outdoor unit stop valves, as well as valve A are closed.

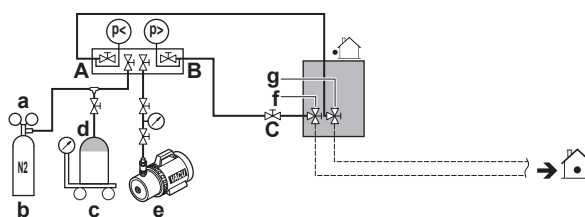

- a Pressure reducing valve
- b Nitrogen
- c Weighing scales
- d Refrigerant R410A tank (siphon system)
- e Vacuum pump
- f Liquid line stop valve
- g Gas line stop valve
- A Valve A
- B Valve B

C Valve C


- 2 Open valves C and B.
- 3 Pre-charge refrigerant until the determined additional refrigerant amount is reached or pre-charging is not possible anymore, and then close valves C and B.
- 4 Do one of the following:

If	Then
The determined additional refrigerant amount is reached	Disconnect the manifold from the liquid line. You do not have to perform the "Charging refrigerant (in manual additional refrigerant charge mode)" instructions.
Too much refrigerant is charged	Recover refrigerant. Disconnect the manifold from the liquid line. You do not have to perform the "Charging refrigerant (in manual additional refrigerant charge mode)" instructions.
The determined additional refrigerant amount is not reached yet	Disconnect the manifold from the liquid line. Continue with the "Charging refrigerant (in manual additional refrigerant charge mode)" instructions.

Charging refrigerant (in manual additional refrigerant charge mode)

The remaining additional refrigerant charge can be charged by operating the outdoor unit by means of the manual additional refrigerant charge mode.

- 5 Connect as shown. Make sure valve A is closed.

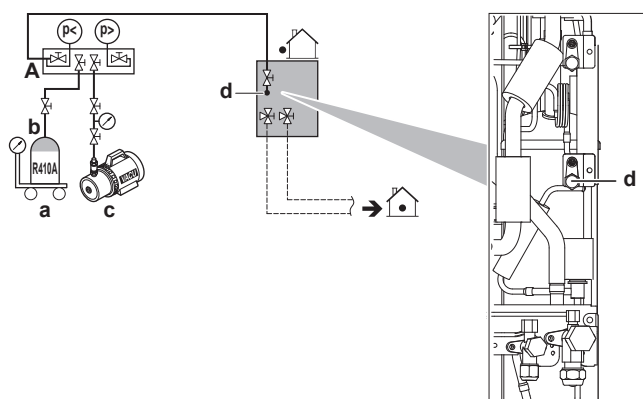

- a Weighing scales
- b Refrigerant R410A tank (siphon system)
- c Vacuum pump
- d Refrigerant charge port
- A Valve A

**NOTICE**

The refrigerant charging port is connected to the piping inside the unit. The unit's internal piping is already factory charged with refrigerant, so be careful when connecting the charge hose.

- 6 Open all outdoor unit stop valves. At this point, valve A must remain closed!
- 7 Take all the precautions mentioned in "19 Configuration" [▶ 98] and "20 Commissioning" [▶ 113] into account.
- 8 Turn on the power of the indoor units and outdoor unit.

- 9 Activate setting [2-20] to start the manual additional refrigerant charge mode. For details, see "[19.1.8 Mode 2: field settings](#)" [▶ 104].

Result: The unit will start operation.



INFORMATION

The manual refrigerant charge operation will automatically stop within 30 minutes. If charging is not completed after 30 minutes, perform the additional refrigerant charging operation again.



INFORMATION

- When a malfunction is detected during the procedure (e.g., in case of closed stop valve), a malfunction code will be displayed. In that case, refer to "[17.4.5 Error codes when charging refrigerant](#)" [▶ 86] and solve the malfunction accordingly. Resetting the malfunction can be done by pushing BS3. You can restart the "Charging" instructions.
- Aborting the manual refrigerant charge is possible by pushing BS3. The unit will stop and return to idle condition.

- 10 Open valve A.
- 11 Charge refrigerant until the remaining determined additional refrigerant amount is added, and then close valve A.
- 12 Press BS3 to stop the manual additional refrigerant charge mode.



NOTICE

Make sure to open all stop valves after (pre-) charging the refrigerant. Operating with the stop valves closed will damage the compressor.



NOTICE

After adding the refrigerant, do not forget to close the lid of the refrigerant charging port. The tightening torque for the lid is 11.5 to 13.9 N•m.

17.4.5 Error codes when charging refrigerant



INFORMATION

If a malfunction occurs, the error code is displayed on the user interface of the indoor unit.

If a malfunction occurs, close valve A immediately. Confirm the malfunction code and take corresponding action, "[23.3 Solving problems based on error codes](#)" [▶ 121].

17.4.6 To fix the fluorinated greenhouse gases label

- 1 Fill in the label as follows:

The diagram shows a label with the following fields and labels:

- a**: Contains fluorinated greenhouse gases
- b**: ① = kg
- c**: ② = kg
- d**: ① + ② = kg
- e**: $\frac{\text{GWP} \times \text{kg}}{1000} = \text{tCO}_2\text{eq}$
- f**: Points to the label area with "RXXX" and "GWP: XXX"

- a If a multilingual fluorinated greenhouse gases label is delivered with the unit (see accessories), peel off the applicable language and stick it on top of a.
- b Factory refrigerant charge: see unit name plate

- c Additional refrigerant amount charged
- d Total refrigerant charge
- e **Quantity of fluorinated greenhouse gases** of the total refrigerant charge expressed as tonnes CO₂ equivalent.
- f GWP = Global Warming Potential

**NOTICE**

Applicable legislation on **fluorinated greenhouse gases** requires that the refrigerant charge of the unit is indicated both in weight and CO₂ equivalent.

Formula to calculate the quantity in CO₂ equivalent tonnes: GWP value of the refrigerant × total refrigerant charge [in kg] / 1000

Use the GWP value mentioned on the refrigerant charge label.

- 2 Fix the label on the inside of the outdoor unit near the gas and liquid stop valves.

18 Electrical installation

In this chapter

18.1	About connecting the electrical wiring	88
18.1.1	Precautions when connecting the electrical wiring	88
18.1.2	Field wiring: Overview.....	90
18.1.3	Guidelines for making knockout holes	91
18.1.4	Guidelines when connecting the electrical wiring	91
18.1.5	About electrical compliance	93
18.1.6	Safety device requirements	93
18.2	To connect the electrical wiring to the outdoor unit	93
18.3	To finish the interconnection wiring.....	96
18.4	To check the insulation resistance of the compressor	97

18.1 About connecting the electrical wiring

Typical workflow

Connecting the electrical wiring typically consists of the following stages:

- 1 Making sure the power supply system complies with the electrical specifications of the units.
- 2 Connecting the electrical wiring to the outdoor unit.
- 3 Connecting the electrical wiring to the indoor units.
- 4 Connecting the main power supply.

18.1.1 Precautions when connecting the electrical wiring

**DANGER: RISK OF ELECTROCUTION**

**WARNING**

- All wiring **MUST** be performed by an authorised electrician and **MUST** comply with the national wiring regulation.
- Make electrical connections to the fixed wiring.
- All components procured on-site and all electrical construction **MUST** comply with the applicable legislation.

**WARNING**

ALWAYS use multicore cable for power supply cables.

**INFORMATION**

Also read the precautions and requirements in the "2 General safety precautions" [▶ 8].

**WARNING**

- If the power supply has a missing or wrong N-phase, equipment might break down.
- Establish proper earthing. Do NOT earth the unit to a utility pipe, surge absorber, or telephone earth. Incomplete earthing may cause electrical shocks.
- Install the required fuses or circuit breakers.
- Secure the electrical wiring with cable ties so that the cables do NOT come in contact with sharp edges or piping, particularly on the high-pressure side.
- Do NOT install a phase advancing capacitor, because this unit is equipped with an inverter. A phase advancing capacitor will reduce performance and may cause accidents.

**WARNING**

Do NOT extend the power supply or the interconnection cable by using wire connectors, wire connection clamps, taped wires, extension cords. These can cause overheating, electric shock or fire.

**CAUTION**

Do NOT push or place redundant cable length into the unit.

**NOTICE**

The distance between the high voltage and low voltage cables should be at least 50 mm.

**NOTICE**

Do NOT operate the unit until the refrigerant piping is complete. Running the unit before the piping is ready will break the compressor.

**NOTICE**

If the power supply has a missing or wrong N-phase, equipment will break down.

**NOTICE**

Do NOT install a phase advancing capacitor, because this unit is equipped with an inverter. A phase advancing capacitor will reduce performance and may cause accidents.

**NOTICE**

NEVER remove a thermistor, sensor, etc., when connecting power wiring and transmission wiring. (If operated without thermistor, sensor, etc., the compressor may break down.)

**NOTICE**

- The reversed phase protection detector of this product only functions when the product starts up. Consequently reversed phase detection is not performed during normal operation of the product.
- The reversed phase protection detector is designed to stop the product in the event of an abnormality when the product is started up.
- Replace 2 of the 3 phases (L1, L2, and L3) during reverse-phase protection abnormality.

18.1.2 Field wiring: Overview

Field wiring consists of:

- power supply (including earth),
- Interconnection wiring between communication box and outdoor unit,
- RS-485 interconnection wiring between communication box and monitoring system.



NOTICE

- Keep power supply wiring and interconnection wiring apart from each other. Interconnection wiring and power supply wiring may cross, but may NOT run parallel.
- In order to avoid any electrical interference, the distance between both wirings should ALWAYS be at least 50 mm.


Transmission wiring

The transmission wiring outside the unit should be wrapped and routed together with the field piping.

Transmission wiring specification and limits ^(a)	
Vinyl cords with 0.75 to 1.25 mm ² sheath or cables (2-core wires)	
Maximum number of branches for unit-to-unit cabling	9
Maximum wiring length (distance between outdoor and furthest indoor unit)	300 m
Total wiring length (sum of distances between outdoor and all indoor units)	600 m

^(a) If the total interconnection wiring exceeds these limits, communication errors might occur.


No secondary branchings are allowed after any transmission wire branching.

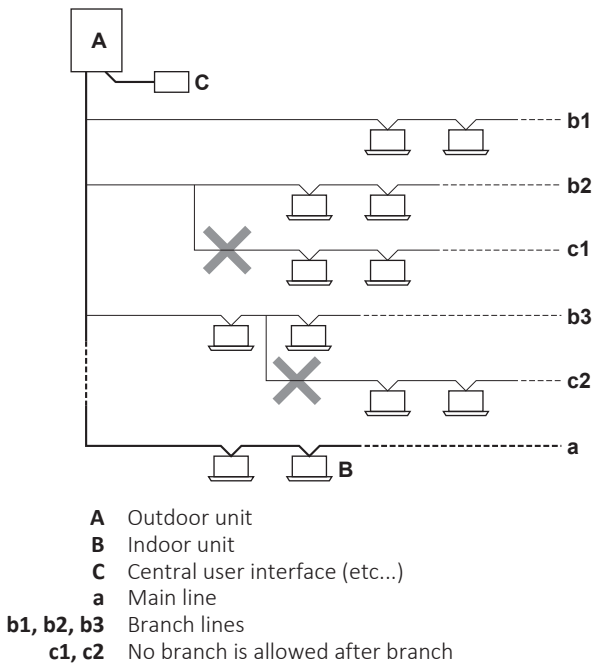

Example:

**INFORMATION**

The following figures are examples and may NOT completely match your system layout.

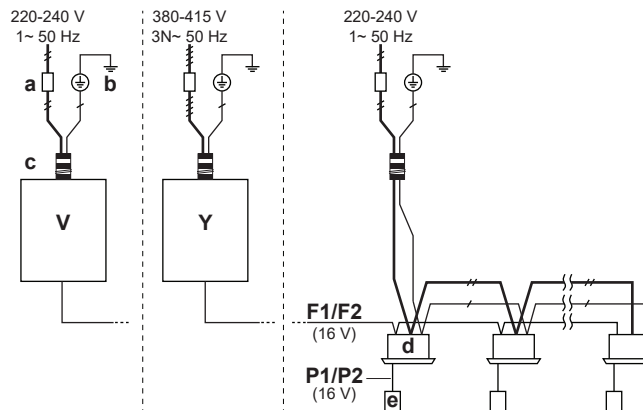


- a** Main switch
- b** Earth connection
- c** Power supply wiring (including earth) (shielded cable)
- F1/F2** Transmission wiring (shielded cable)
- V** Outdoor unit (RXYSQ4~6_V)
- Y** Outdoor unit (RXYSQ4~6_Y)
- d** Indoor unit
- e** User interface

18.1.3 Guidelines for making knockout holes

**NOTICE**

Precautions when making knockout holes:

- Avoid damaging the casing.
- After making the knockout holes, we recommend you remove the burrs and paint the edges and areas around the edges using repair paint to prevent rusting.
- When passing electrical wiring through the knockout holes, wrap the wiring with protective tape to prevent damage.

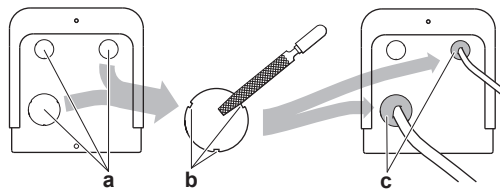

- a** Knockout hole
- b** Burr
- c** Sealant etc.

18.1.4 Guidelines when connecting the electrical wiring


**NOTICE**

We recommend using solid (single-core) wires. If stranded wires are used, slightly twist the strands to consolidate the end of the conductor for either direct use in the terminal clamp or insertion in a round crimp-style terminal.

To prepare stranded conductor wire for installation


Method 1: Twisting conductor

- 1 Strip insulation (20 mm) from the wires.
- 2 Slightly twist the end of the conductor to create a "solid-like" connection.

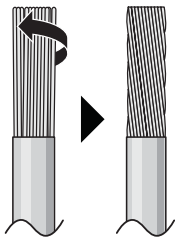

Method 2: Using round crimp-style terminal (recommended)

- 1 Strip insulation from wires and slightly twist the end of each wire.
- 2 Install a round crimp-style terminal on the end of the wire. Place the round crimp-style terminal on the wire up to the covered part and fasten the terminal with the appropriate tool.

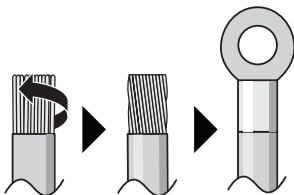

Use the following methods for installing wires:

Wire type	Installation method
Single-core wire Or Stranded conductor wire twisted to "solid-like" connection	a Curled wire (single-core or twisted stranded conductor wire) b Screw c Flat washer
Stranded conductor wire with round crimp-style terminal	a Terminal b Screw c Flat washer ✓ Allowed ✗ NOT allowed

Tightening torques

Wiring	Screw size	Tightening torque (N•m)
Power supply wiring (power supply + shielded ground)	M5	2.2~2.7
Transmission wiring	M3.5	0.8~0.97

18.1.5 About electrical compliance

Only for RXYSQ4~6_V

Equipment complying with EN/IEC 61000-3-12 (European/International Technical Standard setting the limits for harmonic currents produced by equipment connected to public low-voltage systems with input current >16 A and ≤75 A per phase.).

18.1.6 Safety device requirements

Power supply wiring

The power supply must be protected with the required safety devices, i.e. a main switch, a slow blow fuse on each phase and an earth leakage protector in accordance with the applicable legislation.

In the power supply line, ALWAYS install a residual current device (RCD) with an instantaneous action. The installed RCD MUST comply with the national wiring regulation.

Selection and sizing of the wiring should be done in accordance with the applicable legislation based on the information mentioned in the table below.

Model	Minimum circuit ampacity	Recommended fuses	Power supply
RXYSQ4_V	29.1 A	32 A	1~ 50 Hz 220-240 V
RXYSQ5_V			
RXYSQ6_V			
RXYSQ4_Y	14.1 A	16 A	3N~ 50 Hz 380-415 V
RXYSQ5_Y			
RXYSQ6_Y			

Transmission wiring

Transmission wiring specification and limits ^(a)	
Vinyl cords with 0.75 to 1.25 mm ² sheath or cables (2-core wires)	
Maximum number of branches for unit-to-unit cabling	9
Maximum wiring length (distance between outdoor and furthest indoor unit)	300 m
Total wiring length (sum of distances between outdoor and all indoor units)	600 m

^(a) If the total interconnection wiring exceeds these limits, communication errors might occur.

18.2 To connect the electrical wiring to the outdoor unit

**WARNING**


Do NOT extend the power supply or the interconnection cable by using wire connectors, wire connection clamps, taped wires, extension cords.

These can cause overheating, electric shock or fire.

**NOTICE**


- Follow the wiring diagram (delivered with the unit, located at the inside of the service cover).
- Make sure the electrical wiring does NOT obstruct proper reattachment of the service cover.

- Remove the service cover. See "16.2.2 To open the outdoor unit" [▶ 60].
- Strip insulation (20 mm) from the wires.

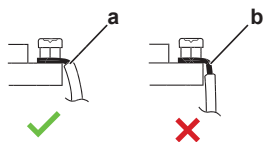

- a Strip wire end to this point
b An excessive strip length may cause electrical shock or leakage


- Connect the transmission wiring as follows:

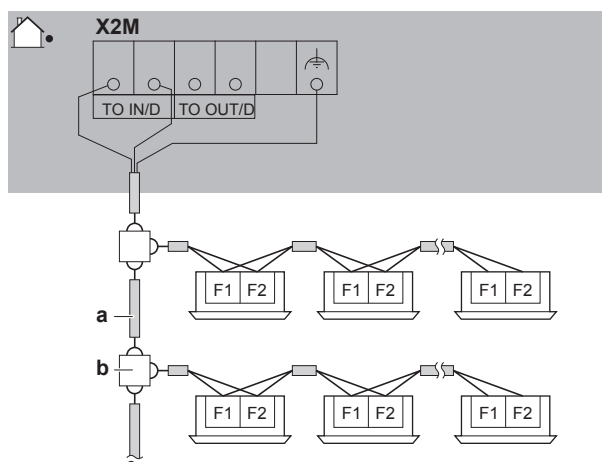

- a Use the conductor of sheathed wire (2 wire) (no polarity)
b Terminal board (field supply)


**NOTICE**

You must use shielded wire and connect the earth to the transmission terminal (X2M).

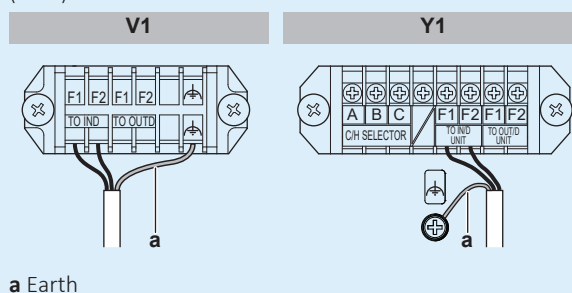


a Earth

- Connect the power supply as follows:

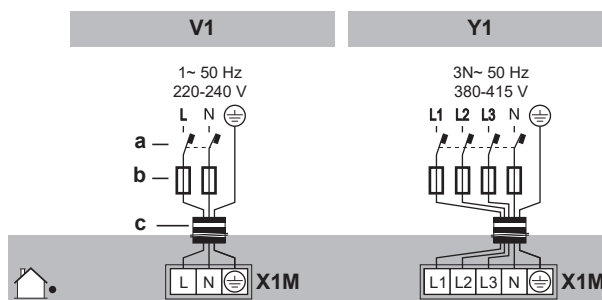



- a Earth leakage circuit breaker
- b Fuse
- c Power supply cable

5 Fix the cables (power supply and transmission wiring) with cable ties.

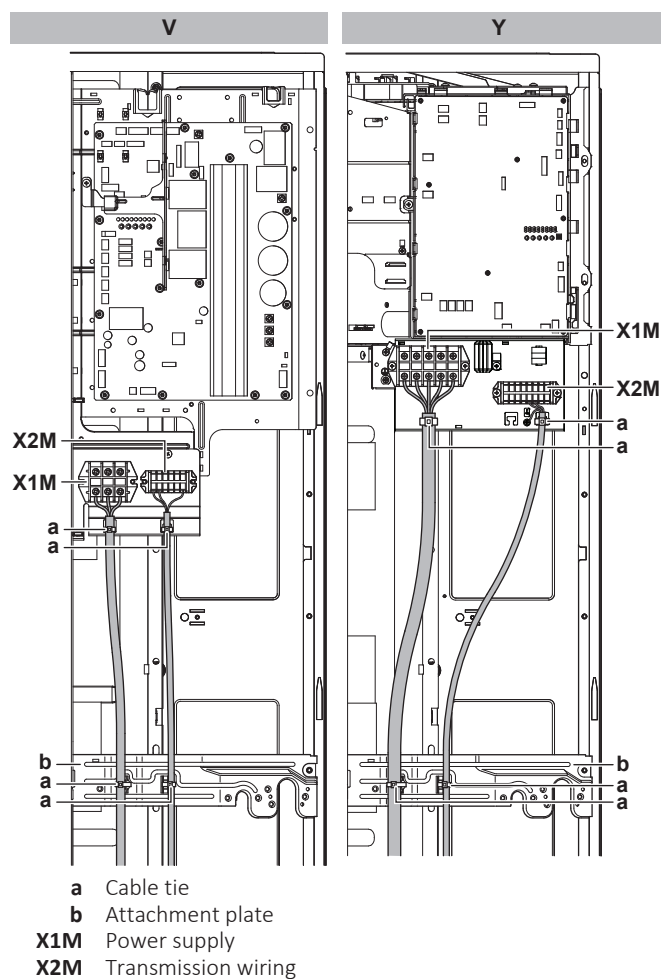

6 Route the wiring through the frame and connect it to it.

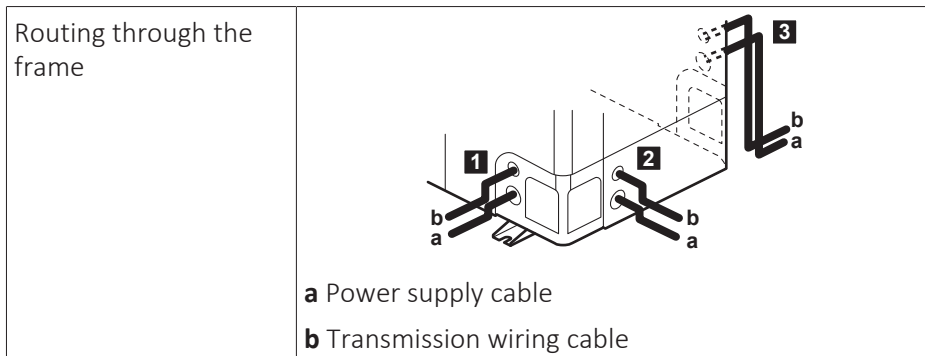

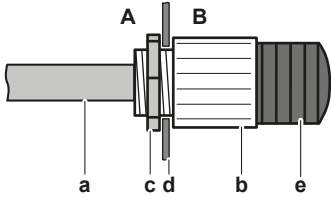Connecting to the frame	When cables are routed from the unit, a protection sleeve for the conduits (PG insertions) can be inserted at the knockout hole. When you do not use a wire conduit, protect the wires with vinyl tubes to prevent the edge of the knockout hole from cutting the wires.  A Inside of the outdoor unit B Outside of the outdoor unit a Wire b Bush c Nut d Frame e Hose
-------------------------	---



NOTICE


Precautions when making knockout holes:

- Avoid damaging the casing and underlying piping.
- After making the knockout holes, we recommend to remove the burrs and paint the edges and areas around the edges using repair paint to prevent rusting.
- When passing electrical wiring through the knockout holes, wrap the wiring with protective tape to prevent damage.

- 7 Reattach the service cover. See ["16.2.3 To close the outdoor unit"](#) [▶ 60].
- 8 Connect an earth leakage circuit breaker and fuse to the power supply line.

18.3 To finish the interconnection wiring

After installing the interconnection wiring, wrap it along with the onsite refrigerant piping using finishing tape, as shown in the illustration below.

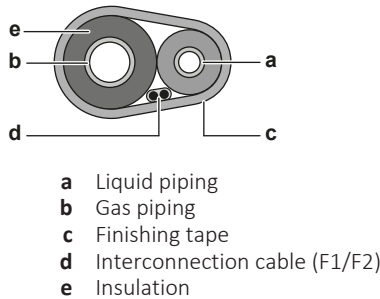

18.4 To check the insulation resistance of the compressor



NOTICE

If, after installation, refrigerant accumulates in the compressor, the insulation resistance over the poles can drop, but if it is at least 1 MΩ, then the unit will not break down.

- Use a 500 V mega-tester when measuring insulation.
- Do NOT use a mega-tester for low voltage circuits.

- 1 Measure the insulation resistance over the poles.

If	Then
≥1 MΩ	Insulation resistance is OK. This procedure is finished.
<1 MΩ	Insulation resistance is not OK. Go to the next step.

- 2 Turn ON the power and leave it on for 6 hours.

Result: The compressor will heat up and evaporate any refrigerant in the compressor.

- 3 Measure the insulation resistance again.

19 Configuration



DANGER: RISK OF ELECTROCUTION



INFORMATION

It is important that all information in this chapter is read sequentially by the installer and that the system is configured as applicable.

In this chapter

19.1	Making field settings.....	98
19.1.1	About making field settings	98
19.1.2	To access the field setting components	99
19.1.3	Field setting components	99
19.1.4	To access mode 1 or 2	100
19.1.5	To use mode 1	101
19.1.6	To use mode 2	102
19.1.7	Mode 1 (and default situation): Monitoring settings.....	102
19.1.8	Mode 2: field settings	104
19.1.9	To connect the PC configurator to the outdoor unit	107
19.2	Energy saving and optimum operation	108
19.2.1	Available main operation methods.....	108
19.2.2	Available comfort settings	109
19.2.3	Example: Automatic mode during cooling	111
19.2.4	Example: Automatic mode during heating.....	112

19.1 Making field settings

19.1.1 About making field settings

To configure the heat pump system, you must give input to the outdoor unit's main PCB (A1P). This involves the following field setting components:

- Push buttons to give input to the PCB
- A display to read feedback from the PCB
- DIP switches (only change the factory settings if you install a cool/heat selector switch).

Field settings are defined by their mode, setting and value. Example: [2-8]=4.

PC configurator

For VRV IV-S heat pump system it is alternatively possible to make several commissioning field settings through a personal computer interface (for this, option EKPCCAB* is required). The installer can prepare the configuration (off-site) on PC and afterwards upload the configuration to the system.

See also: "19.1.9 To connect the PC configurator to the outdoor unit" [▶ 107].

Mode 1 and 2

Mode	Description
Mode 1 (monitoring settings)	Mode 1 can be used to monitor the current situation of the outdoor unit. Some field setting contents can be monitored as well.


Mode	Description
Mode 2 (field settings)	Mode 2 is used to change the field settings of the system. Consulting the current field setting value and changing the current field setting value is possible. In general, normal operation can be resumed without special intervention after changing field settings. Some field settings are used for special operation (e.g., one time operation, recovery/vacuuming setting, manual adding refrigerant setting, etc.). In such a case, it is required to abort the special operation before normal operation can restart. It will be indicated in below explanations.

19.1.2 To access the field setting components

See "16.2.2 To open the outdoor unit" [▶ 60].

19.1.3 Field setting components

The components to make field settings are as follows:

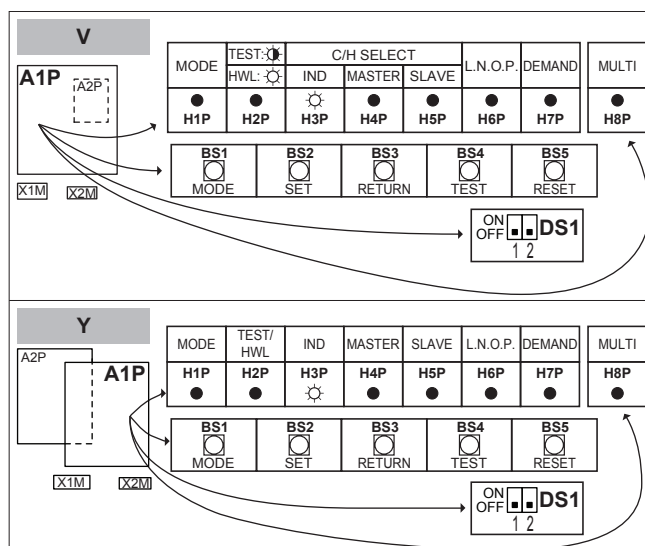

- DS1** DIP switches
BS1~BS5 Push buttons
H1P~H7P 7-LEDs display
H8P LED for indication during initialisation
 ON (☀) OFF (●) Flashing (✱)


DIP switches

Only change the factory settings if you install a cool/heat selector switch.

DS1-1	COOL/HEAT selector (refer to the manual of the cool/heat selector switch). OFF=not installed=factory setting
DS1-2	NOT USED. DO NOT CHANGE THE FACTORY SETTING.

Push buttons

Use the push buttons to make the field settings. Operate the push buttons with an insulated stick (such as a closed ball-point pen) to avoid touching live parts.

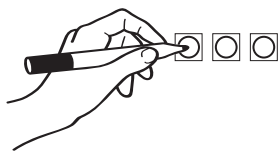

- BS1** MODE: For changing the set mode
- BS2** SET: For field setting
- BS3** RETURN: For field setting
- BS4** TEST: For test operation
- BS5** RESET: For resetting the address when the wiring is changed or when an additional indoor unit is installed

7-LEDs display

The display gives feedback about the field settings, which are defined as [Mode-Setting]=Value.

- H1P** Shows the mode
- H2P~H7P** Shows the settings and values, represented in binary code
- H8P** NOT used for field settings, but used during initialisation

Example:

[H1P- 32 + 16 + 8 + 4 + 2 + 1] H1P H2P H3P H4P H5P H6P H7P	Description
● ● ● ● ● ● ● (H1P OFF)	Default situation
● ● ● ● ● ● ● (H1P flashing)	Mode 1
● ● ● ● ● ● ● (H1P ON)	Mode 2
● ● ● ● ● ● ● 0 + 0 + 8 + 0 + 0 + 0 (H2P~H7P = binary 8)	Setting 8 (in mode 2)
● ● ● ● ● ● ● 0 + 0 + 0 + 4 + 0 + 0 (H2P~H7P = binary 4)	Value 4 (in mode 2)

19.1.4 To access mode 1 or 2


After the units are turned ON, the display goes to its default situation. From there, you can access mode 1 and mode 2.

Initialisation: default situation



NOTICE
Turn ON the power 6 hours before operation in order to have power running to the crankcase heater and to protect the compressor.


Turn on the power supply of the outdoor unit and all indoor units. When the communication between indoor units and outdoor unit is established and normal, the display indication state will be as below (default situation when shipped from factory).

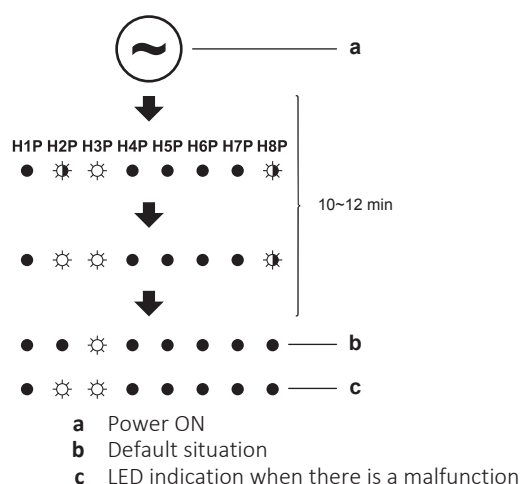

If the default situation is not displayed after 10~12 minutes, check the malfunction code on the indoor unit user interface. Solve the malfunction code accordingly. First, check the communication wiring.

Switching between modes

Use BS1 to switch between the default situation, mode 1 and mode 2.

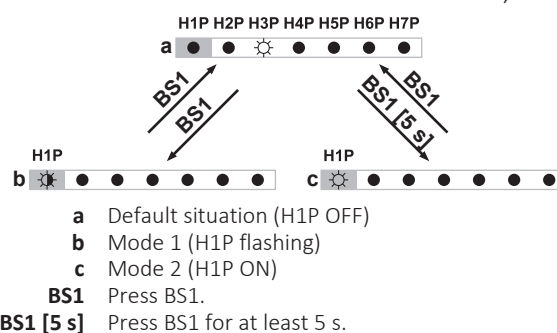

INFORMATION

If you get confused in the middle of the process, press BS1 to return to the default situation.

19.1.5 To use mode 1

In mode 1 (and in default situation) you can read out some information.

Example: 7-LEDs display – Default situation

You can read out the status of low noise operation as follows:

#	Action	Button/display
1	Make sure the LEDs are showing the default situation.	H1PH2PH3PH4PH5PH6PH7P ●●●●●●● (H1P OFF)
2	Check the status of LED H6P.	●●●●●●● H6P OFF: Unit is currently not operating under low noise restrictions. ●●●●●●● H6P ON: Unit is currently operating under low noise restrictions.

Example: 7-LEDs display – Mode 1

You can read out setting [1-5] (= the total number of connected indoor units) as follows:

#	Action	Button/display
1	Start from the default situation.	
2	Select mode 1.	
3	Select setting 5. ("Xx" depends on the setting that you want to select.)	 (= binary 5)
4	Display the value of setting 5. (there are 8 indoor units connected)	 (= binary 8)
5	Quit mode 1.	

19.1.6 To use mode 2

In mode 2 you can make field settings to configure the system.

Example: 7-LEDs display – Mode 2

You can change the value of setting [2-8] (= T_e target temperature during cooling operation) to 4 (= 8°C) as follows:

#	Action	Button/display
1	Start from the default situation.	
2	Select mode 2.	
3	Select setting 8. ("Xx" depends on the setting that you want to select.)	 (= binary 8)
4	Select value 4 (= 8°C). a: Display the current value. b: Change to 4. ("Xx" depends on the current value, and the value that you want to select.) c: Enter the value in the system. d: Confirm. The system starts operating according to the setting.	
5	Quit mode 2.	

19.1.7 Mode 1 (and default situation): Monitoring settings

In mode 1 (and in default situation) you can read out some information.

7-LEDs display – Default situation (H1P OFF)

You can read out the following information:

	Value / Description	
H6P	Shows the status of low noise operation.	
	OFF	 Unit is currently not operating under low noise restrictions.
	ON	 Unit is currently operating under low noise restrictions.
	Low noise operation reduces the sound generated by the unit compared to nominal operating conditions. Low noise operation can be set in mode 2. There are two methods to activate low noise operation of the outdoor unit system. ▪ The first method is to enable an automatic low noise operation during night time by field setting. The unit will operate at the selected low noise level during the selected time frames. ▪ The second method is to enable low noise operation based on an external input. For this operation an optional accessory is required.	
H7P	Shows the status of power consumption limitation operation.	
	OFF	 Unit is currently not operating under power consumption limitations.
	ON	 Unit is currently operating under power consumption limitation.
	Power consumption limitation reduces the power consumption of the unit compared to nominal operating conditions. Power consumption limitation can be set in mode 2. There are two methods to activate power consumption limitation of the outdoor unit system. ▪ The first method is to enable a forced power consumption limitation by field setting. The unit will always operate at the selected power consumption limitation. ▪ The second method is to enable power consumption limitation based on an external input. For this operation an optional accessory is required.	

7-LEDs display – Mode 1 (H1P flashing)

You can read out the following information:

Setting (H1P H2P H3P H4P H5P H6P H7P)	Value / Description
[1-5] ✱ ● ● ● ✱ ● ✱ Shows the total number of connected indoor units.	It can be convenient to check if the total number of indoor units which are installed match the total number of indoor units which are recognised by the system. In case there is a mismatch, it is advised to check the communication wiring path between outdoor and indoor units (F1/F2 communication line).
[1-14] ✱ ● ● ✱ ✱ ✱ ● Shows the latest malfunction code.	When the latest malfunction codes were reset by accident on an indoor unit user interface, they can be checked again through this monitoring settings. For the content or reason behind the malfunction code see "23.3 Solving problems based on error codes" [▶ 121], where most relevant malfunction codes are explained. Detailed information about malfunction codes can be consulted in the service manual of this unit. To obtain more detailed information about the malfunction code, press BS2 up to 3 times.
[1-15] ✱ ● ● ✱ ✱ ✱ ✱ Shows the 2nd last malfunction code.	
[1-16] ✱ ● ✱ ● ● ● ● Shows the 3rd last malfunction code.	

19.1.8 Mode 2: field settings

In mode 2 you can make field settings to configure the system. The LEDs give a binary representation of the setting/value number.

For more information and advice about the impact of settings [2-8], [2-9], [2-41] and [2-42], see ["19.2 Energy saving and optimum operation"](#) [▶ 108].


Setting H1P H2P H3P H4P H5P H6P H7P (= binary)	Value	
	H1P H2P H3P H4P H5P H6P H7P	Description
[2-8] ✱ ● ● ✱ ● ● ● T_e target temperature during cooling operation.	✱ ● ● ● ● ✱ ●	6°C
	✱ ● ● ● ● ✱ ✱ (default)	Auto
	✱ ● ● ● ✱ ● ●	8°C
	✱ ● ● ● ✱ ● ✱	9°C
	✱ ● ● ● ✱ ✱ ●	10°C
	✱ ● ● ● ✱ ✱ ✱	11°C
[2-9] ✱ ● ● ✱ ● ● ✱ T_c target temperature during heating operation.	✱ ● ● ● ● ● ✱ (default)	Auto
	✱ ● ● ● ● ✱ ●	46°C
	✱ ● ● ● ✱ ● ●	43°C

Setting H1P H2P H3P H4P H5P H6P H7P (= binary)	Value	
	H1P H2P H3P H4P H5P H6P H7P	Description
[2-12] ☼ ● ● ☼ ☼ ● ● Enable the low noise function and/or power consumption limitation via external control adaptor (DTA104A61/62). If the system needs to be running under low noise operation or under power consumption limitation conditions when an external signal is sent to the unit, this setting should be changed. This setting will only be effective when the optional external control adaptor (DTA104A61/62) is installed in the indoor unit.	☼ ● ● ● ● ● ☼ (default)	Deactivated.
	☼ ● ● ● ● ☼ ●	Activated.
[2-18] ☼ ● ☼ ● ● ☼ ● Fan high static pressure setting. In order to increase the static pressure the outdoor unit fan is delivering, this setting should be activated. For details about this setting, see technical specifications.	☼ ● ● ● ● ● ☼ (default)	Deactivated.
	☼ ● ● ● ● ☼ ●	Activated.
[2-20] ☼ ● ☼ ● ☼ ● ● Manual additional refrigerant charge. In order to add the additional refrigerant charge amount in a manual way (without automatic refrigerant charging functionality), following setting should be applied.	☼ ● ● ● ● ● ☼ (default)	Deactivated.
	☼ ● ● ● ● ☼ ●	Activated. To stop the manual additional refrigerant charge operation (when the required additional refrigerant amount is charged), push BS3. If this function was not aborted by pushing BS3, the unit will stop its operation after 30 minutes. If 30 minutes was not sufficient to add the needed refrigerant amount, the function can be reactivated by changing the field setting again.
[2-21] ☼ ● ☼ ● ☼ ● ☼ Refrigerant recovery/vacuuming mode. In order to achieve a free pathway to reclaim refrigerant out of the system or to remove residual substances or to vacuum the system it is necessary to apply a setting which will open required valves in the refrigerant circuit so the reclaim of refrigerant or vacuuming process can be done properly.	☼ ● ● ● ● ● ☼ (default)	Deactivated.
	☼ ● ● ● ● ☼ ●	Activated. To stop the refrigerant recovery/vacuuming mode, push BS1. If BS1 is not pushed, the system will remain in refrigerant recovery/vacuuming mode.

Setting H1P H2P H3P H4P H5P H6P H7P (= binary)	Value		
	H1P H2P H3P H4P H5P H6P H7P	Description	
[2-22]  Automatic low noise setting and level during night time. By changing this setting, you activate the automatic low noise operation function of the unit and define the level of operation. Depending on the chosen level, the noise level will be lowered. The start and stop moments for this function are defined under setting [2-26] and [2-27].	 (default)	Deactivated	
		Level 1	Level 3<Level 2<Level 1
		Level 2	
		Level 3	
[2-25]  Low noise operation level via the external control adaptor. If the system needs to be running under low noise operation conditions when an external signal is sent to the unit, this setting defines the level of low noise that will be applied. This setting will only be effective when the optional external control adaptor (DTA104A61/62) is installed and the setting [2-12] was activated.		Level 1	Level 3<Level 2<Level 1
	 (default)	Level 2	
		Level 3	
[2-26]  Low noise operation start time. This setting is used in conjunction with setting [2-22].		20h00	
	 (default)	22h00	
		24h00	
[2-27]  Low noise operation stop time. This setting is used in conjunction with setting [2-22].		6h00	
		7h00	
	 (default)	8h00	
[2-30]  Power consumption limitation level (step 1) via the external control adaptor (DTA104A61/62). If the system needs to be running under power consumption limitation conditions when an external signal is sent to the unit, this setting defines the level power consumption limitation that will be applied for step 1. The level is according to the table.		60%	
	 (default)	70%	
		80%	
[2-31]  Power consumption limitation level (step 2) via the external control adaptor (DTA104A61/62). If the system needs to be running under power consumption limitation conditions when an external signal is sent to the unit, this setting defines the level power consumption limitation that will be applied for step 2. The level is according to the table.		30%	
	 (default)	40%	
		50%	

Setting H1P H2P H3P H4P H5P H6P H7P (= binary)	Value	
	H1P H2P H3P H4P H5P H6P H7P	Description
[2-32] ☼ ☼ ● ● ● ● ● Forced, all time, power consumption limitation operation (no external control adaptor is required to perform power consumption limitation). If the system always needs to be running under power consumption limitation conditions, this setting activates and defines the level power consumption limitation that will be applied continuously. The level is according to the table.	☼ ● ● ● ● ● ☼ (default)	Function not active.
	☼ ● ● ● ● ☼ ●	Follows [2-30] setting.
	☼ ● ● ● ☼ ● ●	Follows [2-31] setting.
[2-38] ☼ ☼ ● ● ☼ ☼ ● Type of indoor units After changing this setting, you have to power OFF the system, wait for 20 s, and then power ON again. If not, the setting will not be processed and malfunction codes might occur.	☼ ● ● ● ● ● ☼ (default)	VRV DX indoor units installed
	☼ ● ● ● ● ☼ ●	RA DX indoor units installed
[2-41] ☼ ☼ ● ☼ ● ● ☼ Cooling comfort setting. This setting is used in conjunction with setting [2-8].	☼ ● ● ● ● ● ●	Eco
	☼ ● ● ● ● ● ☼	Mild
	(default)	
	☼ ● ● ● ● ☼ ●	Quick
[2-42] ☼ ☼ ● ☼ ● ☼ ● Heating comfort setting. This setting is used in conjunction with setting [2-9].	☼ ● ● ● ● ● ●	Eco
	☼ ● ● ● ● ● ☼	Mild
	(default)	
	☼ ● ● ● ● ☼ ●	Quick
	☼ ● ● ● ● ☼ ☼	Powerful

19.1.9 To connect the PC configurator to the outdoor unit

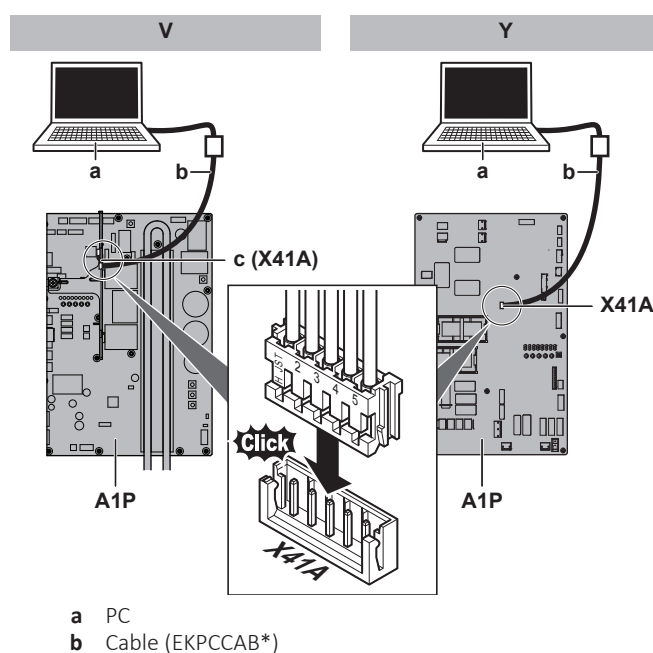

c (X41A) Extension cable connected to X41A
X41A Connector
A1P Outdoor unit main PCB

19.2 Energy saving and optimum operation

This heat pump system is equipped with advanced energy saving functionality. Depending on the priority, emphasis can be put on energy saving or comfort level. Several parameters can be selected, resulting in the optimal balance between energy consumption and comfort for the particular application.

Several patterns are available and explained below. Modify the parameters to the needs of your building and to realize the best balance between energy consumption and comfort.

No matter which control is selected, variations on the behaviour of the system are still possible due to protection controls to keep the unit operating under reliable conditions. The intentional target, however, is fixed and will be used to obtain the best balance between energy consumption and comfort, depending on the application type.

19.2.1 Available main operation methods

Basic

The refrigerant temperature is fixed independent from the situation.

To activate this in...	Change...
Cooling operation	[2-8]=2
Heating operation	[2-9]=2

Automatic

The refrigerant temperature is set depending on the outdoor ambient conditions. As such adjusting the refrigerant temperature to match the required load (which is also related to the outdoor ambient conditions).

E.g., when your system is operating in cooling, you do not need as much cooling under low outdoor ambient temperatures (e.g., 25°C) as under high outdoor ambient temperatures (e.g., 35°C). Using this idea, the system automatically starts increasing its refrigerant temperature, automatically reducing the delivered capacity and increasing the system's efficiency.

E.g., when your system is operating in heating, you do not need as much heating under high outdoor ambient temperatures (e.g., 15°C) as under low outdoor ambient temperatures (e.g., -5°C). Using this idea, the system automatically starts decreasing its refrigerant temperature, automatically reducing the delivered capacity and increasing the system's efficiency.

To activate this in...	Change...
Cooling operation	[2-8]=3 (default)
Heating operation	[2-9]=1 (default)

Hi-sensible/economic (cooling/heating)

The refrigerant temperature is set higher/lower (cooling/heating) compared to basic operation. The focus under high sensible mode is comfort feeling for the customer.

The selection method of indoor units is important and has to be considered as the available capacity is not the same as under basic operation.

For details concerning to Hi-sensible applications, please contact your dealer.

To activate this in...	Change...
Cooling operation	[2-8] to the appropriate value, matching the requirements of the pre-designed system containing a high sensible solution.
Heating operation	[2-9] to the appropriate value, matching the requirements of the pre-designed system containing a high sensible solution.

[2-8]	T _e target (°C)
4	8
5	9
6	10
7	11

[2-9]	T _e target (°C)
4	43

19.2.2 Available comfort settings

For each of above modes a comfort level can be selected. The comfort level is related to the timing and the effort (energy consumption) which is put in achieving a certain room temperature by temporarily changing the refrigerant temperature to different values in order to achieve requested conditions more quickly.

Powerful

Overshoot (during heating operation) or undershoot (during cooling operation) is allowed compared to the requested refrigerant temperature, in order to achieve the required room temperature very fast. The overshoot is allowed from the start up moment.

When the request from the indoor units becomes more moderate, the system will eventually go to the steady state condition which is defined by the operation method above.

To activate this in...	Change...
Cooling operation	[2-41]=3. This setting is used in conjunction with setting [2-8].
Heating operation	[2-42]=3. This setting is used in conjunction with setting [2-9]

Quick

Overshoot (during heating operation) or undershoot (during cooling operation) is allowed compared to the requested refrigerant temperature, in order to achieve the required room temperature very fast. The overshoot is allowed from the start up moment.

When the request from the indoor units becomes more moderate, the system will eventually go to the steady state condition which is defined by the operation method above.

To activate this in...	Change...
Cooling operation	[2-41]=2. This setting is used in conjunction with setting [2-8].
Heating operation	[2-42]=2. This setting is used in conjunction with setting [2-9].

Mild

Overshoot (during heating operation) or undershoot (during cooling operation) is allowed compared to the requested refrigerant temperature, in order to achieve the required room temperature very fast. The overshoot is not allowed from the start up moment. The start up occurs under the condition which is defined by the operation mode above.

When the request from the indoor units becomes more moderate, the system will eventually go to the steady state condition which is defined by the operation method above.

Note: The start up condition is different from the powerful and quick comfort setting.


To activate this in...	Change...
Cooling operation	[2-41]=1. This setting is used in conjunction with setting [2-8].
Heating operation	[2-42]=1. This setting is used in conjunction with setting [2-9].

Eco

The original refrigerant temperature target, which is defined by the operation method (see above) is kept without any correction, unless for protection control.


To activate this in...	Change...
Cooling operation	[2-41]=0. This setting is used in conjunction with setting [2-8].
Heating operation	[2-42]=0. This setting is used in conjunction with setting [2-9].

19.2.3 Example: Automatic mode during cooling

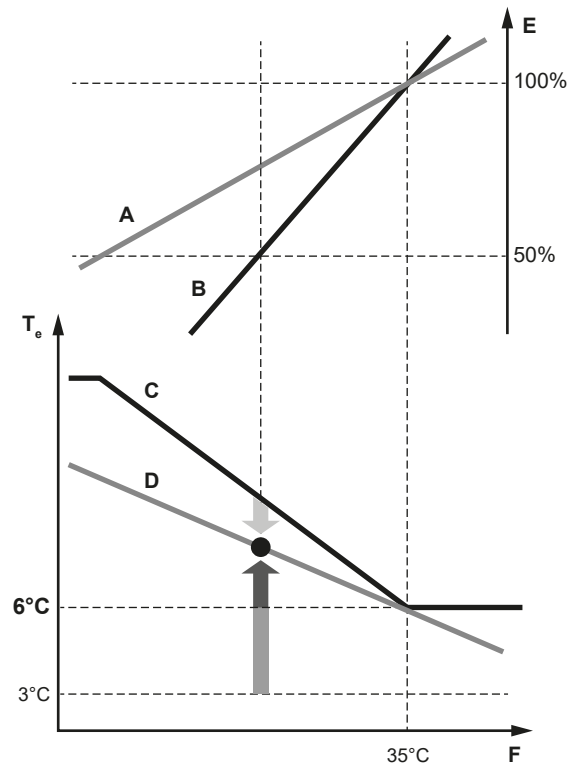


- A** Actual load curve
- B** Virtual load curve (initial capacity automatic mode)
- C** Virtual target value (initial evaporation temperature value automatic mode)
- D** Required evaporation temperature value
- E** Load factor
- F** Outside air temperature
- T_e** Evaporating temperature
- Quick** (thick black line)
- Powerful** (medium grey line)
- Mild** (thin grey line)

Room temperature evolution:

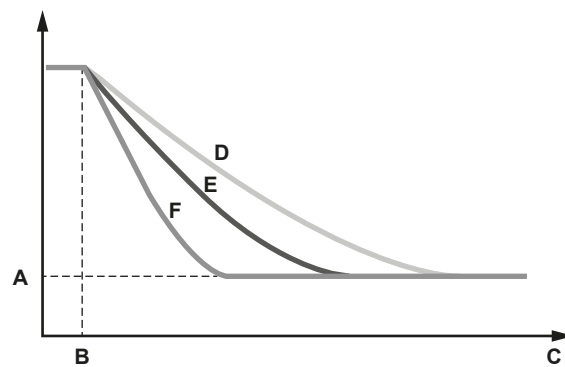


- A** Indoor unit set temperature
- B** Operation start
- C** Operating time
- D** Mild
- E** Quick
- F** Powerful

19.2.4 Example: Automatic mode during heating

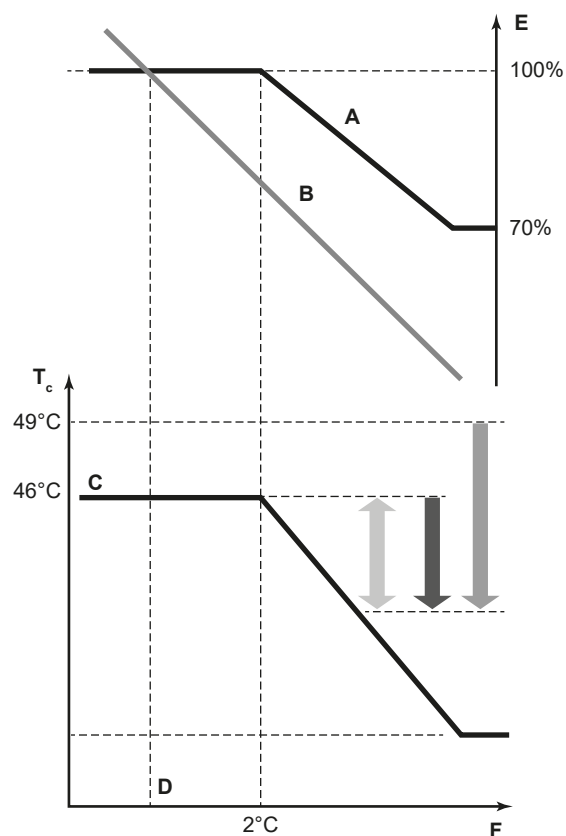

- A** Virtual load curve (default automatic mode peak capacity)
- B** Load curve
- C** Virtual target value (initial condensation temperature value automatic mode)
- D** Design temperature
- E** Load factor
- F** Outside air temperature
- T_c** Condensing temperature
- Quick
- Powerful
- Mild

Room temperature evolution:

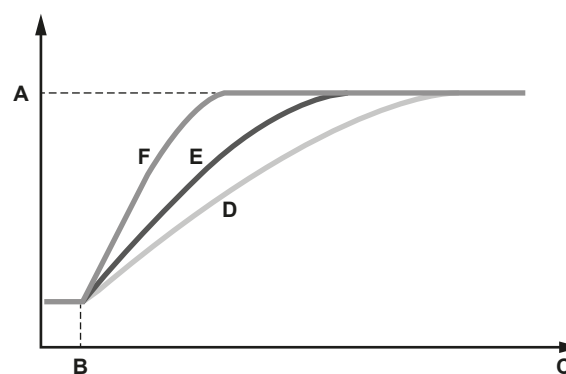

- A** Indoor unit set temperature
- B** Operation start
- C** Operating time
- D** Mild
- E** Quick
- F** Powerful

20 Commissioning

In this chapter

20.1	Overview: Commissioning	113
20.2	Precautions when commissioning	113
20.3	Checklist before commissioning	114
20.4	Checklist during commissioning	115
20.4.1	About the system test run	115
20.4.2	To perform a test run (7-LEDs display)	115
20.4.3	Correcting after abnormal completion of the test run	116

20.1 Overview: Commissioning

After installation and once the field settings are defined, the installer is obliged to verify correct operation. Therefore a test run **MUST** be performed according to the procedures described below.

This chapter describes what you have to do and know to commission the system after it is configured.

Commissioning typically consists of the following stages:

- 1 Checking the "Checklist before commissioning".
- 2 Performing a test run.
- 3 If necessary, correcting errors after abnormal completion of the test run.
- 4 Operating the system.

20.2 Precautions when commissioning

**DANGER: RISK OF ELECTROCUTION**

**DANGER: RISK OF BURNING/SCALDING**

**CAUTION**
Do NOT perform the test operation while working on the indoor unit(s).
When performing the test operation, NOT ONLY the outdoor unit, but the connected indoor unit will operate as well. Working on an indoor unit while performing a test operation is dangerous.

**CAUTION**
Do NOT insert fingers, rods or other objects into the air inlet or outlet. Do NOT remove the fan guard. When the fan is rotating at high speed, it will cause injury.

**INFORMATION**
During the first running period of the unit, the required power may be higher than stated on the nameplate of the unit. This phenomenon is caused by the compressor, that needs a continuous run time of 50 hours before reaching smooth operation and stable power consumption.

**NOTICE**

Turn ON the power 6 hours before operation in order to have power running to the crankcase heater and to protect the compressor.

During test operation, the outdoor unit and the indoor units will start up. Make sure that the preparations of all indoor units are finished (field piping, electrical wiring, air purge, ...). See installation manual of the indoor units for details.

20.3 Checklist before commissioning

- 1 After the installation of the unit, check the items listed below.
- 2 Close the unit.
- 3 Power up the unit.

☐	You have read the complete installation and operation instructions described in the installer and user reference guide .
☐	Installation Check that the unit is properly installed, to avoid abnormal noises and vibrations when starting up the unit.
☐	Field wiring Check that the field wiring has been carried out according to the instructions described in the chapter " 18 Electrical installation " [▶ 88], according to the wiring diagrams and according to the applicable national wiring regulation.
☐	Power supply voltage Check the power supply voltage on the local supply panel. The voltage MUST correspond to the voltage on the nameplate of the unit.
☐	Earth wiring Be sure that the earth wires have been connected properly and that the earth terminals are tightened.
☐	Insulation test of the main power circuit Using a megatester for 500 V, check that the insulation resistance of 2 MΩ or more is attained by applying a voltage of 500 V DC between power terminals and earth. NEVER use the megatester for the interconnection wiring.
☐	Fuses, circuit breakers, or protection devices Check that the fuses, circuit breakers, or the locally installed protection devices are of the size and type specified in the chapter " 18.1.6 Safety device requirements " [▶ 93]. Be sure that neither a fuse nor a protection device has been bypassed.
☐	Internal wiring Visually check the switch box and the inside of the unit for loose connections or damaged electrical components.
☐	Pipe size and pipe insulation Be sure that correct pipe sizes are installed and that the insulation work is properly executed.
☐	Stop valves Be sure that the stop valves are open on both liquid and gas side.
☐	Damaged equipment Check the inside of the unit for damaged components or squeezed pipes.
☐	Refrigerant leak Check the inside of the unit on refrigerant leakage. If there is a refrigerant leak, try to repair the leak. If the repair is unsuccessful, call your local dealer. Do not touch any refrigerant which has leaked out from refrigerant piping connections. This may result in frostbite.

☐	Oil leak Check the compressor for oil leakage. If there is an oil leak, try to repair the leak. If the repairing is unsuccessful, call your local dealer.
☐	Air inlet/outlet Check that the air inlet and outlet of the unit is NOT obstructed by paper sheets, cardboard, or any other material.
☐	Additional refrigerant charge The amount of refrigerant to be added to the unit shall be written on the included "Added refrigerant" plate and attached to the rear side of the front cover.
☐	Installation date and field setting Be sure to keep a record of the installation date on the sticker on the rear of the front panel according to EN60335-2-40 and keep record of the contents of the field setting(s).

20.4 Checklist during commissioning

☐	To perform a test run .
--------------------------	--------------------------------

20.4.1 About the system test run



NOTICE

Make sure to carry out the test run after the first installation. Otherwise, the malfunction code **U3** will be displayed on the user interface and normal operation or individual indoor unit test run cannot be carried out.

The procedure below describes the test operation of the complete system. This operation checks and judges following items:

- Check of wrong wiring (communication check with indoor units).
- Check of the stop valves opening.
- Judgement of piping length.

Abnormalities on indoor units cannot be checked for each unit separately. After the test operation is finished, check the indoor units one by one by performing a normal operation using the user interface. Refer to the indoor unit installation manual for more details concerning the individual test run.



INFORMATION

- It may take 10 minutes to achieve a uniform refrigerant state before the compressor starts.
- During the test operation, the refrigerant running sound or the magnetic sound of a solenoid valve may become loud and the display indication may change. These are not malfunctions.

20.4.2 To perform a test run (7-LEDs display)

- 1 Make sure all field settings you want are set; see ["19.1 Making field settings"](#) [▶ 98].
- 2 Turn ON the power to the outdoor unit and the connected indoor unit(s).



NOTICE

Turn ON the power 6 hours before operation in order to have power running to the crankcase heater and to protect the compressor.

- 3 Make sure the default (idle) situation is existing (H1P is OFF); see ["19.1.4 access mode 1 or 2"](#) [▶ 100]. Push BS4 for 5 seconds or more. The unit will start test operation.

Result: The test operation is automatically carried out, the outdoor unit H2P flashes and the indication "Test operation" and "Under centralised control" will display on the user interface of indoor units.

Steps during the automatic system test run procedure:

Step	Description
● ☼ ● ● ● ● ☼	Control before start up (pressure equalisation)
● ☼ ● ● ● ☼ ●	Cooling start up control
● ☼ ● ● ● ☼ ☼	Cooling stable condition
● ☼ ● ● ☼ ● ●	Communication check
● ☼ ● ● ☼ ● ☼	Stop valve check
● ☼ ● ● ☼ ☼ ●	Pipe length check
● ☼ ● ☼ ● ● ☼	Pump down operation
● ☼ ● ☼ ● ☼ ●	Unit stop



INFORMATION

During the test operation, it is not possible to stop the unit operation from a user interface. To abort the operation, press BS3. The unit will stop after ±30 seconds.

- 4 Check the test operation results on the outdoor unit 7-LEDs display.

Completion	Description
Normal completion	● ● ☼ ● ● ● ●
Abnormal completion	● ☼ ☼ ● ● ● ● Refer to "20.4.3 Correcting after abnormal completion of the test run" [▶ 116] to take actions for correcting the abnormality. When the test operation is fully completed, normal operation will be possible after 5 minutes.

20.4.3 Correcting after abnormal completion of the test run

The test operation is only completed if there is no malfunction code displayed. In case of a displayed malfunction code, perform correcting actions as explained in the malfunction code table. Carry out the test operation again and confirm that the abnormality is properly corrected.



INFORMATION

If a malfunction occurs, the error code is displayed on the user interface of the indoor unit.



INFORMATION

Refer to the installation manual of the indoor unit for detailed malfunction codes related to indoor units.

21 Hand-over to the user

Once the test run is finished and the unit operates properly, make sure the following is clear for the user:

- Make sure that the user has the printed documentation and ask him/her to keep it for future reference. Inform the user that he/she can find the complete documentation at the URL mentioned earlier in this manual.
- Explain to the user how to properly operate the system and what to do in case of problems.
- Show the user what to do for the maintenance of the unit.

22 Maintenance and service



NOTICE

Maintenance **MUST** be done by an authorised installer or service agent.
We recommend performing maintenance at least once a year. However, applicable legislation might require shorter maintenance intervals.



NOTICE

Applicable legislation on **fluorinated greenhouse gases** requires that the refrigerant charge of the unit is indicated both in weight and CO₂ equivalent.
Formula to calculate the quantity in CO₂ equivalent tonnes: GWP value of the refrigerant × total refrigerant charge [in kg] / 1000

In this chapter

22.1	Maintenance safety precautions.....	118
22.1.1	To prevent electrical hazards.....	118
22.2	Checklist for yearly maintenance of the outdoor unit.....	119
22.3	About service mode operation.....	119
22.3.1	To use vacuum mode.....	119
22.3.2	To recover refrigerant.....	120

22.1 Maintenance safety precautions



DANGER: RISK OF ELECTROCUTION



DANGER: RISK OF BURNING/SCALDING




NOTICE: Risk of electrostatic discharge

Before performing any maintenance or service work, touch a metal part of the unit in order to eliminate static electricity and to protect the PCB.

22.1.1 To prevent electrical hazards

When performing service to inverter equipment:

- 1 Do NOT perform electrical work for 10 minutes after turning off the power supply.
- 2 Measure the voltage between terminals on the terminal block for power supply with a tester and confirm that the power supply is shut off. In addition, measure points as shown in the figure, with a tester and confirm that the voltage of the capacitor in the main circuit is less than 50 V DC. If the voltage measured is still higher than 50 V DC, discharge the capacitors in a safe manner by using a dedicated capacitor discharge pen to avoid possibility of sparking.

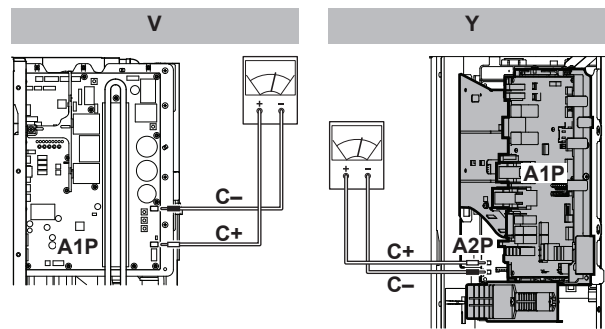

- 3 To prevent damaging the PCB, touch a non-coated metal part to eliminate static electricity before pulling out or plugging in connectors.
- 4 Pull out junction connectors for the fan motors in the outdoor unit before starting service operation on the inverter equipment. Be careful NOT to touch the live parts. (If a fan rotates due to strong wind, it may store electricity in the capacitor or in the main circuit and cause electrical shock.)

Junction connectors	X106A for M1F X107A for M2F
---------------------	--------------------------------

- 5 After the service is finished, plug the junction connector back in. Otherwise the malfunction code E7 will be displayed and normal operation will NOT be performed.

For details refer to the wiring diagram labelled on the back of the service cover.

Pay attention to the fan. It is dangerous to inspect the unit while the fan is running. Make sure to turn off the main switch and to remove the fuses from the control circuit located in the outdoor unit.

22.2 Checklist for yearly maintenance of the outdoor unit

Check the following at least once a year:

- Heat exchanger

The heat exchanger of the outdoor unit can get blocked up due to dust, dirt, leaves, etc. It is recommended to clean the heat exchanger yearly. A blocked heat exchanger can lead to too low pressure or too high pressure leading to worse performance.

22.3 About service mode operation

Refrigerant recovery operation/vacuuming operation is possible by applying setting [2-21]. Refer to "19.1 Making field settings" [▶ 98] for details how to set mode 2.

When vacuuming/recovery mode is used, check very carefully what should be vacuumed/recovered before starting. See installation manual of the indoor unit for more information about vacuuming and recovery.

22.3.1 To use vacuum mode

- 1 When the unit is at standstill, activate setting [2-21] to start vacuuming mode.

Result: When confirmed, the indoor and outdoor unit expansion valves will fully open. At that moment H1P lights and the user interface of all indoor units indicate TEST (test operation) and  (external control) and the operation will be prohibited.

- 2 Evacuate the system with a vacuum pump.
- 3 Press BS1 to stop vacuuming mode.

22.3.2 To recover refrigerant

This should be done with a refrigerant recovery unit. Follow the same procedure as for vacuuming method.



DANGER: RISK OF EXPLOSION

Pump down – Refrigerant leakage. If you want to pump down the system, and there is a leak in the refrigerant circuit:

- Do NOT use the unit's automatic pump down function, with which you can collect all refrigerant from the system into the outdoor unit. **Possible consequence:** Self-combustion and explosion of the compressor because of air going into the operating compressor.
- Use a separate recovery system so that the unit's compressor does NOT have to operate.



NOTICE

Make sure to NOT recover any oil while recovering refrigerant. **Example:** By using an oil separator.

23 Troubleshooting

In this chapter

23.1	Overview: Troubleshooting	121
23.2	Precautions when troubleshooting.....	121
23.3	Solving problems based on error codes.....	121
23.3.1	Error codes: Overview.....	122

23.1 Overview: Troubleshooting

Before troubleshooting

Carry out a thorough visual inspection of the unit and look for obvious defects such as loose connections or defective wiring.

23.2 Precautions when troubleshooting

**DANGER: RISK OF ELECTROCUTION**

**DANGER: RISK OF BURNING/SCALDING**



WARNING

- When carrying out an inspection on the switch box of the unit, ALWAYS make sure that the unit is disconnected from the mains. Turn off the respective circuit breaker.
- When a safety device was activated, stop the unit and find out why the safety device was activated before resetting it. NEVER shunt safety devices or change their values to a value other than the factory default setting. If you are unable to find the cause of the problem, call your dealer.



WARNING

Prevent hazards due to inadvertent resetting of the thermal cut-out: power to this appliance MUST NOT be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly turned ON and OFF by the utility.

23.3 Solving problems based on error codes

In case of a displayed malfunction code, perform correcting actions as explained in the malfunction code table.

After correcting the abnormality, press BS3 to reset the malfunction code and retry operation.



INFORMATION

If a malfunction occurs, the error code is displayed on the user interface of the indoor unit.

**INFORMATION**

If a malfunction occurs, the error code is displayed on the outdoor unit's 7-segments display and on the user interface of the indoor unit.

23.3.1 Error codes: Overview

In case other error codes appear, contact your dealer.

Main code	Cause	Solution
E3	- The stop valve of an outdoor unit is left closed. - Refrigerant overcharge	- Open the stop valve on both the gas and liquid side. - Recalculate the required amount of refrigerant from the piping length and correct the refrigerant charge level by recovering any excessive refrigerant with a refrigerant recovery machine.
E4	- The stop valve of an outdoor unit is left closed. - Insufficient refrigerant	- Open the stop valve on both the gas and liquid side. - Check if the additional refrigerant charge has been finished correctly. Recalculate the required amount of refrigerant from the piping length and add an adequate amount of refrigerant.
E9	Electronic expansion valve malfunction (Y1E) - A1P (X21A) (Y3E) - A1P (X22A)	Check connection on PCB or actuator.
F3	- The stop valve of an outdoor unit is left closed. - Insufficient refrigerant	- Open the stop valve on both the gas and liquid side. - Check if the additional refrigerant charge has been finished correctly. Recalculate the required amount of refrigerant from the piping length and add an adequate amount of refrigerant.
F5	Refrigerant overcharge	Recalculate the required amount of refrigerant from the piping length and correct the refrigerant charge level by recovering any excessive refrigerant with a refrigerant recovery machine.
H9	Ambient temperature sensor malfunction (R1T) - A1P (X11A)	Check connection on PCB or actuator.
J3	Discharge temperature sensor malfunction (R2T): open circuit / short circuit - A1P (X12A)	Check connection on PCB or actuator.
J5	Suction temperature sensor malfunction (R3T) - A1P (X12A) (R5T) - A1P (X12A)	Check connection on PCB or actuator.
J6	Liquid temperature sensor (coil) malfunction (R4T) - A1P (X12A)	Check connection on PCB or actuator.
J7	Liquid temperature sensor (after subcool HE) malfunction (R7T) - A1P (X13A)	Check connection on PCB or actuator.

Main code	Cause	Solution
J9	Gas temperature sensor (after subcool HE) malfunction (R6T) - A1P (X13A)	Check connection on PCB or actuator.
JA	High pressure sensor malfunction (S1NPH): open circuit / short circuit - A1P (X17A)	Check connection on PCB or actuator.
JC	Low pressure sensor malfunction (S1NPL): open circuit / short circuit - A1P (X18A)	Check connection on PCB or actuator.
LC	Transmission outdoor unit - inverter: INV1 / FAN1 transmission trouble	Check connection.
P1	INV1 unbalanced power supply voltage	Check if power supply is within range.
U1	Reversed power supply phase malfunction	Correct phase order.
U2	Insufficient supply voltage	Check if the supply voltage is supplied properly.
U3	Malfunction code: System test run not yet executed (system operation not possible)	Execute system test run.
U4	No power is supplied to the outdoor unit.	Check if the power wiring for the outdoor unit is connected correctly.
U7	Faulty wiring to Q1/Q2	Check Q1/Q2 wiring.
U9	System mismatch. Wrong type of indoor units combined (R410A, R407C, RA, etc) Indoor unit malfunction	Check if other indoor units have malfunction and confirm indoor unit mix is allowed.
UR	Improper type of indoor units are connected.	Check the type of indoor units that are currently connected. If they are not proper, replace them with proper ones.
UH	Incorrect interconnections between units.	Connect interconnections F1 and F2 of the connected BP unit correctly to the outdoor unit's PCB (TO BP UNIT). Make sure that the communication with the BP unit is enabled.
UF	- The stop valve of an outdoor unit is left closed. - The piping and wiring of the specified indoor unit are not connected correctly to the outdoor unit.	- Open the stop valve on both the gas and liquid side. - Confirm that the piping and wiring of the specified indoor unit are connected correctly to the outdoor unit.

24 Disposal



NOTICE

Do NOT try to dismantle the system yourself: dismantling of the system, treatment of the refrigerant, oil and other parts **MUST** comply with applicable legislation. Units **MUST** be treated at a specialised treatment facility for reuse, recycling and recovery.

25 Technical data

A **subset** of the latest technical data is available on the regional Daikin website (publicly accessible). The **full set** of the latest technical data is available on the Daikin Business Portal (authentication required).

In this chapter

- 25.1 Service space: Outdoor unit 126
- 25.2 Piping diagram: Outdoor unit..... 128
- 25.3 Wiring diagram: Outdoor unit..... 129

25.1 Service space: Outdoor unit

When mounting units side by side, the piping route must be to the front, to the back or downwards. In this case the piping route to the side is not possible.

When mounting the units side by side and routing the piping to the back, you must keep a distance of ≥ 250 mm between the units (instead of ≥ 100 mm as shown on the figures below).

Single unit () | Single row of units ()

	A~E	H_B H_D H_U	(mm)						
			a	b	c	d	e	e_B	e_D
	B	—		≥ 100					
	A, B, C	—	≥ 100	≥ 100	≥ 100				
	B, E	—		≥ 100			≥ 1000		≤ 500
	A, B, C, E	—	≥ 150	≥ 150	≥ 150		≥ 1000		≤ 500
	D	—				≥ 500			
	D, E	—				≥ 1000	≥ 1000	≤ 500	
	B, D	—		≥ 100		≥ 500			
	B, D, E	$H_B < H_D$		≥ 250		≥ 750	≥ 1000	≤ 500	
		$H_B \leq \frac{1}{2}H_U$		≥ 250		≥ 1000	≥ 1000	≤ 500	
		$\frac{1}{2}H_U < H_B \leq H_U$		≥ 250		≥ 1000	≥ 1000	≤ 500	
		$H_B > H_U$	⊘						
	B, D, E	$H_B > H_D$		≥ 100		≥ 1000	≥ 1000		≤ 500
		$H_D \leq \frac{1}{2}H_U$		≥ 200		≥ 1000	≥ 1000		≤ 500
		$\frac{1}{2}H_U < H_D \leq H_U$		≥ 200		≥ 1700	≥ 1000		≤ 500
		$H_D > H_U$		≥ 200		≥ 1700	≥ 1000		≤ 500
	A, B, C	—	≥ 200	≥ 300	≥ 1000				
	A, B, C, E	—	≥ 200	≥ 300	≥ 1000		≥ 1000		≤ 500
	D	—				≥ 1000			
	D, E	—				≥ 1000	≥ 1000	≤ 500	
	B, D	$H_D > H_U$		≥ 300		≥ 1000			
		$H_D \leq \frac{1}{2}H_U$		≥ 250		≥ 1500			
		$\frac{1}{2}H_U < H_D \leq H_U$		≥ 300		≥ 1500			
		$\frac{1}{2}H_U < H_D \leq H_U$		≥ 300		≥ 1500			
	B, D, E	$H_B < H_D$		≥ 300		≥ 1000	≥ 1000	≤ 500	
		$H_B \leq \frac{1}{2}H_U$		≥ 300		≥ 1250	≥ 1000	≤ 500	
		$\frac{1}{2}H_U < H_B \leq H_U$		≥ 300		≥ 1250	≥ 1000	≤ 500	
		$H_B > H_U$	⊘						
	B, D, E	$H_B > H_D$		≥ 250		≥ 1500	≥ 1000		≤ 500
		$H_D \leq \frac{1}{2}H_U$		≥ 300		≥ 1500	≥ 1000		≤ 500
		$\frac{1}{2}H_U < H_D \leq H_U$		≥ 300		≥ 2200	≥ 1000		≤ 500
		$H_D > H_U$		≥ 300		≥ 2200	≥ 1000		≤ 500

A,B,C,D Obstacles (walls/baffle plates)

E Obstacle (roof)

a,b,c,d,e Minimum service space between the unit and obstacles A, B, C, D and E

e_B Maximum distance between the unit and the edge of obstacle E, in the direction of obstacle B

e_D Maximum distance between the unit and the edge of obstacle E, in the direction of obstacle D

H_U Height of the unit


H_B, H_D Height of obstacles B and D

1 Seal the bottom of the installation frame to prevent discharged air from flowing back to the suction side through the bottom of the unit.





2 Maximum two units can be installed.

⊘ Not allowed

Multiple rows of units ()

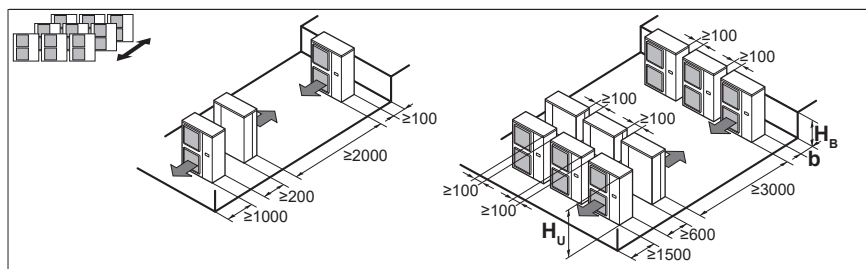
	<table> <tr> <th>H_B H_U</th><th>b [mm]</th></tr> <tr> <td>$H_B \leq \frac{1}{2} H_U$</td><td>$b \geq 250$</td></tr> <tr> <td>$\frac{1}{2} H_U < H_B \leq H_U$</td><td>$b \geq 300$</td></tr> <tr> <td>$H_B > H_U$</td><td>⊘</td></tr> </table>	H_B H_U	b [mm]	$H_B \leq \frac{1}{2} H_U$	$b \geq 250$	$\frac{1}{2} H_U < H_B \leq H_U$	$b \geq 300$	$H_B > H_U$	⊘
H_B H_U	b [mm]								
$H_B \leq \frac{1}{2} H_U$	$b \geq 250$								
$\frac{1}{2} H_U < H_B \leq H_U$	$b \geq 300$								
$H_B > H_U$	⊘								

Stacked units (max. 2 levels) ()

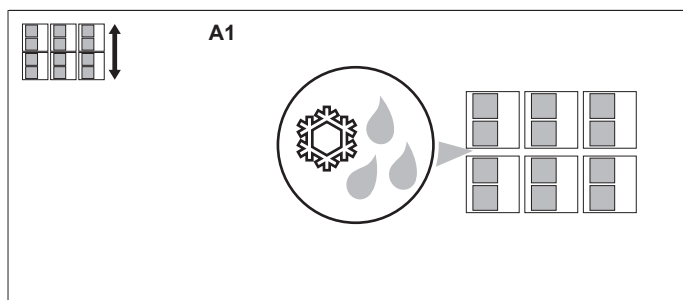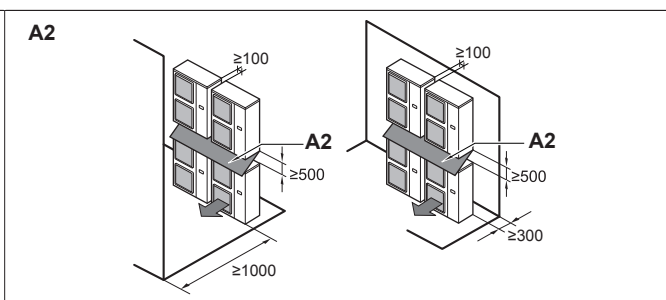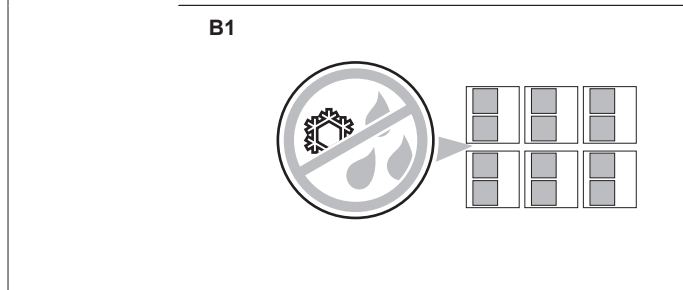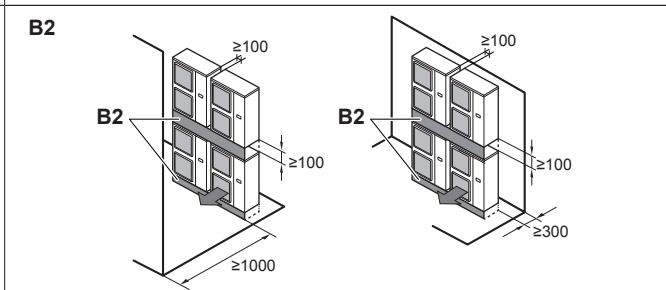A1 	A2 
B1 	B2 

- A1=>A2** (A1) If there is danger of drainage dripping and freezing between the upper and lower units...
 (A2) Then install a **roof** between the upper and lower units. Install the upper unit high enough above the lower unit to prevent ice buildup at the upper unit's bottom plate.
- B1=>B2** (B1) If there is no danger of drainage dripping and freezing between the upper and lower units...
 (B2) Then it is not required to install a roof, but **seal the gap** between the upper and lower units to prevent discharged air from flowing back to the suction side through the bottom of the unit.

25.2 Piping diagram: Outdoor unit

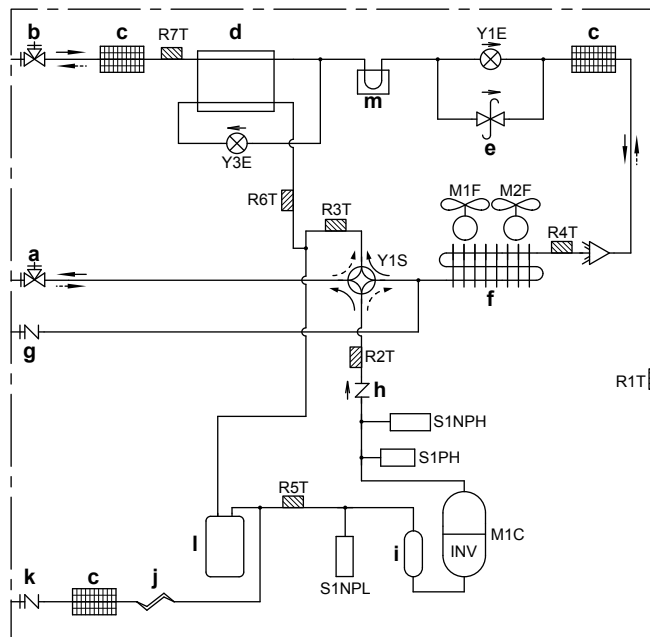

- a Stop valve (gas)
- b Stop valve (liquid)
- c Filter (3×)
- d Subcool heat exchanger
- e Pressure regulating valve
- f Heat exchanger
- g Service port (high pressure)
- h Check valve
- i Compressor accumulator
- j Capillary tube
- k Service port (refrigerant charge)
- l Accumulator
- m Heat sink PCB (only for RXYSQ4~6_V)
- M1C** Compressor
- M1F-M2F** Fan motor
- R1T** Thermistor (air)
- R2T** Thermistor (discharge)
- R3T** Thermistor (suction 1)
- R4T** Thermistor (heat exchanger)
- R5T** Thermistor (suction 2)
- R6T** Thermistor (subcool heat exchanger)
- R7T** Thermistor (liquid pipe)
- S1NPH** High pressure sensor
- S1NPL** Low pressure sensor
- S1PH** High pressure switch
- Y1E** Electronic expansion valve (main)
- Y3E** Electronic expansion valve (subcool heat exchanger)
- Y1S** Solenoid valve (4-way valve)
- Heating
- Cooling

25.3 Wiring diagram: Outdoor unit

The wiring diagram is delivered with the unit, located at the inside of the service cover.

 
 
 
Notes for RXYSQ4~6_V:

- 1 Symbols (see below).
- 2 For X37A refer to the installation manual of the option.
- 3 Refer to the installation or service manual on how to use BS1~BS5 push buttons, and DS1-1 and DS1-2 DIP switches.
- 4 Do not operate the unit by short-circuiting protection device S1PH.
- 5 Refer to the installation manual for indoor-outdoor transmission F1-F2 wiring.
- 6 When using the central control system, connect outdoor-outdoor transmission F1-F2.

Notes for RXYSQ4~6_Y:

- 1 Symbols (see below).
- 2 For X37A refer to the installation manual of the option.
- 3 Refer to the installation or service manual on how to use BS1~BS4 push buttons, and DS1-1 and DS1-2 DIP switches.
- 4 Do not operate the unit by short-circuiting protection device S1PH.
- 5 Refer to the installation manual for indoor-outdoor transmission F1-F2 wiring.
- 6 When using the central control system, connect outdoor-outdoor transmission F1-F2.

Symbols:

X1M	Main terminal
-----	Earth wiring
<u>15</u>	Wire number 15
-----	Field wire
	Field cable
→ **/12.2	Connection ** continues on page 12 column 2
①	Several wiring possibilities
	Option
	Not mounted in switch box
	Wiring depending on model
	PCB

Legend for wiring diagram RXYSQ4~6_V:

A1P	Printed circuit board (main)
A2P	Printed circuit board (filter)

A3P	Printed circuit board (cool/heat selector) (option)
BS	Push buttons (mode, set, return, test, reset) (A1P)
C1	Capacitor (A1P)
DS1	DIP switch (A1P)
F1U	Fuse (T 56 A / 250 V) (A2P)
F3U, F4U	Fuse (T 6.3 A / 250 V) (A2P)
F6U	Fuse (T 5.0 A / 250 V) (A1P)
H*P	LED (service monitor orange) (A1P)
HAP	Running LED (service monitor green) (A1P)
HBP	Frequency LED (service monitor green) (A1P)
K11M	Magnetic contactor (A1P)
K*R	Magnetic relay (A1P)
L*R	Reactor (A1P)
M1C	Motor (compressor)
M1F	Motor (upper fan)
M2F	Motor (lower fan)
PS	Switching power supply (A1P)
Q1DI	Earth leakage circuit breaker (field supply)
R*	Resistor (A1P)
R1T	Thermistor (air)
R2T	Thermistor (discharge)
R3T	Thermistor (suction 1)
R4T	Thermistor (heat exchanger)
R5T	Thermistor (suction 2)
R6T	Thermistor (subcool heat exchanger)
R7T	Thermistor (liquid pipe)
FINTH	Thermistor (fin)
S1NPH	High pressure sensor
S1NPL	Low pressure sensor
S1PH	High pressure switch
S1S	Air control switch (option)
S2S	Cool/heat selector switch (option)
V1R	IGBT power module (A1P)
V2R	Diode module (A1P)
V*T	Insulated gate bipolar transistor (IGBT) N-channel (A1P)
V*D	Diode (A1P)
X*A	PCB connector
X*M	Terminal strip

X*Y	Connector
X37A	Connector (power supply for option PCB)
Y1E	Electronic expansion valve (main)
Y3E	Electronic expansion valve (subcool heat exchanger)
Y1S	Solenoid valve (4-way valve)
Z*C	Noise filter (ferrite core)
Z*F (A*P)	Noise filter

Legend for wiring diagram RXYSQ4~6_Y:

A1P	Printed circuit board (main)
A2P	Printed circuit board (inverter)
BS*	Push buttons (mode, set, return, test, reset) (A1P)
C*	Capacitor (A2P)
DS1	DIP switch (A1P)
F1U, F2U	Fuse (T 31.5 A / 500 V) (A1P)
F1U	Fuse (T 5.0 A / 250 V) (A2P)
F3U, F4U, F5U	Fuse (T 6.3 A / 250 V) (A1P)
H*P	LED (service monitor orange) (A1P)
HAP	Running LED (service monitor green) (A*P)
K1M	Magnetic contactor (A2P)
K*R	Magnetic relay (A*P)
L1R	Reactor
M1C	Motor (compressor)
M1F	Motor (upper fan)
M2F	Motor (lower fan)
PS	Switching power supply (A2P)
Q1DI	Earth leakage circuit breaker (field supply)
R*	Resistor (A2P)
R1T	Thermistor (air)
R2T	Thermistor (discharge)
R3T	Thermistor (suction 1)
R4T	Thermistor (heat exchanger)
R5T	Thermistor (suction 2)
R6T	Thermistor (subcool heat exchanger)
R7T	Thermistor (liquid pipe)
R10T	Thermistor (fin)
S1NPH	High pressure sensor
S1NPL	Low pressure sensor
S1PH	High pressure switch

S1S	Air control switch (option)
S2S	Cool/heat selector switch (option)
V1R	IGBT power module (A2P)
V2R, V3R	Diode module (A2P)
X*A	PCB connector
X*M	Terminal strip
X*Y	Connector
X37A	Connector (power supply for option PCB)
Y1E	Electronic expansion valve (main)
Y3E	Electronic expansion valve (subcool heat exchanger)
Y1S	Solenoid valve (4-way valve)
Z*C	Noise filter (ferrite core)
Z*F	Noise filter

26 Glossary

Dealer

Sales distributor for the product.

Authorised installer

Technical skilled person who is qualified to install the product.

User

Person who is owner of the product and/or operates the product.

Applicable legislation

All international, European, national and local directives, laws, regulations and/or codes that are relevant and applicable for a certain product or domain.

Service company

Qualified company which can perform or coordinate the required service to the product.

Installation manual

Instruction manual specified for a certain product or application, explaining how to install, configure and maintain it.

Operation manual

Instruction manual specified for a certain product or application, explaining how to operate it.

Maintenance instructions

Instruction manual specified for a certain product or application, which explains (if relevant) how to install, configure, operate and/or maintain the product or application.

Accessories

Labels, manuals, information sheets and equipment that are delivered with the product and that need to be installed according to the instructions in the accompanying documentation.

Optional equipment

Equipment made or approved by Daikin that can be combined with the product according to the instructions in the accompanying documentation.

Field supply

Equipment NOT made by Daikin that can be combined with the product according to the instructions in the accompanying documentation.

