


DAIKIN

INSTALLATION MANUAL

R410A Split Series

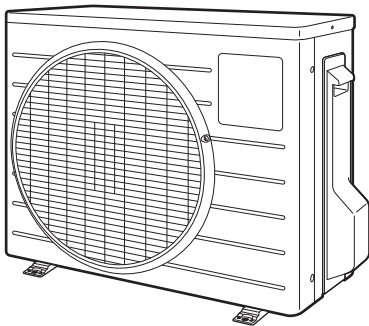

Models

RX20J3V1B

RX25J3V1B

RX35J3V1B

RX20K2V1B

RX25K2V1B

RX35K2V1B

CE - DECLARATION-OF-COMFORMITY
CE - KONFORMITÄTSERKLÄRUNG
CE - DECLARATION-DE-CONFORMITE
CE - CONFORMITEITS/VERKLARING

CE - DECLARACION-DE-CONFORMIDAD
CE - DICHIARAZIONE-DI-CONFORMITA
CE - ΔΗΛΩΣΗ ΣΥΜΜΟΡΦΩΣΗΣ

CE - DECLARAÇÃO-DE-CONFORMIDADE
CE - ЗАРЯВЛЕНИЕ-О-СООТВЕТСТВИИ
CE - ÖPFEJDELSESERKLÄRING
CE - FÖRSÄKRAN-OM-ÖVERENSÄMMELSE

CE - ERKLÆRING OM-SAMSVAR
CE - ILMOITUS-YHDENMUKAISUDESTA
CE - DEKLARACJA-ZGODNOŚCI
CE - DECLARAȚIE-DE-CONFORMITATE

CE - IZJAVA-O-USKLADENOSTI
CE - MEGFELELŐSÉG-NYILATKOZAT
CE - DEKLARACJA-ZGODNOŚCI
CE - DECLARAȚIE-DE-CONFORMITATE

CE - IZJAVA O SKLADNOSTI
CE - VASTAVUSDEKLARACIJA
CE - VYHLÁSENIE-ZHODY
CE - ÜYVÜMLÜLÜK-BİLDİRİSİ

CE - ATTIKITIES-DEKLARACIJA
CE - ATBILSTĪBAS-DEKLARACIJA
CE - VYHLÁSENIE-ZHODY
CE - ÜYVÜMLÜLÜK-BİLDİRİSİ

DAIKIN INDUSTRIES CZECH REPUBLIC s.r.o.

- 01 declares under its sole responsibility that the air conditioning models to which this declaration relates;
- 02 erklärt auf seine alleinige Verantwortung, dass die Modelle der Klimaanlage für die diese Erklärung bestimmt ist;
- 03 déclare sous sa seule responsabilité que les appareils d'air conditionné visés par la présente déclaration;
- 04 verklaart hierbij op eigen exclusieve verantwoordelijkheid dat de airconditioning units waarop deze verklaring betrekking heeft;
- 05 declara bajo su única responsabilidad que los modelos de aire acondicionado a los cuales hace referencia la declaración;
- 06 dichiara sotto sua responsabilità che i condizionatori modello a cui è riferita questa dichiarazione;
- 07 δηλώνει με αποκλειστική της ευθύνη ότι το προϊόν/τα των κλιματιστικών ανήκουν στο οποίο/α αναφέρεται η παρούσα δήλωση;
- 08 declara sob sua exclusiva responsabilidade que os modelos de ar condicionado a que esta declaração se refere;
- 09 заявляет, исключительно под своей ответственностью, что модели кондиционеров воздуха, к которым относится настоящее заявление;

RX20J3V1B, RX25J3V1B, RX35J3V1B, ARX20J3V1B, ARX25J3V1B, ARX35J3V1B

01 are in conformity with the following standard(s) or other normative document(s), provided that these are used in accordance with our instructions:

02 werden folgenden Normen) oder einem anderen Normdokument oder -dokumenten entspricht/entsprechen, unter der Voraussetzung, dass sie gemäß unseren Anweisungen eingesetzt werden:

03 sont conformes à la/aux norme(s) ou autre(s) document(s) normatif(s), pour autant qu'ils soient utilisés conformément à nos instructions;

04 conform de volgende norm(en) of één of meer andere bindende documenten zijn, op voorwaarde dat ze worden gebruikt overeenkomstig onze instructies;

05 están en conformidad con la(s) siguiente(s) norma(s) u otro(s) documento(s) normativo(s), siempre que sean utilizados de acuerdo con nuestras instrucciones;

06 sono conformi all(i) seguente(i) standard(i) o altro(i) documento(i) a carattere normativo, a patto che vengano usati in conformità alle nostre istruzioni;

07 είναι σύμφωνα με το(α) ακόλουθο(α) πρότυπο(α) ή άλλο(α) έγγραφο(α) κανονισμών, υπό την προϋπόθεση ότι χρησιμοποιούνται σύμφωνα με τις οδηγίες μας;

EN60335-2-40,

- 01 following the provisions of:
- 02 gemäß den Vorschriften der:
- 03 conformément aux stipulations des:
- 04 overeenkomstig de bepalingen van:
- 05 seguindo las disposiciones de:
- 06 secondo le prescrizioni per:
- 07 με τη/την των διατάξεων των:
- 08 de acordo com o previsto em:
- 09 a соответствии с положениями:

- 01 Note * as set out in <A> and judged positively by according to the Certificate <C>.
- 02 Hímséi * wé in der <A> aufgeführt und von positiv beurteilt gemäß Zertifikat <C>.
- 03 Remarque * tel que défini dans <A> et jugé positivement par conformément au Certificat <C>.
- 04 Bemerk * zoals vermeld in <A> en positief beoordeeld door overeenkomstig Certificaat <C>.
- 05 Nota * como se establece en <A> y es valorado positivamente por de acuerdo con el Certificado <C>.
- 06 Nota * delimitado nel <A> e giudicato positivamente da secondo il Certificato <C>.
- 07 Σημείωση * όπως καθορίστηκε στο <A> και κρίθηκε θετικά από το σύμφωνα με το <C> πιστοποιητικό <C>.
- 08 Nota * tal como estabelecido em <A> e com o parecer positivo de de acordo com o Certificado <C>.
- 09 Πρωτοκώλη * как указано в <A> и с соответствием с положительным решением согласно Сертификату <C>.
- 10 Bemærk * som anført i <A> og positivt vurderet af i henhold til Certifikat <C>.



Takayuki Fujii
Managing Director
1st of Nov. 2012

DAIKIN INDUSTRIES CZECH REPUBLIC s.r.o.

U Nove hospody 1/1155, 301 00 Plzeň Skvrnany,
Czech Republic

3P327445-7B

- 10 erklærer under enansvar, at klimaanlægsmodelerne, som denne deklaration vedrører;
- 11 deklarerer i egenskap av huseiersvarig, att luftkonditioneringsmodellerna som berörs av denna deklaration innebär att:
- 12 erklærer et fulstændigt ansvar for at de luftkonditioneringsmodeller som berøres af denne deklaration indebærer at:
- 13 ilmoittaa yksinomaan omalla vastuullaan, että tänään ilmoituksen tarkoitamat ilmastointilaitteiden mallit:
- 14 prohlásuje ve své plné odpovědnosti, že modely klimatizace, k nimž se tato prohlášení vztahuje;
- 15 izjavljuje pod isključivo vlastitom odgovornošću da su modeli klima uređaja na koje se ova izjava odnosi;
- 16 teljes felelősséggel tudatában kijelenti, hogy a klímaberendezések modellek, melyekre e nyilatkozat vonatkozik;
- 17 deklaruje na własną, wyłączną odpowiedzialność, że modele klimatyzatorów, których dotyczy niniejsza deklaracja;
- 18 deklará pe proprie răspundere că aparatele de aer condiționat la care se referă această declarație;

08 estão em conformidade com a(s) seguinte(s) norma(s) ou outro(s) documento(s) normativo(s), desde que estes sejam utilizados de acordo com as nossas instruções;

09 conformer aux suivants standards ou autres documents normatifs, sous réserve de l'utilisation conforme aux nos instructions;

10 overholder følgende standard(er) eller andre/andre retningsgivende dokument(er), forudsat at disse anvendes i henhold til vore instruktioner;

11 respektive utsträttning är utövd i överensstämmelse med och följer följande standard(er) eller andra normgivande dokument, under förutsättning att användning sker i överensstämmelse med våra instruktioner;

12 respektive ütlisyr er i överensstemmelse med følgende standard(er) eller andre normgivende dokument(er), under forutsætning at disse bruges i henhold til våre instruksjoner;

13 vastavast seuraavien standardin ja muiden ohjeistettujen dokumenttien vaatimuksella edellyttäen, että niitä käytetään ohjeidemme mukaisesti;

14 za předpokladu, že jsou využívány v souladu s našimi pokyny, odpovídají následujícím normám nebo normativním dokumentům;

15 u skladu sa succeeding standardom(na) ili drugim normativnim dokumentom(na), uz uvjet da se oni koriste u skladu s našim uputama;

Low Voltage 2006/95/EC
Electromagnetic Compatibility 2004/108/EC *

- 11 Information * enligt <A> och godkännt av enligt Certifikat <C>.
- 12 Merk * som det fremkommer i <A> og gennem positiv bedømmelse af ifølge Serifikat <C>.
- 13 Huom * jotta on esitetty asiantuntija <A> ja jotta on hyväksynyt Serifiikaatin <C> mukaisesti.
- 14 Poznámka * jak bylo uvedeno v <A> a pozitivně zjištěno v souladu s ověřením <C>.
- 15 Napomena * kako je izloženo u <A> i pozitivno odobnjeno od strane prema Certifikatu <C>.
- 16 Megjegyzás * a(z) <A> alapján, a(z) igazolta a megjelölt, a(z) <C> tanúsítvány szerint.
- 17 Uwaga * zgodnie z dokumentacją <A>, pozytywną opinią i Świadectwem <C>.
- 18 Note * ses cum este stabilit în <A> și apreciat pozitiv de în conformitate cu Certificatul <C>.
- 19 Opomba * kot je obdelano v <A> in odobreno s strani v skladu s ovrednotenim <C>.
- 20 Märkus * nagu on näidatud dokumentis <A> ja heaks kiidetud järgi vastavalt sertifikaadile <C>.

16 megjegyelek az alábbi szabvány(ok)nak vagy egyéb irányadó dokumentum(ok)nak, ha azokat ellörás szentit használjak;

17 spełniaja wymogi następujących norm i innych dokumentów normalizacyjnych, pod warunkiem że używane są zgodnie z naszymi instrukcjami;

18 sunt în conformitate cu următorii (următoare) standard(e) sau alte documente(n) normative, cu condiția ca acestea să fie utilizate în conformitate cu instrucțiunile noastre

19 sklačni z naslednjimi standardi in drugimi normativi, pod pogojem, da se uporabljajo v skladu z našimi navodili;

20 on vastavusse järgmis(ile) standard(ite)ga või teste normaliseeritud dokumentidega, kui need kasutatakse vastavalt meie juhenditele;

21 съответстват на следните стандарти или други нормативни документи, при условие, че се използват съгласно нашите инструкции;

22 atitinka žemiau nurodytų standartų ir (arba) kitų norminius dokumentus su sąlyga, kad yra naudojami pagal mūsų nurodymus;

23 tad, ja liečią atitiktisį razboja noradjumam, abtisi sekajisim standartem un ciliem normativim dokumentim;

24 su v žbode s nasledovnyjmi) normom(ami) alebo jinými) normativnými) dokumentom(ami), za predpokladu, že sa používajú v súlade s našimi zvodom;

25 ünnih, tähtsalmatza gire kulanimasz kszuljuya asgadjaki standartar ve norm beliten belgetele uyumludur;

- 10 Direktiver, as amended.
- 11 Direktiv, med foretagne ændringer.
- 12 Direktiv, med foretagne ændringer.
- 13 Direktiveja, selasina kun ne ova muutetuna.
- 14 in platnem zneni.
- 15 Snjemice, kako je izmijenjeno.
- 16 irányelvek, és módosítások rendelkezései.
- 17 z nižejšijmi popravkami.
- 18 Direktivelor, cu amendamentele respective.
- 19 Direktiver, med senere ændringer.
- 20 Direktivd koos muudatustega.
- 21 Direktivni, s revizija izmenjenia.
- 22 Direktivose su papildimais.
- 23 Direktivas un to papildinamums.
- 24 Smernice, v platnom zneni.
- 25 Degislinis haitenlye Yonetmeliker.

<A>	DAIKIN, TCF, 019P707-2012
	DEKRA (NB0344)
<C>	74736-KRQ/ENC97-4957

CE - DECLARATION OF CONFORMITY
CE - KONFORMITÄTSERKLÄRUNG
CE - DECLARATION DE CONFORMITE
CE - CONFORMITEITSVERKLARING

CE - DECLARACION DE CONFORMIDAD
CE - DICHIARAZIONE DI CONFORMITA
CE - ΔΗΛΩΣΗ ΣΥΜΜΟΡΦΩΣΗΣ

CE - DECLARACÃO DE CONFORMIDADE
CE - ЗАЯВЛЕНИЕ О СООТВЕТСТВИИ
CE - OVERENSSTEMMELSEERKLARING
CE - FÖRSÄKRAN OM ÖVERENSSTÄMMELSE

CE - ERKLÆRING OM SAMSVAR
CE - ILMOITUS-YHDENMUKAISUDESTA
CE - DEKLARACJA ZGODNOŚCI
CE - DECLARAȚIE DE CONFORMITATE

CE - IZJAVA O USKLADENOSTI
CE - MEGFELELŐSÉGI NYILATKOZAT
CE - ДЕКЛАРАЦІЯ ЗА СЪОТВѢТСТВІЕ

CE - IZJAVA O SKLADNOSTI
CE - VASTAVUSEDEKLARACIJA
CE - ДЕКЛАРАЦІЯ ЗА СЪОТВѢТСТВІЕ

CE - ATTIKTIES-DEKLARACIJA
CE - ATBILSTĪBAS-DEKLARĀCIJA
CE - VYHLÁSENIE ZHODY
CE - UYGUNLUK BEYANI

Daikin Industries Czech Republic s.r.o.

- 01 a declares under its sole responsibility that the air conditioning models to which this declaration relates:
02 d erklärt auf seine alleinige Verantwortung daß die Modelle der Klimaanlage für die diese Erklärung bestimmt ist:
03 f déclare sous sa seule responsabilité que les appareils d'air conditionné visés par la présente déclaration:
04 I verklaar hierop op eigen exclusieve verantwoordelijkheid dat de airconditioning units waaron deze verklaring betrekking heeft:
05 e declara bajo su única responsabilidad que los modelos de aire acondicionado a los cuales hace referencia la declaración:
06 i dichiara sotto sua responsabilità che i condizionatori modello a cui è riferita questa dichiarazione:
07 g δηλώνει με αποκλειστική της ευθύνη ότι τα προϊόντα κλιματισμού αναφέρονται στο οποίο αναφέρεται η παρούσα δήλωση:
08 p declara sob sua exclusiva responsabilidade que os modelos de ar condicionado a que esta declaração se refere:

RX20K2V1B, RX25K2V1B, RX35K2V1B, ARX20K2V1B, ARX25K2V1B, ARX35K2V1B,

- 01 are in conformity with the following standard(s) or other normative document(s), provided that these are used in accordance with our instructions:
02 der gemäß folgenden Norm(en) oder einem anderen Normdokument oder -dokumenten entsprecht/entsprechen, unter der Voraussetzung, daß sie gemäß unseren Anweisungen eingesetzt werden:
03 sont conformes à laux normes(s) ou autre(s) document(s) normatif(s), pour autant qu'ils soient utilisés conformément à nos instructions:
04 conform de volgende norm(en) of één of meer andere bindende documenten zijn, op voorwaarde dat ze worden gebruikt overeenkomstig onze instructies:
05 están en conformidad con la(s) siguiente(s) norma(s) u otro(s) documente(s) normativo(s), siempre que sean utilizados de acuerdo con nuestras instrucciones:
06 sono conformi all(i) seguente(i) standard(s) o altro(i) document(o) i carattere normativo, a patto che vengano usati in conformità alle nostre istruzioni:
07 είνα σύμφωνα με το(τα) ακόλουθ(όν) πρότυπο(ά) ή άλλο(α) έγγραφο(α) κανονισμών, υπό την προϋπόθεση ότι χρησιμοποιούνται σύμφωνα με τις οδηγίες μας:
08 following the provisions of:
09 gemäß den Vorschriften der:
03 conformément aux stipulations des:
04 overeenkomstig de bepalingen van:
05 siguiendo las disposiciones de:
06 secondo le prescrizioni per:
07 je tipično u skladu s pravilima tv:
08 de acordo com o previsto em:
09 в соответствии с положениями:
01 Note * as set out in <A> and judged positively by
according to the Certificate <C>
02 Hinweis * wie in <A> aufgeführt und von positiv beurteilt gemäß Zertifikat <C>
03 Remarque * tel que défini dans <A> et évalué positivement par conformément au Certificat <C>
04 Bemerk * zoals vermeld in <A> en positief beoordeeld door overeenkomstig het Certificaat <C>
05 Nota * como se establece en <A> y es valorado positivamente por de acuerdo con el Certificado <C>
06 Nota * delinatio nel <A> e giudicato positivamente da secondo il Certificato <C>
07 Изјављују * омак, одређено у <А> и оцењено позитивно по <В> у складу са потврдом о <С>
08 Nota * omak, одређено у <А> и оцењено позитивно по <В> у складу са потврдом о <С>
09 Nota * omak, одређено у <А> и оцењено позитивно по <В> у складу са потврдом о <С>

EN60335-2-40,

- 10 under lagtägelse af bestämmelserne i:
11 enligt villkoren i:
12 gilt i henhold til bestemmelserne i:
13 noudatteen määräykset:
14 za dodržení ustanovení předpisů:
15 prema odredbama:
16 követi azt:
17 zgodnie z postanowieniami Dyrektyw:
18 in urma prevederilor:
19 ob upoštevjanju dobrot:
20 vastavalt róluletele:
21 creșterărilor ungarilor na:
22 takanis noudat, teikkilam:
23 leevõrdi praesitas, kas toetaks:
24 održavajući ustanovien:
25 bunun kullarlarına uygun olarak:
19 Direktivi, med senere ændringer.
11 Direktiv, med foretagne ændringer.
12 Direktiver, telles que modifiées.
13 Richtlijnen, zoals geamendeerd.
14 v planem znění.
15 Smpjenice, kako je izmjenjeno.
16 ianyelylek) és módosítások rendelkezéseit.
17 z późniejszych poprawkami.
18 Direktivelor, cu amendamentele respective.

CE - IZJAVA O USKLADENOSTI
CE - MEGFELELŐSÉGI NYILATKOZAT
CE - ДЕКЛАРАЦІЯ ЗГODHOCЬCI
CE - DECLARAȚIE DE CONFORMITATE

CE - IZJAVA O SKLADNOSTI
CE - VASTAVUSEDEKLARACIJA
CE - ДЕКЛАРАЦІЯ ЗА СЪОТВѢТСТВІЕ

CE - ATTIKTIES-DEKLARACIJA
CE - ATBILSTĪBAS-DEKLARĀCIJA
CE - VYHLÁSENIE ZHODY
CE - UYGUNLUK BEYANI

- 09 i заверен, исключительно под свою ответственность, что модели кондиционеров воздуха, к которым относится настоящая заявка:
10 a erklærer under enersvar, at klimaanlægsmødelerne, som denne deklaration vedrører:
11 s deklarerer i egeniskap, at luftkonditioneringsmødelerne som berörs av denna deklaration inriär att:
12 n erklærer et fuldstændigt ansvar for at de luftkonditioneringsmodeller som beröres av denne deklaration, inehæver at:
13 i ilmoittaa yksinomaan omalla vastuullaan, että lämmönvaihtajien tarkoitettuihin ilmastointilaitteiden mallit:
14 c prohlásí je své své přitě odpovědnosti, že modely klimatizace, k nimž se tato prohlášení vztahuje:
15 v izjavljuje pod isključivo vasiotom odgovornostjo da su modeli klima uređaja na koje se ova izjava odnosi:
16 n teljes felelőssége tudatában kijelenti, hogy a klímaberendezés modellek, melyekre ez nyilatkozat vonatkozik:

- 08 estão em conformidade com a(s) seguinte(s) norma(s) ou outro(s) document(o)s normativo(s), desde que estes sejam utilizados de acordo com as nossas instruções:
09 соответствуют следующим стандартам или другим нормативным документам, при условии их использования согласно нашим инструкциям:
10 overholder følgende standard(er) eller andenlænde retningsgivende dokument(er), forudsat at disse anvendes i henhold til vore instrukser:
11 respektive utstilling är utförd i överensstämmelse med och följer följande standard(er) eller andra normgivande dokument, under förutsättning att användning sker i överensstämmelse med våra instruktioner:
12 respektive uslyer i i overensstemmelse med følgende standard(er) eller andre normgivende dokument(er), under forutsætning at disse bruges i henhold til våre instruksjoner:
13 asavaati seuraavien standardien ja muiden ohjeistettujen dokumenttien vaatimuksia edellytettien, että niitä käytetään ohjeidemme mukaisesti:
14 za předpoklad, že jsou využívány v souladu s našimi pokyny, odpovídají následujícím normám nebo normativním dokumentům:
15 u skladu sa slijedećim standardom(nima) ili drugim normativnim dokumentom(nima), uz ujet da se oni koriste u skladu s našim uputima:

- 01 Directives, as amended.
02 Direktiven, gemäß Änderung.
03 Directives, telles que modifiées.
04 Richtlijnen, zoals geamendeerd.
05 Directivas, según lo emendado.
06 Directive, come da modifica.
07 Öbnyelv, ömuk, éyön módosított.
08 Directivas, conforme alteração em.
09 Direktive koje su izmijenjene.
21 Забелешка * карто е корисно со <А> и оценово позитивно от <В> согласно Сертификата <С>
22 Pastaba * kapa nustatyta <A> ir kipo legiamai nuspiesta pagal Sertifikaatą <C>
23 Pozdmes * apa cum este stabilit în <A> și apreciat pozitiv de în conformitate cu Certificatul <C>
24 Poznamka * kol je dođeno i <A> n odobreno s strani v skladu s certifikatom <C>
25 Not * nagu on ištadatu dokumentis <A> ja heals kildatu jarg vastavai sertifikāatlu <C>

Low Voltage 2006/95/EC
Machinery 2006/42/EC **
Electromagnetic Compatibility 2004/108/EC *

- 16 Megjegyzés * alj <A> alapján, alj igazolta a megjelölt, alj <C> tanúsítvány szerint
17 Uwaga * zgodnie z dokumentacją <A> pozytywną opinią Swiadczeniem <C>
18 Nota * apa cum este stabilit în <A> și apreciat pozitiv de în conformitate cu Certificatul <C>
19 Opomba * kol je dođeno i <A> n odobreno s strani v skladu s certifikatom <C>
20 Märkus * nagu on ištadatu dokumentis <A> ja heals kildatu jarg vastavai sertifikāatlu <C>

- 13 ** DICZ*** évi jogszabályján va oviródti rov Téknyk gőreko kompozitjús.
14 ** Společnost DICZ*** má oprávnění ke kompilaci souboru technické konstrukce.
15 ** DICZ*** je ověřen za zřadu Datoleke o lehmickj konstrukci.
16 ** A DICZ*** jogsallat a mőszaki konstrukciós dokumentációt összeállíthatja.
17 ** DICZ*** má povolenie do zberania i opracowywania dokumentacji konstrukcyjnej.
18 ** DICZ*** este autorizat sa compileze Dosarul Tehnic de constructie.



Takayuki Fujii
Managing Director
Pilsen, 1st of Dec. 2014

3P389789-1A

DAIKIN INDUSTRIES CZECH REPUBLIC s.r.o.

U Nové Hospody 1/1155, 301 00 Plzeň Skvrňany,
Czech Republic

- 19 ** DICZ*** je potučen za sestavu datoleke s tehnicno mapo.
20 ** DICZ*** on voliatud koostana tehnilist dokumentatsioon.
21 ** DICZ*** e omprizakpaa za osramy Akta za tehnicka konstruckia.
22 ** DICZ*** va jalida sudatj i tehnichesk konstrukcijs falaj.
23 ** DICZ*** i autorizats sastadi tehnicno dokumentaciu.
24 ** Spoochost DICZ*** je opravena vytvoriť súbor technické konštrukcie.
25 ** DICZ*** Teknik Yapı Dosyasını derlemeye yetkilidir.

<A>	DAIKIN.TCF.015Q2/10/2014
	DEKRA (NB0344)
<C>	74736-KRQ/ENC97-4957

Safety Precautions

- Read these Safety Precautions carefully to ensure correct installation.
- This manual classifies the precautions into WARNING and CAUTION.
Be sure to follow all the precautions below: they are all important for ensuring safety.

 **WARNING**Failure to follow any of **WARNING** is likely to result in such grave consequences as death or serious injury.

 **CAUTION**Failure to follow any of **CAUTION** may result in grave consequences in some cases.

- The following safety symbols are used throughout this manual:

 Be sure to observe this instruction.	 Be sure to establish an earth connection.	 Never attempt.
--	---	--

- After completing installation, test the unit to check for installation errors. Give the user adequate instructions concerning the use and cleaning of the unit according to the Operation Manual.
- The English text is the original instruction. Other languages are translations of the original instructions.



 WARNING	
• Installation should be left to the dealer or another professional. Improper installation may cause water leakage, electrical shock, or fire.	
• Install the air conditioner according to the instructions given in this manual. Incomplete installation may cause water leakage, electrical shock, or fire.	
• Be sure to use the supplied or specified installation parts. Use of other parts may cause the unit to come to lose, water leakage, electrical shock, or fire.	
• Install the air conditioner on a solid base that can support the weight of the unit. An inadequate base or incomplete installation may cause injury in the event the unit falls off the base.	
• Electrical work should be carried out in accordance with the installation manual and the national electrical wiring rules or code of practice. Insufficient capacity or incomplete electrical work may cause electrical shock or fire.	
• Be sure to use a dedicated power circuit. Never use a power supply shared by another appliance.	
• For wiring, use a cable length enough to cover the entire distance with no connection. Do not use an extension cord. Do not put other loads on the power supply, use a dedicated power circuit. (Failure to do so may cause abnormal heat, electric shock or fire.)	
• Use the specified types of wires for electrical connections between the indoor and outdoor units. Firmly clamp the interconnecting wires so their terminals receive no external stresses. Incomplete connections or clamping may cause terminal overheating or fire.	
• After connecting interconnecting and supply wiring be sure to shape the cables so that they do not put undue force on the electrical covers or panels. Install covers over the wires. Incomplete cover installation may cause terminal overheating, electrical shock, or fire.	
• If any refrigerant has leaked out during the installation work, ventilate the room. (The refrigerant produces a toxic gas if exposed to flames.)	
• After all installation is complete, check to make sure that no refrigerant is leaking out. (The refrigerant produces a toxic gas if exposed to flames.)	
• When installing or relocating the system, be sure to keep the refrigerant circuit free from substances other than the specified refrigerant (R410A), such as air. (Any presence of air or other foreign substance in the refrigerant circuit causes an abnormal pressure rise or rupture, resulting in injury.)	
• During pump-down, stop the compressor before removing the refrigerant piping. If the compressor is still running and the stop valve is open during pump-down, air will be sucked in when the refrigerant piping is removed, causing abnormal pressure in the freezer cycle which will lead to breakage and even injury.	
• During installation, attach the refrigerant piping securely before running the compressor. If the compressor is not attached and the stop valve is open during pump-down, air will be sucked in when the compressor is run, causing abnormal pressure in the freezer cycle which will lead to breakage and even injury.	
• Be sure to establish an earth. Do not earth the unit to a utility pipe, arrester, or telephone earth. Incomplete earth may cause electrical shock, or fire. A high surge current from lightning or other sources may cause damage to the air conditioner.	
• Be sure to install an earth leakage breaker. Failure to install an earth leakage breaker may result in electric shocks, or fire.	

 CAUTION	
• Do not install the air conditioner in a place where there is danger of exposure to inflammable gas leakage. If the gas leaks and builds up around the unit, it may catch fire.	
• Establish drain piping according to the instructions of this manual. Inadequate piping may cause flooding.	
• Tighten the flare nut according to the specified method such as with a torque wrench. If the flare nut is tightened too hard, the flare nut may crack after a long time and cause refrigerant leakage.	

• Make sure to provide for adequate measures in order to prevent that the outdoor unit be used as a shelter by small animals. Small animals making contact with electrical parts can cause malfunctions, smoke or fire. Please instruct the customer to keep the area around the unit clean.	
• This appliance is intended to be used by expert or trained users in shops, in light industry and on farms, or for commercial and household use by lay persons.	
• Sound pressure level is less than 70 dB(A).	

Accessories

Accessories supplied with the outdoor unit:

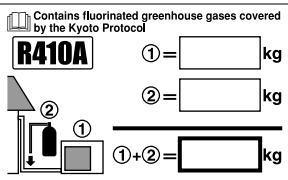(A) Installation Manual	1	(B) Drain plug (Heat pump-Models)  It is on the bottom of the packing case.	1
(C) Refrigerant charge label 	1		
(D) Multilingual fluorinated greenhouse gases label 	1		

Precautions for Selecting the Location

- 1) Choose a place solid enough to bear the weight and vibration of the unit, where the operation noise will not be amplified.
- 2) Choose a location where the hot air discharged from the unit or the operation noise will not cause a nuisance to the neighbors of the user.
- 3) Avoid places near a bedroom and the like, so that the operation noise will cause no trouble.
- 4) There must be sufficient spaces for carrying the unit into and out of the site.
- 5) There must be sufficient space for air passage and no obstructions around the air inlet and the air outlet.
- 6) The site must be free from the possibility of flammable gas leakage in a nearby place.
- 7) Install units, power cords and inter-unit cables at least 3 meter away from television and radio sets. This is to prevent interference to images and sounds. (Noises may be heard even if they are more than 3 meter away depending on radio wave conditions.)
- 8) In coastal areas or other places with salty atmosphere of sulfate gas, corrosion may shorten the life of the air conditioner.
- 9) Since drain flows out of the outdoor unit, do not place under the unit anything which must be kept away from moisture.


NOTE

Cannot be installed hanging from ceiling or stacked.


CAUTION

When operating the air conditioner in a low outdoor ambient temperature, be sure to follow the instructions described below.

- 1) To prevent exposure to wind, install the outdoor unit with its suction side facing the wall.
- 2) Never install the outdoor unit at a site where the suction side may be exposed directly to wind.
- 3) To prevent exposure to wind, it is recommended to install a baffle plate on the air discharge side of the outdoor unit.
- 4) In heavy snowfall areas, select an installation site where the snow will not affect the unit.

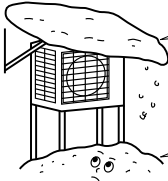

- Construct a large canopy.
- Construct a pedestal.

Install the unit high enough off the ground to prevent burying in snow.

Outdoor Unit Installation Drawings

Max. allowable length	15m
* Min. allowable length	1.5m
Max. allowable height	12m
Additional refrigerant required for refrigerant pipe exceeding 10m in length.	20g/m
Gas pipe	O.D. 9.5mm
Liquid pipe	O.D. 6.4mm

- * Be sure to add the proper amount of additional refrigerant.
Failure to do so may result in reduced performance.
- * The suggested shortest pipe length is 1.5m, in order to avoid noise from the outdoor unit and vibration.
(Mechanical noise and vibration may occur depending on how the unit is installed and the environment in which it is used.)

Wrap the insulation pipe with the finishing tape from bottom to top.

CAUTION

Set the piping length from 1.5m to 15m.

Stop valve cover


■ How to remove the stop valve cover.

- Remove the screw on the stop valve cover.
- Slide the lid downward to remove it.

■ How to attach the stop valve cover.

- Insert the upper part of the stop valve cover into the outdoor unit to install.
- Tighten the screws.

In sites with poor drainage, use block bases for outdoor unit. Adjust foot height until the unit is leveled. Otherwise, water leakage or pooling of water may occur.

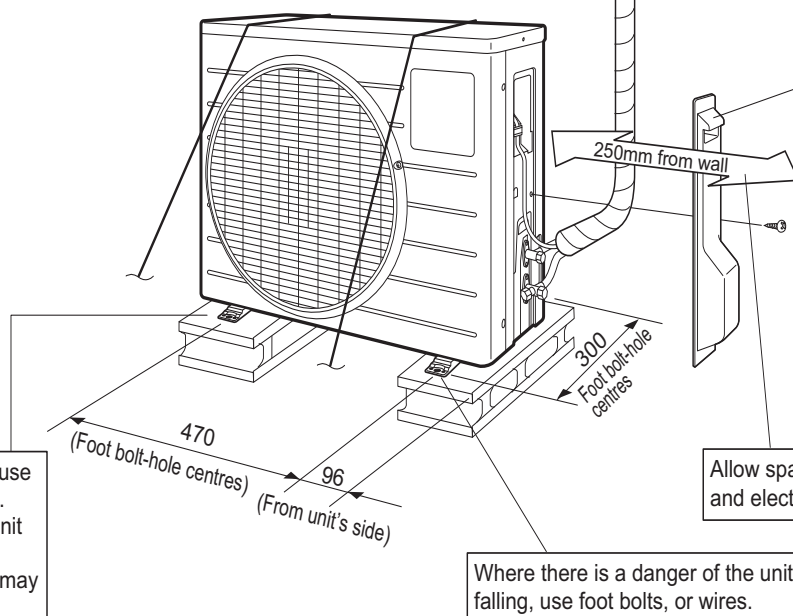


unit: mm

Installation Guidelines


- Where a wall or other obstacle is in the path of outdoor unit's intake or exhaust airflow, follow the installation guidelines below.
- For any of the below installation patterns, the wall height on the exhaust side should be 1200mm or less.

Wall facing one side

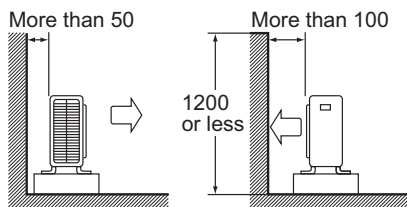


Side view

Walls facing two sides

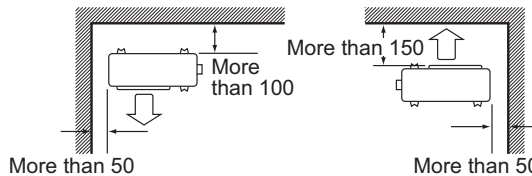

Top view

Walls facing three sides

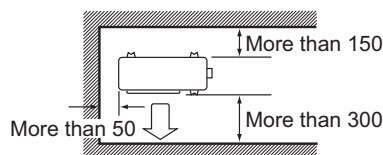


Top view

Unit: mm

Precautions on Installation

- Check the strength and level of the installation ground so that the unit will not cause any operating vibration or noise after installed.
- In accordance with the foundation drawing, fix the unit securely by means of the foundation bolts. (Prepare four sets of M8 or M10 foundation bolts, nuts and washers each which are available on the market.)
- It is best to screw in the foundation bolts until their length are 20mm from the foundation surface.

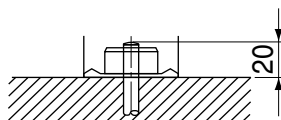


Outdoor Unit Installation

1. Installing outdoor unit.

- 1) When installing the outdoor unit, refer to "Precautions for Selecting the Location" and the "Outdoor Unit Installation Drawings."
- 2) If drain work is necessary, follow the procedures below.

2. Drain work. (Heat pump-models.)


- 1) Use drain plug for drainage.
- 2) If the drain port is covered by a mounting base or floor surface, place additional foot bases of at least 30mm in height under the outdoor unit's feet.
- 3) In cold areas, do not use a drain hose with the outdoor unit. (Otherwise, drain water may freeze, impairing heating performance.)

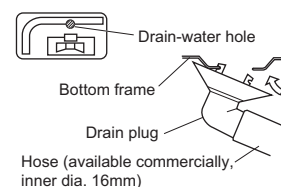

Outdoor Unit Installation

3. Flaring the pipe end.

- 1) Cut the pipe end with a pipe cutter.
- 2) Remove burrs with the cut surface facing downward so that the chips do not enter the pipe.
- 3) Put the flare nut on the pipe.
- 4) Flare the pipe.
- 5) Check that the flaring is properly made.

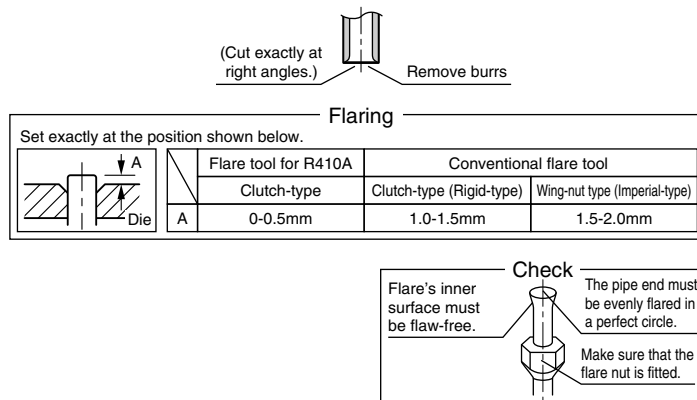

⚠ WARNING


- 1) Do not use mineral oil on flared part.
- 2) Prevent mineral oil from getting into the system as this would reduce the lifetime of the units.
- 3) Never use piping which has been used for previous installations. Only use parts which are delivered with the unit.
- 4) Do never install a drier to this R410A unit in order to guarantee its lifetime.
- 5) The drying material may dissolve and damage the system.
- 6) Incomplete flaring may cause refrigerant gas leakage.

4. Refrigerant piping.

⚠ CAUTION

- 1) Use the flare nut fixed to the main unit. (To prevent cracking of the flare nut by aged deterioration.)
- 2) To prevent gas leakage, apply refrigeration oil only to the inner surface of the flare. (Use refrigeration oil for R410A.)
- 3) Use torque wrenches when tightening the flare nuts to prevent damage to the flare nuts and gas leakage.

Align the centres of both flares and tighten the flare nuts 3 or 4 turns by hand. Then tighten them fully with the torque wrenches.

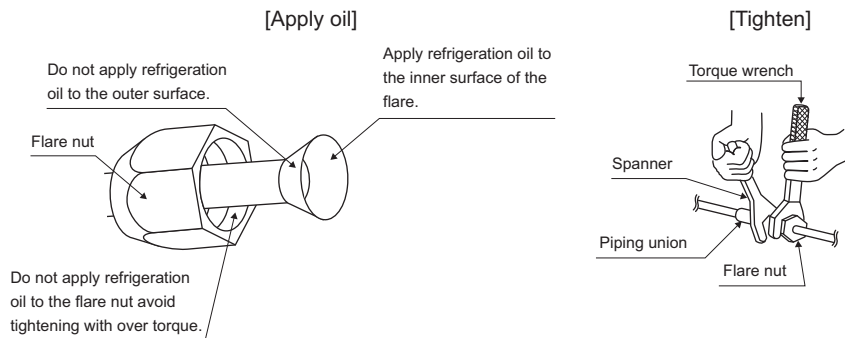

Flare nut tightening torque	
Gas side	Liquid side
3/8 inch	1/4 inch
32.7-39.9N • m (333-407kgf • cm)	14.2-17.2N • m (144-175kgf • cm)

Valve cap tightening torque	
Gas side	Liquid side
3/8 inch	1/4 inch
21.6-27.4N • m (220-280kgf • cm)	21.6-27.4N • m (220-280kgf • cm)
Service port cap tightening torque	10.8~14.7N • m (110~150kgf • cm)

Outdoor Unit Installation


5. Purging air and checking gas leakage.

- When piping work is completed, it is necessary to purge the air and check for gas leakage.

⚠ WARNING

- 1) Do not mix any substance other than the specified refrigerant (R410A) into the refrigeration cycle.
- 2) When refrigerant gas leaks occur, ventilate the room as soon and as much as possible.
- 3) R410A, as well as other refrigerants, should always be recovered and never be released directly into the environment.
- 4) Use a vacuum pump for R410A exclusively. Using the same vacuum pump for different refrigerants may damage the vacuum pump or the unit.

- If using additional refrigerant, perform air purging from the refrigerant pipes and indoor unit using a vacuum pump, then charge additional refrigerant.
- Use a hexagonal wrench (4mm) to operate the stop valve rod.
- All refrigerant pipe joints should be tightened with a torque wrench at the specified tightening torque.

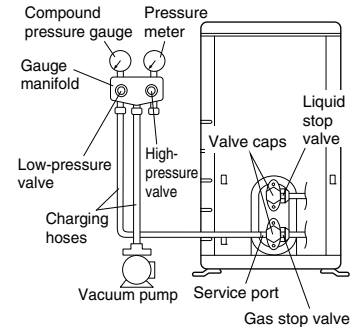

1) Connect projection side of charging hose (which comes from gauge manifold) to gas stop valve's service port.



2) Fully open gauge manifold's low-pressure valve (Lo) and completely close its high-pressure valve (Hi).
(High-pressure valve subsequently requires no operation.)



3) Do vacuum pumping and make sure that the compound pressure gauge reads -0.1MPa (-76cmHg)*1.



4) Close gauge manifold's low-pressure valve (Lo) and stop vacuum pump.
(Keep this state for a few minutes to make sure that the compound pressure gauge pointer does not swing back.)*2.



5) Remove caps from liquid stop valve and gas stop valve.



6) Turn the liquid stop valve's rod 90 degrees counterclockwise with a hexagonal wrench to open valve.
Close it after 5 seconds, and check for gas leakage.
Using soapy water, check for gas leakage from indoor unit's flare and outdoor unit's flare and valve rods.
After the check is complete, wipe all soapy water off.



7) Disconnect charging hose from gas stop valve's service port, then fully open liquid and gas stop valves.
(Do not attempt to turn valve rod beyond its stop.)



8) Tighten valve caps and service port caps for the liquid and gas stop valves with a torque wrench at the specified torques.

*1. Pipe length vs. vacuum pump run time.

Pipe length	Up to 15 metres
Run time	Not less than 10 min.

*2. If the compound pressure gauge pointer swings back, refrigerant may have water content or a loose pipe joint may exist. Check all pipe joints and retighten nuts as needed, then repeat steps 2) through 4).

Outdoor Unit Installation

6. Refilling the refrigerant.

Check the type of refrigerant to be used on the machine nameplate.


Precautions when adding R410A

Fill from the liquid pipe in liquid form.

It is a mixed refrigerant, so adding it in gas form may cause the refrigerant composition to change, preventing normal operation.

- 1) Before filling, check whether the cylinder has a siphon attached or not. (It should have something like "liquid filling siphon attached" displayed on it.)

Filling a cylinder with an attached siphon



Stand the cylinder upright when filling.

(There is a siphon pipe inside, so the cylinder need not be upside-down to fill with liquid.)

Filling other cylinders



Turn the cylinder upside-down when filling.

- Be sure to use the R410A tools to ensure pressure and to prevent foreign objects entering.

Important information regarding the refrigerant used

This product contains fluorinated greenhouse gases covered by the Kyoto Protocol. Do not vent gases into the atmosphere.

Refrigerant type: **R410A**

GWP⁽¹⁾ value: **1975** ⁽¹⁾ GWP = global warming potential

Please fill in with indelible ink,

- ① the factory refrigerant charge of the product,
 - ② the additional refrigerant amount charged in the field and
 - ①+② the total refrigerant charge
- on the refrigerant charge label supplied with the product.

The filled out label must be adhered in the proximity of the product charging port (e.g. onto the inside of the stop valve cover).

Contains fluorinated greenhouse gases covered by the Kyoto Protocol

R410A

① = kg

② = kg

①+② = kg

1 2 3 4 5 6

- 1 factory refrigerant charge of the product: see unit name plate
- 2 additional refrigerant amount charged in the field
- 3 total refrigerant charge
- 4 Contains fluorinated greenhouse gases covered by the Kyoto Protocol
- 5 outdoor unit
- 6 refrigerant cylinder and manifold for charging

NOTE

National implementation of EU regulation on certain fluorinated greenhouse gases may require to provide the appropriate official national language on the unit. Therefore an additional multilingual fluorinated greenhouse gases label is supplied with the unit. Sticking instructions are illustrated on the backside of that label.

7. Refrigerant piping work.

7-1 Cautions on pipe handling.

- 1) Protect the open end of the pipe against dust and moisture.
- 2) All pipe bends should be as gentle as possible. Use a pipe bender for bending.



7-2 Selection of copper and heat insulation materials.

When using commercial copper pipes and fittings, observe the following:

- 1) Insulation material: Polyethylene foam
Heat transfer rate: 0.041 to 0.052W/mK (0.035 to 0.045kcal/(mh •°C))
Refrigerant gas pipe's surface temperature reaches 110°C max.
Choose heat insulation materials that will withstand this temperature.
- 2) Be sure to insulate both the gas and liquid piping and to provide insulation dimensions as below.

Gas side	Liquid side	Gas pipe thermal insulation	Liquid pipe thermal insulation
O.D. 9.5mm	O.D. 6.4mm	I.D. 12-15mm	I.D. 8-10mm
Minimum bend radius		Thickness 10mm Min.	
30mm or more			
Thickness 0.8mm (C1220T-O)			


- 3) Use separate thermal insulation for gas and liquid refrigerant pipes.

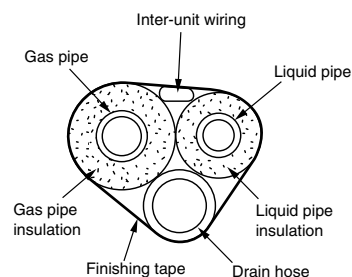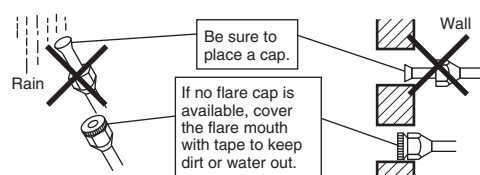

Pump Down Operation

In order to protect the environment, be sure to pump down when relocating or disposing of the unit.

- 1) Remove the valve cap from liquid stop valve and gas stop valve.
- 2) Carry out forced cooling operation.
- 3) After five to ten minutes, close the liquid stop valve with a hexagonal wrench.
- 4) After two to three minutes, close the gas stop valve and stop forced cooling operation.

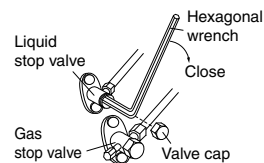

How to force cooling operation mode

■ Using the indoor unit operation/stop button

Press the indoor unit operation/stop button for at least five seconds. (Operation will start.)

- Forced cooling operation will stop automatically after around 15 minutes.

To force a test run to stop, press the indoor unit operation/stop button.

■ Using the main unit's remote controller

- 1) Press the "operation/stop" button. (Operation will start.)
- 2) Press the temperature ▲▼ button and the "operation select" button at the same time.
- 3) Press the "operation select" button twice.
(τ will be displayed and the unit will enter test run mode.)
- 4) Press the "operation select" button to return the operation mode to cooling.
 - Test run mode will stop automatically after around 30 minutes. To force a test run to stop, press the operation/stop button.

⚠ CAUTION

- 1) When pressing the switch, do not touch the terminal block. It has a high voltage, so doing so may cause electric shock.
- 2) After closing the liquid stop valve, close the gas stop valve within three minutes, then stop the forced operation.



Wiring

⚠ WARNING

- 1) Do not use tapped wires, stranded wires, extension cords, or starburst connections, as they may cause overheating, electrical shock, or fire.
- 2) Do not use locally purchased electrical parts inside the product. (Do not branch the power for the drain pump, etc., from the terminal block.) Doing so may cause electric shock or fire.
- 3) Be sure to install an earth leakage breaker. (One that can handle higher harmonics.)
(This unit uses an inverter, which means that it must be used an earth leakage breaker capable handling harmonics in order to prevent malfunctioning of the earth leakage breaker itself.)
- 4) Use an all-pole disconnection type breaker with at least 3mm between the contact point gaps.
- 5) Do not connect the power wire to the indoor unit. Doing so may cause electric shock or fire.

- Do not turn ON the power supply until all work is completed.

- 1) Strip the insulation from the wire (20mm).
- 2) Connect the connecting wires between the indoor and outdoor units **so that the terminal numbers match**. Tighten the terminal screws securely. We recommend a flathead screwdriver be used to tighten the screws. The screws are packed with the terminal board.

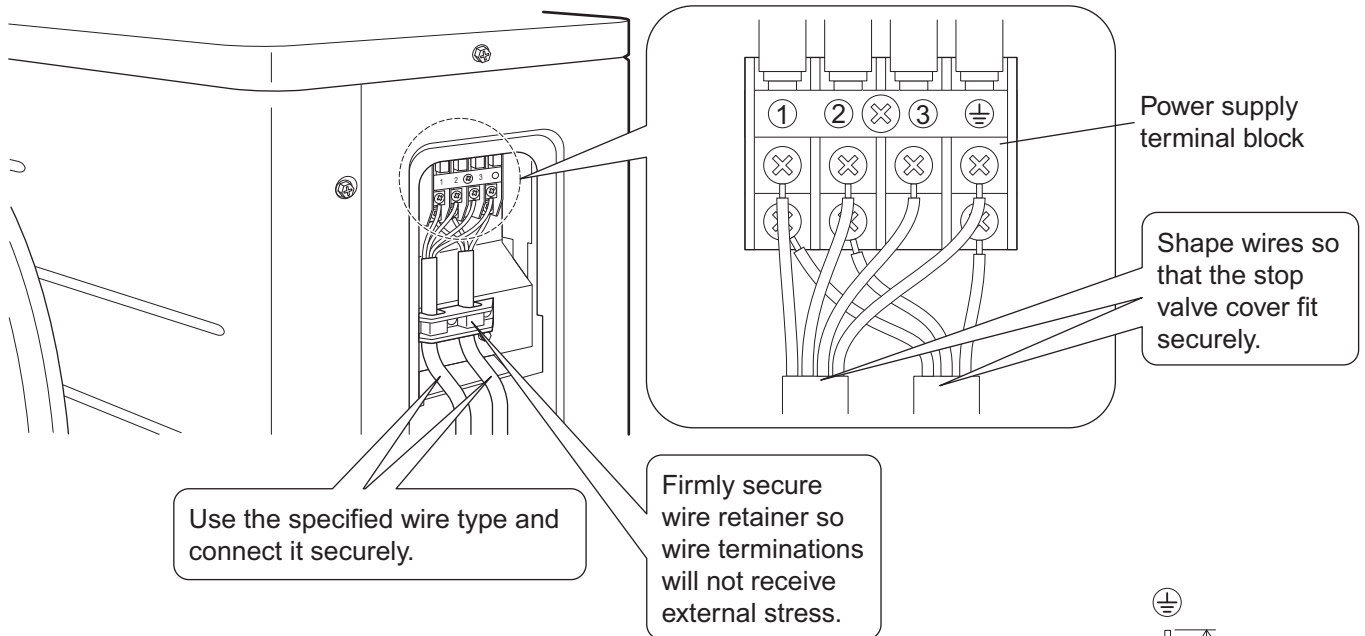
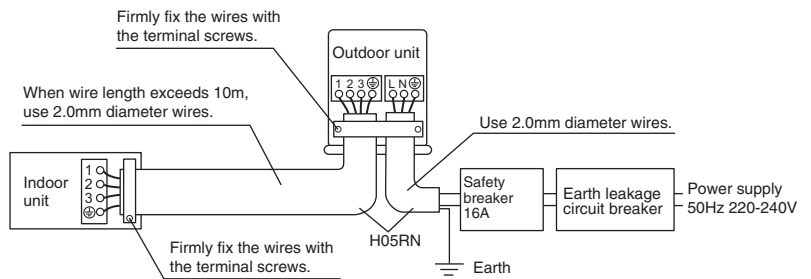


Observe the notes mentioned below when wiring to the power supply terminal board.

Precautions to be taken for power supply wiring.


Use a round crimp-style terminal for connection to the power supply terminal board. In case it cannot be used due to unavoidable reasons, be sure to observe the following instruction.

Place the round crimp-style terminals on the wires up to the covered part and secure in place.

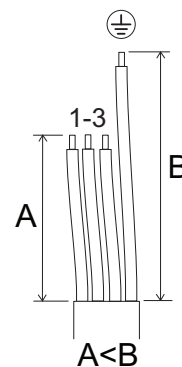

⚠ CAUTION

When connecting the connecting wires to the terminal board using a single core wire, be sure to perform curling. Problems with the work may cause heat and fires.

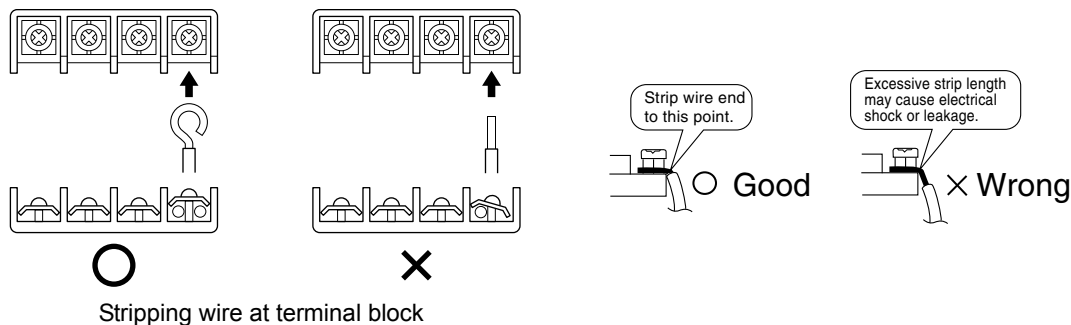

3) Pull the wire and make sure that it does not disconnect. Then fix the wire in place with a wire stop.

Wiring

Wiring diagram

	: Terminal strip
	: Connector
	: Connection

	: Field wiring
	: Terminal

BLK	: Black
BLU	: Blue
BRN	: Brown
GRN	: Green

ORG	: Orange
RED	: Red
WHT	: White
YLW	: Yellow

Notes	: Refer to the nameplate of the unit for power requirements.
	: OUTDOOR
	: CONDENSER
	: DISCHARGE

Outdoor
Condenser
Discharge

Wiring diagram parts table

C400,C405.....	Capacitor
DB1.....	Diode bridge
E1,E2,HL1,HN1, HR1,HR2,MR30_A, MR30_B.....	Connection
E1H.....	Heater
FU1,FU2,FU3.....	Fuse
IPM1.....	Intelligent power module
L.....	Live
L1.....	Coil
L1R.....	Reactor
M1C.....	Compressor motor
M1F.....	Fan motor
MR30,MRCW, MRM10.....	Magnetic relay

N.....	Neutral
PCB1.....	Printed circuit board
PS.....	Power supply
Q1L.....	Overload protector
R1T,R2T,R3T.....	Thermistor
S20,S30,S40, S71,S80,S90.....	Connector
SA1.....	Surge arrester
V2,V3,V150.....	Varistor
X1M.....	Terminal strip
Y1E.....	Electronic expansion valve coil
Y1R.....	Reversing solenoid valve coil
Z1C,Z2C,Z3C.....	Ferrite core
	Protective earth

Test Run and Final Check

1. Trial operation and testing.

1-1 Measure the supply voltage and make sure that it falls in the specified range.

1-2 Trial operation should be carried out in either cooling or heating mode.

■ For heat pump

- In cooling mode, select the lowest programmable temperature; in heating mode, select the highest programmable temperature.
 - 1) Trial operation may be disabled in either mode depending on the room temperature.
 - 2) After trial operation is complete, set the temperature to a normal level (26°C to 28°C in cooling mode, 20°C to 24°C in heating mode).
 - 3) For protection, the system disables restart operation for 3 minutes after it is turned off.

■ For cooling only

- 1) Trial operation in cooling mode may be disabled depending on the room temperature.
 - 2) After trial operation is complete, set the temperature to a normal level (26°C to 28°C).
 - 3) For protection, the unit disables restart operation for 3 minutes after it is turned off.
- 1-3 Carry out the test operation in accordance with the operation manual to ensure that all functions and parts, such as louver movement, are working properly.
- The air conditioner requires a small amount of power in its standby mode. If the system is not to be used for some time after installation, shut off the circuit breaker to eliminate unnecessary power consumption.
 - If the circuit breaker trips to shut off the power to the air conditioner, the system will restore the original operation mode when the circuit breaker is opened again.

2. Test items.

Test items	Symptom (diagnostic display on RC)	Check
Indoor and outdoor units are installed properly on solid bases.	Fall, vibration, noise	
No refrigerant gas leaks.	Incomplete cooling/heating function	
Refrigerant gas and liquid pipes and indoor drain hose extension are thermally insulated.	Water leakage	
Draining line is properly installed.	Water leakage	
System is properly earthed.	Electrical leakage	
The specified wires are used for interconnecting wire connections.	Inoperative or burn damage	
Indoor or outdoor unit's air intake or exhaust has clear path of air. Stop valves are opened.	Incomplete cooling/heating function	
Indoor unit properly receives remote control commands.	Inoperative	

DAIKIN INDUSTRIES CZECH REPUBLIC s.r.o.

U Nové Hospody 1/1155, 301 00 Plzeň Skvrňany, Czech Republic

DAIKIN EUROPE N.V.

Zandvoordestraat 300, B-8400 Oostende, Belgium

Copyright 2014 Daikin



3P291651-9W 2015.10