




Installation manual

VRV IV heat exchanger unit for indoor installation

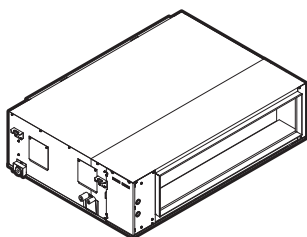

RDXYQ5T8V1B
RDXYQ8T7V1B

Installation manual
VRV IV heat exchanger unit for indoor installation

English

CE-DECLARATION OF CONFORMITY
CE-KONFORMITEITSVERKLARING
CE-DICHARAZIONE DI CONFORMITA
CE-ΛΗΧΩΣ ΣΥΜΠΛΗΡΩΣΗ
CE-DECLARACIÓN DE CONFORMIDAD
CE-KONFORMITÄTSSERKLÄRUNG
CE-OVERENSSTEMMELSEERKLARING
CE-FÖRSÄKRAN OM ÖVERENSSTÄMMELSE

CE-ERKLÄRUNG OM SAMSVAR
CE-ΛΙΠΩΤΗΣ ΥΠΟΜΟΝΗΣ ΑΙΣΙΟΔΕΣΤΙΑ
CE-PROHLÄSUNGSHÖE
CE-DECLARATIE DE CONFORMITEIT
CE-DECLARACIJA ZGODNOSTI
CE-DECLARAȚIE DE CONFORMITATE

CE-IZJAVA O SKLADNOSTI
CE-VASTAVUSEKLAARACIJA
CE-DECLARAȚIA DE CONFORMITATE
CE-DECLARAȚIA DE CONFORMITATE

CE-ATITIKTES-DEKLARACIJA
CE-ATILIKTES-DEKLARACIJA
CE-VYHLASENIE ZHODY
CE-UYUMLUK BEYAN

Daikin Europe N.V.

01 00 declares under its sole responsibility that the air conditioning models to which this declaration relates
02 00 erklärt auf seine alleinige Verantwortung, daß die Modelle der Klimaanlage für die diese Erklärung bestimmt ist:
03 00 déclare sous sa seule responsabilité que les appareils d'air conditionné visés par la présente déclaration:
04 00 verklaart hierbij op eigen exclusieve verantwoordelijkheid dat de airconditioning units waarop deze verklaring betrekking heeft:
05 00 declara bajo su única responsabilidad que los modelos de aire acondicionado a los cuales hace referencia la declaración:
06 00 δηλώνει υπό την αποκλειστική του ευθύνη, πως τα κλιματιστικά μοντέλα στα οποία αφορά η παρούσα δήλωση:
07 00 объявляет на исключительной своей ответственности, что кондиционеры, к которым относится настоящая декларация:
08 00 declara sub sua exclusiva responsabilidade que os modelos de ar condicionado a que esta declaração se refere:

RKXYQ5T8Y1B*,

RDXYQ5T8Y1B*, RDXYQ8T7V1B*,

*, 1, 2, 3, ..., 9

01 are in conformity with the following standard(s) or other normative document(s), provided that these are used in accordance with our instructions:
02 deriden overeenkomstig het volgende norm(en) of andere normatieve document(en), zolang deze worden gebruikt overeenkomstig onze instructies:
03 sont conformes à la(s) norme(s) ou autre(s) document(s) normatif(s), pour autant qu'ils soient utilisés conformément à nos instructions:
04 conform de volgende norm(en) of één of meer andere bindende documenten zijn, op voorwaarde dat ze worden gebruikt overeenkomstig onze instructies:
05 están en conformidad con la(s) siguiente(s) norma(s) u otro(s) documento(s) normativo(s), siempre que sean utilizados de acuerdo con nuestras instrucciones:
06 sono conformi al(le) seguente(s) standard(i) o altro(i) documento(i) a carattere normativo, a patto che vengano usati in conformità alle nostre istruzioni:
07 είναι σύμφωνα με το(τα) ακόλουθο(α) πρότυπο(α) ή άλλο(α) έγγραφο(α) κανονιστικό(α), υπό την προϋπόθεση ότι χρησιμοποιούνται σύμφωνα με τις οδηγίες μας:

EN60335-2-40,

01 following the provisions of:
02 gemäß den Vorschriften der:
03 conformément aux stipulations des:
04 overeenkomstig de bepalingen van:
05 secondo le disposizioni de:
06 conform de prescripcii per:
07 je tipični iu būdovinių tūr:
08 de acordo com o previsto em:
09 в соответствии с положениями:

01 Note* as set out in and judged positively by
02 Hinweis* wie in angegeben und von positiv beurteilt gemäß
03 Remarque* le que défini dans et évalué positivement par
04 Bemerk* zoals vermeld in en positief beoordeeld door
05 Nota* como se establece en y es valorado positivamente por
06 Nota* in una predeclor.

19 ob upotrebljavati dobiti:
20 vastavalt tulekale:
21 cneavăz întruale na:
22 lakantia nussala, palekiam:
23 lakantia nussala, palekiam:
24 lakantia nussala, palekiam:
25 lakantia nussala, palekiam:

11 Information* enigi och godkants av enligt Certifikat
12 Merk* enligt och godkants av enligt Certifikat
13 Huom* enigi och godkants av enligt Certifikat
14 Poznámka* enigi och godkants av enligt Certifikat
15 Napomena* enigi och godkants av enligt Certifikat

01** Daikin Europe N.V. is authorised to compile the Technical Constitution File.
02** Daikin Europe N.V. hat die Berechtigung die Technische Konstitutionsakte zusammenzustellen.
03** Daikin Europe N.V. est autorisée à compiler le Dossier de Construction Technique.
04** Daikin Europe N.V. is tweged om het Technisch Constructieaktes samen te stellen.
05** Daikin Europe N.V. está autorizada a compilar el Archivo de Construcción Técnica.
06** Daikin Europe N.V. e autorizzata a redigere il File Tecnico di Costituzione.

07** H Daikin Europe N.V. eikon ёкoнoдoмoлoвнo вo oтвeтствeннoсть зa тeхничeскoе coстaвляющeе.
08** A Daikin Europe N.V. está autorizada a compilar a documentação técnica de fabrico.
09** Kontrakteur Daikin Europe N.V. is toegelaten de Technische Konstitutionsakte te compileren.
10** Daikin Europe N.V. is autoriseret til at udarbejde de tekniske konstitutionsakter.
11** Daikin Europe N.V. er bemyndiget at sammensætte den tekniske konstitutionsfil.
12** Daikin Europe N.V. har tilläts till å kompilera den tekniske konstitutionsfilen.

13** Daikin Europe N.V. on valtuutettu laatimaan Teknisen Asiakirjan.
14** Společnost Daikin Europe N.V. má oprávnění ke kompilaci souboru technické konstrukce.
15** Daikin Europe N.V. je ověřen za autora Datového o technické konstrukci.
16** A Daikin Europe N.V. poptusl a miszaki konstrukciós dokumentációsszakiakára.
17** Daikin Europe N.V. má povolenie do práce v opracowywaniu dokumentacji konstrukcyjnej.
18** Daikin Europe N.V. este autorizat să compileze Dosarul Tehnic de construcție.

19** Daikin Europe N.V. je pooblaščen za sestavo datotek s tehnično mapo.
20** Daikin Europe N.V. on valtuudet laatimaan teknillisiä dokumentaatioita.
21** Daikin Europe N.V. er opropovnenia za ostanav Avra za tehničeska konstrukcija.
22** Daikin Europe N.V. yra įgaliotas sudaryti šį techninio konstrukcijos failą.
23** Daikin Europe N.V. je autorizats sastavit tehniško dokumentačiju.
24** Spółkoshst Daikin Europe N.V. je opowazniet wytworzyć soubor technické konstrukcie.
25** Daikin Europe N.V. Teknik Yapı Dosyasını derlenmeye yetkilidir.

DAIKIN

Shigeki Morita
Director

Ostend, 2nd of October 2017

DAIKIN EUROPE N.V.

Zandvoordstraat 300, B-8400 Oostende, Belgium

Table of Contents

1	About the documentation	3
1.1	About this document.....	3
2	About the box	3
2.1	Heat exchanger unit	3
2.1.1	To remove the accessories from the heat exchanger unit	3
2.1.2	To remove the transportation sheet	3
3	About the units and options	4
3.1	About the compressor unit and heat exchanger unit.....	4
3.2	System layout.....	4
3.3	Combining units and options	4
3.3.1	Possible options for the compressor unit and heat exchanger unit	4
4	Preparation	4
4.1	Preparing the installation site	4
4.1.1	Installation site requirements of the heat exchanger unit	4
4.2	Preparing electrical wiring	5
4.2.1	Safety device requirements	5
5	Installation	5
5.1	Opening the units	5
5.1.1	To open the switch box cover of the heat exchanger unit	5
5.2	Mounting the heat exchanger unit.....	5
5.2.1	Guidelines when installing the heat exchanger unit....	5
5.2.2	Guidelines when installing the ducting.....	5
5.2.3	Guidelines when installing the drain piping.....	6
5.3	Connecting the refrigerant piping	7
5.3.1	To connect the refrigerant piping to the heat exchanger unit	7
5.4	Connecting the electrical wiring.....	7
5.4.1	Field wiring: Overview	7
5.4.2	Guidelines when connecting the electrical wiring	8
5.4.3	To connect the electrical wiring on the heat exchanger unit	8
6	Technical data	8
6.1	Wiring diagram: Heat exchanger unit	9

1 About the documentation

1.1 About this document

Target audience

Authorised installers



INFORMATION

This appliance is intended to be used by expert or trained users in shops, in light industry and on farms, or for commercial use by lay persons.

Documentation set

This document is part of a documentation set. The complete set consists of:

General safety precautions:

- Safety instructions that you must read before installing
- Format: Paper (in the accessory bag of the compressor unit)

Compressor unit installation and operation manual:

- Installation and operation instructions
- Format: Paper (in the accessory bag of the compressor unit)

Heat exchanger unit installation manual:

- Installation instructions
- Format: Paper (in the accessory bag of the heat exchanger unit)

Installer and user reference guide:

- Preparation of the installation, reference data,...
- Detailed step-by-step instructions and background information for basic and advanced usage
- Format: Digital files on <http://www.daikineurope.com/support-and-manuals/product-information/>

Latest revisions of the supplied documentation may be available on the regional Daikin website or via your dealer.

The original documentation is written in English. All other languages are translations.


Technical engineering data

- A **subset** of the latest technical data is available on the regional Daikin website (publicly accessible).
- The **full set** of latest technical data is available on the Daikin extranet (authentication required).

2 About the box

2.1 Heat exchanger unit

2.1.1 To remove the accessories from the heat exchanger unit

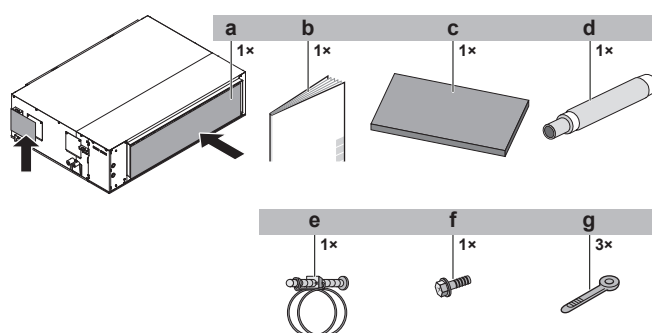


- a Optional filter for debris
- b Heat exchanger unit installation manual
- c Sealing pad
- d Drain hose
- e Metal clamp
- f Screw (for shield of transmission wiring) (see "5.4.3 To connect the electrical wiring on the heat exchanger unit" on page 8)
- g Cable tie

2.1.2 To remove the transportation sheet

- 1 Remove the sheet. The sheet protects the unit during transport.

3 About the units and options

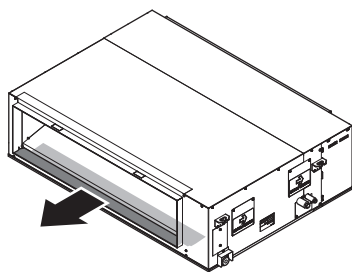

3 About the units and options

3.1 About the compressor unit and heat exchanger unit

The compressor unit and heat exchanger unit are intended for indoor installation and aimed for air to air heat pump applications.

Specification		5 HP	8 HP
Maximum capacity	Heating	16.0 kW	25.0 kW
	Cooling	14.0 kW	22.4 kW
Outside ambient design temperature	Heating	-20~15.5°C WB	
	Cooling	-5~46°C DB	
Ambient design temperature of compressor unit and heat exchanger unit		5~35°C DB	
Maximum relative humidity around the compressor unit and heat exchanger unit	Heating	50% ^(a)	
	Cooling	80% ^(a)	


(a) To avoid condensation and water dripping out of the unit. If the temperature or the humidity is beyond these conditions, safety devices may be put in action and the air conditioner may not operate.

3.2 System layout



NOTICE

Design of the system must not be done at temperatures below -15°C.

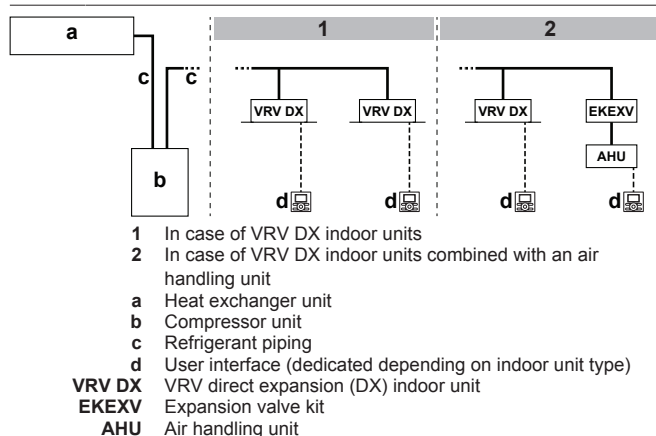

3.3 Combining units and options

3.3.1 Possible options for the compressor unit and heat exchanger unit

For more possible options, see the installer and user reference guide.

Drain pan heater (EKDPH1RDX)

- **When.** Installation is optional. It is recommended in areas where the outside temperature is below -7°C for more than 24 hours continuously.
- **Where.** Install the drain pan heater in the heat exchanger unit.
- **How.** See the installation instructions delivered with the drain pan heater.

Filter for debris (delivered as accessory)


- **When.** Installation is optional. It is recommended in places where a lot of debris or dirt (example: leaves) can go into the suction ducting.
- **Where.** Install the filter in one of the following places:
 - Suction opening of the heat exchanger unit
 - Suction ducting (easier for maintenance)
- **How.** See the installation instructions attached to the filter.
- **Pressure drop over the filter:**
 - 5 HP: 30 Pa at 60 m³/min
 - 8 HP: 75 Pa at 100 m³/min

4 Preparation

4.1 Preparing the installation site

4.1.1 Installation site requirements of the heat exchanger unit

- **Service space.** Mind the following requirements:

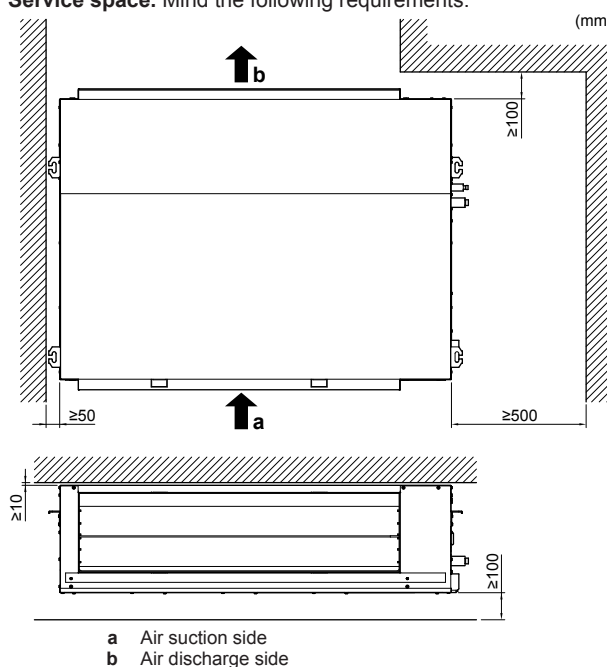

CAUTION

Appliance not accessible to the general public, install it in a secured area, protected from easy access.

These units (compressor unit, heat exchanger unit and indoor units) are suitable for installation in a commercial and light industrial environment.

**NOTICE**

This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

4.2 Preparing electrical wiring

4.2.1 Safety device requirements

**NOTICE**

When using residual current operated circuit breakers, be sure to use a high-speed type 300 mA rated residual operating current.

Power supply: Heat exchanger unit

The power supply must be protected with the required safety devices, i.e. a main switch, a slow blow fuse on each phase and an earth leakage protector in accordance with the applicable legislation.

Selection and sizing of the wiring should be done in accordance with the applicable legislation based on the information mentioned in the table below.

Model	Minimum circuit ampacity	Recommended fuses
RDXYQ5	4.6 A	10 A
RDXYQ8	7.0 A	10 A

- Phase and frequency: 1~ 50 Hz
- Voltage: 220-240 V

Transmission wiring

Transmission line section:

Transmission wiring	Sheathed + shielded cable (2 wires) Vinyl cords 0.75~1.25 mm ² (using shielded cable for the transmission wiring is mandatory for 5 HP, and optional for 8 HP)
Maximum wiring length (= distance between compressor unit and furthest indoor unit)	300 m
Total wiring length (= distance between compressor unit and all indoor units, and between compressor unit and heat exchanger unit)	600 m

If the total transmission wiring exceeds these limits, it may result in communication error.


5 Installation

5.1 Opening the units

5.1.1 To open the switch box cover of the heat exchanger unit



DANGER: RISK OF ELECTROCUTION

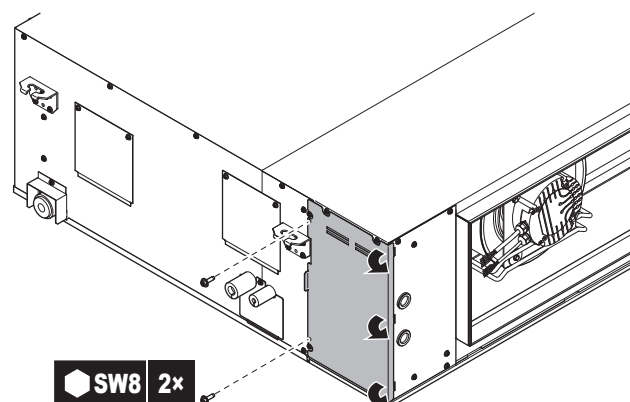


5.2 Mounting the heat exchanger unit

5.2.1 Guidelines when installing the heat exchanger unit


**INFORMATION**

Optional equipment. When installing optional equipment, also read the installation manual of the optional equipment. Depending on the field conditions, it might be easier to install the optional equipment first.

- Suspension bolts.** Use suspension bolts for installation. Check whether the ceiling is strong enough to support the weight of the unit. If there is a risk, reinforce the ceiling before installing the unit. Attach the hanger bracket to the suspension bolt. Fix it securely by using a nut and washer from the upper and lower sides of the hanger bracket.

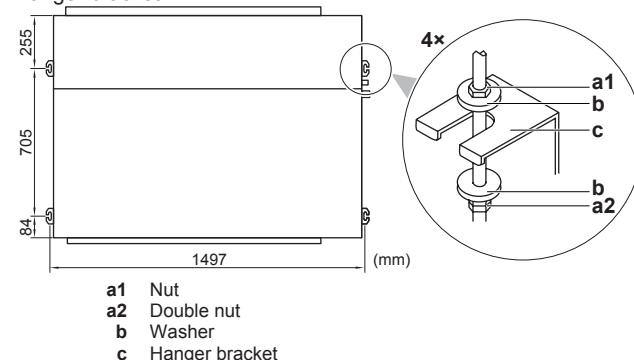

- Drain water flow.** Make sure drain water flows to the drain pipe connection.

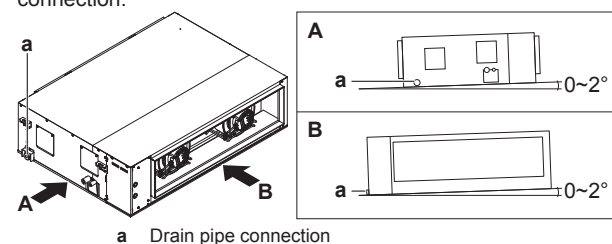


a Drain pipe connection

5.2.2 Guidelines when installing the ducting


The ducting is to be field supplied.

- Slope.** Make sure the ducting slopes down to prevent water from flowing into the heat exchanger unit.

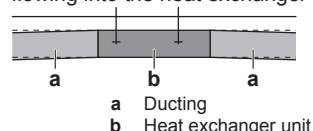

5 Installation

- **Grills.** Install grills in the suction ducting entrance and the discharge ducting exit to prevent animals and debris from going into the ducting.
- **Service holes.** Put service holes in the ducting to make maintenance easier.
- **Thermal insulation.** Insulate the ducting against thermal losses to prevent sweat (during heating operation), and to prevent overheating of the building (during cooling operation).
- **Sound insulation.** Insulate the ducting against noise, especially in sound-sensitive areas. **Example:** Sound-absorbing ducting; sound-absorbing baffle in the ducting.
- **Air leaks.** Wind aluminium tape around the connection between the heat exchanger unit and the ducting. Make sure there are no air leaks between the ducting and the heat exchanger unit, and at any other connection. This to prevent sweat, overheating and sound problems.

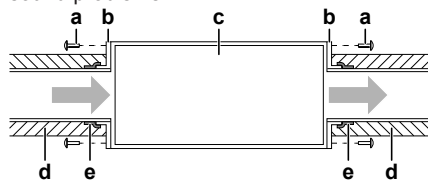


- a Screw (field supply)
- b Flange (field supply)
- c Heat exchanger unit
- d Insulation (field supply)
- e Aluminium tape (field supply)

Airflow:

- Protect the ducting against reverse airflow from wind.
- Prevent discharged air from flowing back to the suction side.
Possible consequence: Decreased performance of the unit.

- **Outside air.** Connect the suction ducting and discharge ducting with the outside air. If the suction ducting or discharge ducting is connected with the inside air, it might be impossible to reach the desired room temperature.

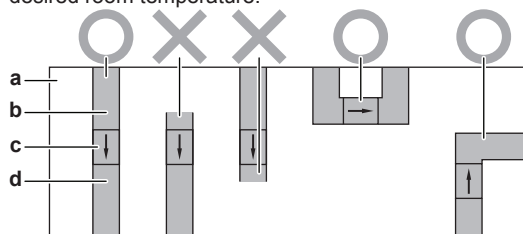

- O Allowed
- X Not allowed
- a Building (top view)
- b Suction ducting
- c Heat exchanger unit
- d Discharge ducting

5.2.3 Guidelines when installing the drain piping


Make sure condensation water can be evacuated properly. This involves:

- General guidelines
- Connecting the drain piping to the heat exchanger unit
- Installing a drain pump and drain reservoir
- Checking for water leaks

General guidelines


- **Pipe length.** Keep drain piping as short as possible.
- **Pipe size.** Keep the pipe size equal to or greater than that of the connecting pipe (vinyl pipe of 25 mm nominal diameter and 32 mm outer diameter).

- **Slope.** Make sure the drain piping slopes down (at least 1/100) to prevent air from being trapped in the piping. Use hanging bars as shown.

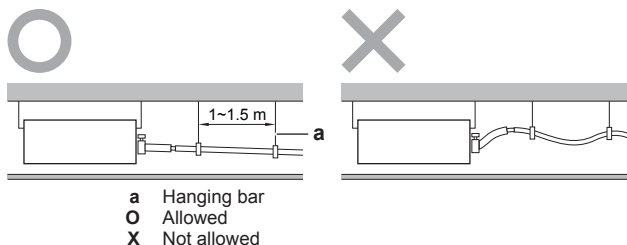


- a Hanging bar
- O Allowed
- X Not allowed

- **Condensation.** Take measures against condensation. Insulate the complete drain piping in the building.
- **Bad odours.** To prevent bad odours and air going into the unit through the drain piping, install a trap.

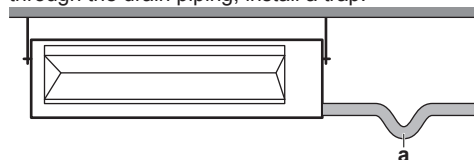

- a Trap

- **Combining drain pipes.** You can combine drain pipes. Make sure to use drain pipes and T-joints with a correct gauge for the operating capacity of the units.

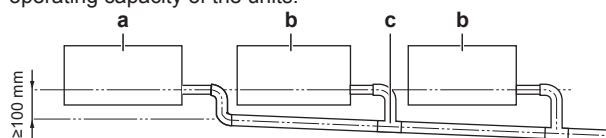

- a Heat exchanger unit
- b Indoor unit
- c T-joint


To connect the drain piping to the heat exchanger unit



NOTICE

Incorrect connection of the drain hose might cause leaks, and damage the installation space and surroundings.

- 1 Push the drain hose as far as possible over the drain pipe connection.
- 2 Tighten the metal clamp until the screw head is less than 4 mm from the metal clamp part.
- 3 Wind the sealing pad (= insulation) around the metal clamp and drain hose, and fix it with cable ties.
- 4 Connect the drain piping to the drain hose.

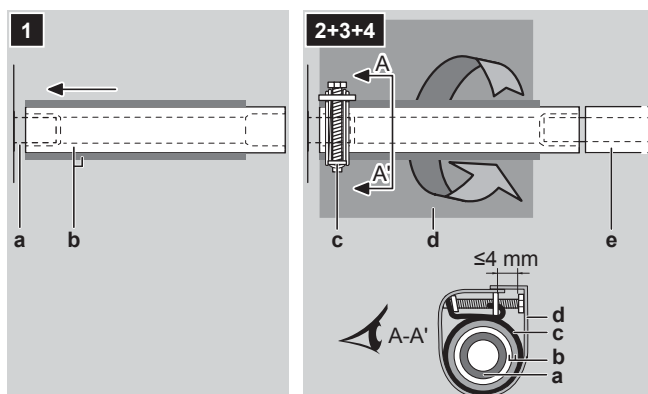


- a Drain pipe connection (attached to the unit)
- b Drain hose (accessory)
- c Metal clamp (accessory)
- d Sealing pad (accessory)
- e Drain piping (field supply)

Guidelines when installing a drain pump and drain reservoir

If you install a drain pump, you must also install a drain reservoir. The drain pump and drain reservoir are to be field supplied.

Drain pump:

- **Minimum flow rate:** 45 l/h
- **Feedback contact.** You can connect a contact that gives the status of the drain pump to the heat exchanger unit. The heat pump uses this contact as an input.

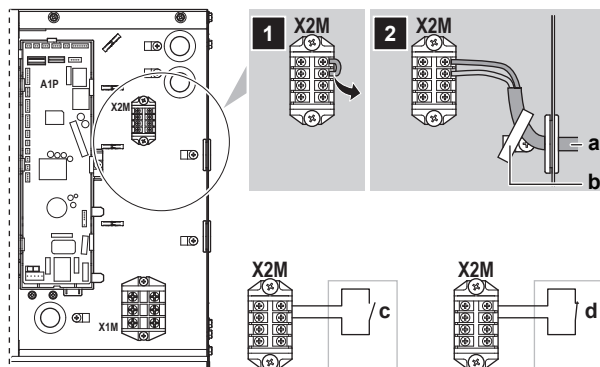

- a Feedback contact from the drain pump
- b Cable tie
- c Drain pump malfunction: If the contact opens, the heat pump stops operating and gives an error.
- d Drain pump normal operation: If the contact closes, the heat pump resumes normal operation.

Drain reservoir:

- **Minimum volume:** 3 l
- **Best practice:** Use a drain reservoir with a float switch that gives an ON/OFF signal to the drain pump.

To check for water leaks

Gradually put approximately 1 l of water in the drain pan, and check for water leaks.

5.3 Connecting the refrigerant piping

DANGER: RISK OF BURNING

5.3.1 To connect the refrigerant piping to the heat exchanger unit

- 1 Remove the cover.
- 2 Remove the 2 insulation pieces.
- 3 Put a wet cloth in front of the EPS to protect the drain pan.
- 4 Braze the liquid and gas piping.





NOTICE

Only for 8 HP.

Piping adapter (Ø19.1→22.2 mm) (delivered as accessory in the compressor unit). Use the piping adapter to connect the field piping (Ø22.2 mm) to the gas piping connection of the heat exchanger unit (Ø19.1 mm).



- 5 Remove the wet cloth.
- 6 Put back the 2 insulation pieces, peel off the insulation tapes and adhere them to the insulation pieces.
- 7 Reattach the cover.

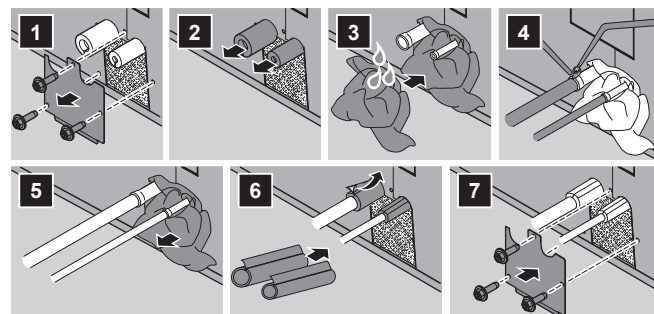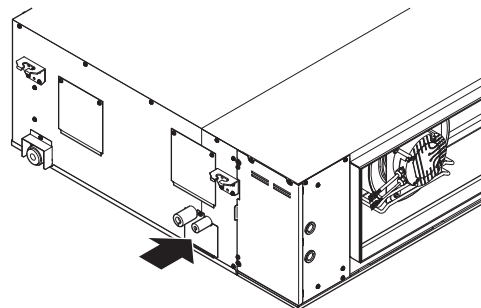


5.4 Connecting the electrical wiring

5.4.1 Field wiring: Overview

Field wiring consists of:

- Power supply (always including earth)
- Communication (= transmission) wiring between the compressor unit, the heat exchanger unit, and the indoor units.


Example:

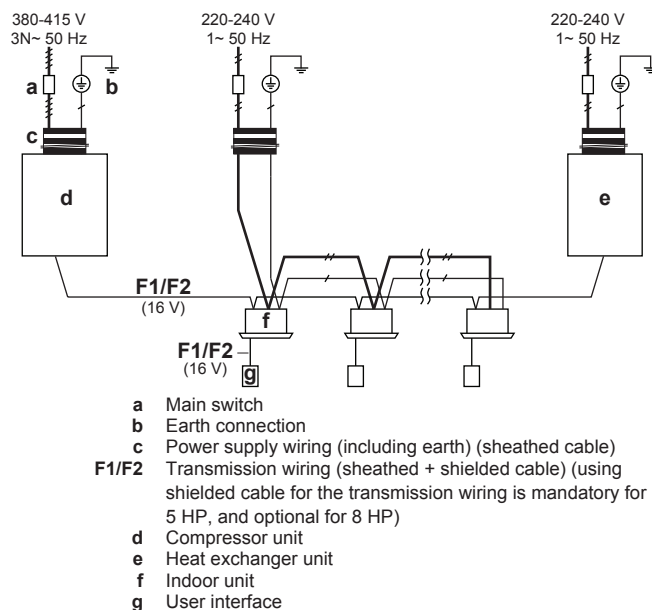

Branches

No branching is allowed after branching.

6 Technical data

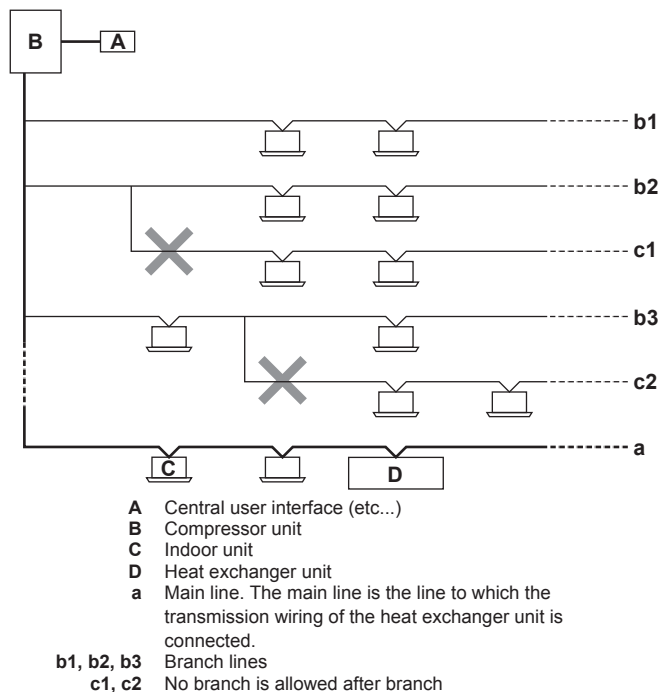

5.4.2 Guidelines when connecting the electrical wiring

Tightening torques


Wiring	Screw size	Tightening torque (N·m)
Power supply wiring (power supply + shielded ground)	M5	2.0~3.0
Transmission wiring	M3.5	0.8~0.97

5.4.3 To connect the electrical wiring on the heat exchanger unit

NOTICE


- Follow the wiring diagram (delivered with the unit, located at the inside of the service cover).
- Make sure the electrical wiring does NOT obstruct proper reattachment of the service cover.

- Remove the service cover.
- Connect the transmission wiring as follows:

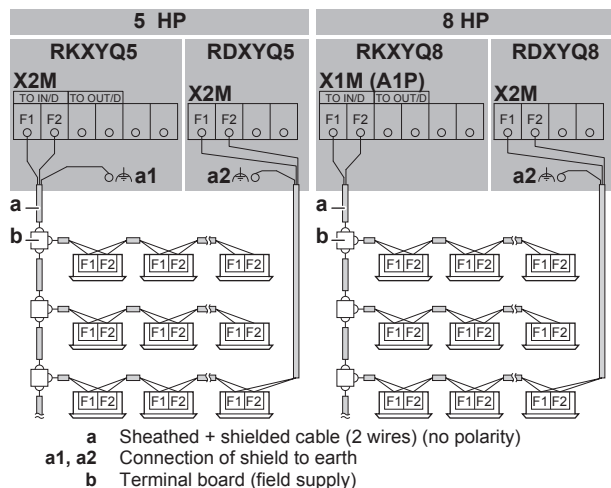

WARNING

Shielded cable. Using shielded cable for the transmission wiring is mandatory for 5 HP, and optional for 8 HP.

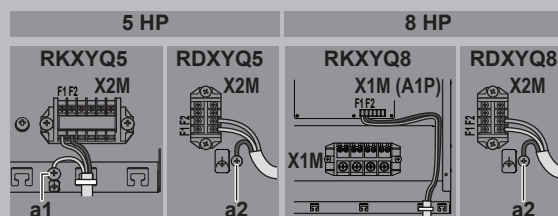


a1, a2 Earth (use the screw delivered as accessory)


When using shielded cable:

- In case of 5 HP (**a1** and **a2**): Connect the shield to the earth of the compressor unit and the heat exchanger unit.
- In case of 8 HP (only **a2**): Connect the shield only to the earth of the heat exchanger unit.

- Connect the power supply as follows:

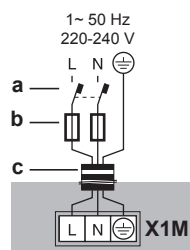

- Route the wiring through the frame, and fix the cables (power supply and transmission wiring) with cable ties.

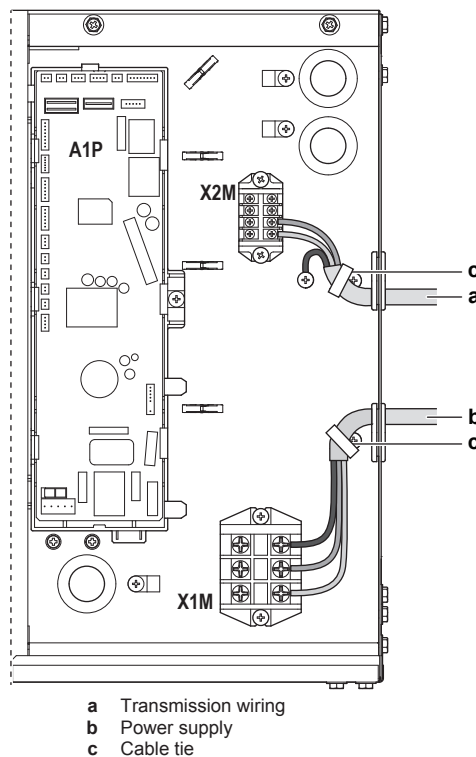

6 Technical data





- A **subset** of the latest technical data is available on the regional Daikin website (publicly accessible).

- The **full set** of latest technical data is available on the Daikin extranet (authentication required).

6.1 Wiring diagram: Heat exchanger unit



The wiring diagram is delivered with the unit, located at the inside of the switch box cover.



Symbols:

X1M	Main terminal
-----	Earth wiring
<u>15</u>	Wire number 15
-----	Field wire
	Field cable
→ **/12.2	Connection ** continues on page 12 column 2
①	Several wiring possibilities
	Option
	Not mounted in switch box
	Wiring depending on model
	PCB

Legend for wiring diagram 5+8 HP:

A1P	Printed circuit board (main)
A2P	Printed circuit board (adapter)
C1	Capacitor (A1P)
E1H	Drain pan heater (optional)
F1U	Fuse (F 1 A / 250 V) (optional)
F1U	Fuse (T 6.3 A / 250 V for PCB) (A1P)
HAP	Running LED (service monitor green) (A1P)
K1a	Auxiliary relay (optional)
M*F	Motor (fan)
Q1DI	Earth leakage circuit breaker (field supply)
PS	Switching power supply (A1P)
R1T	Thermistor (air)
R2T	Thermistor (gas)
R3T	Thermistor (coil)
V1R	Diode module (A1P)
X1M	Terminal strip (power supply)
X2M	Terminal strip (transmission wiring)
X*Y	Connector
Y1E	Electronic expansion valve
Z1C	Noise filter (ferrite core)
Z1F	Noise filter (A1P)

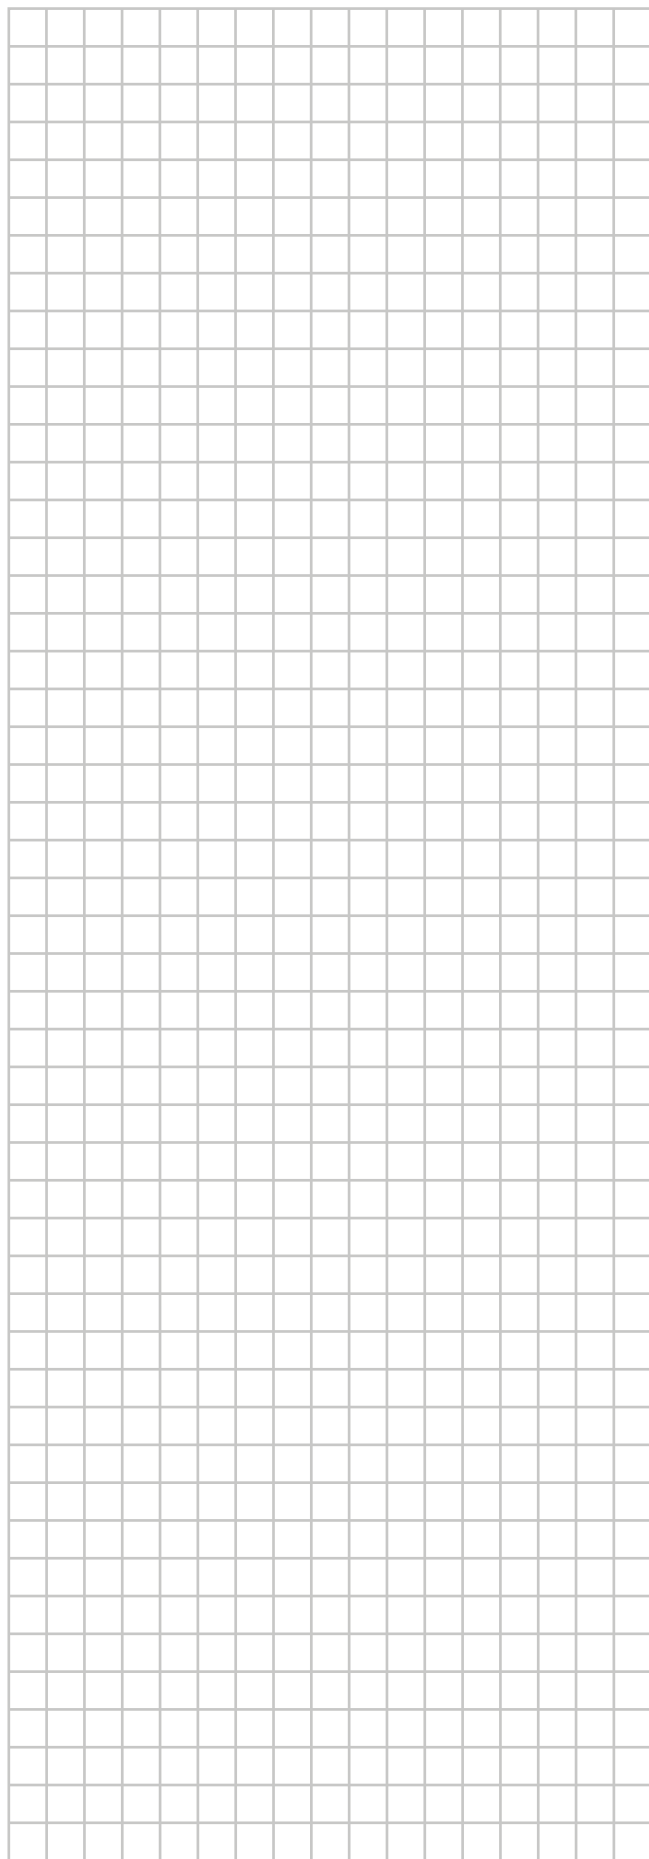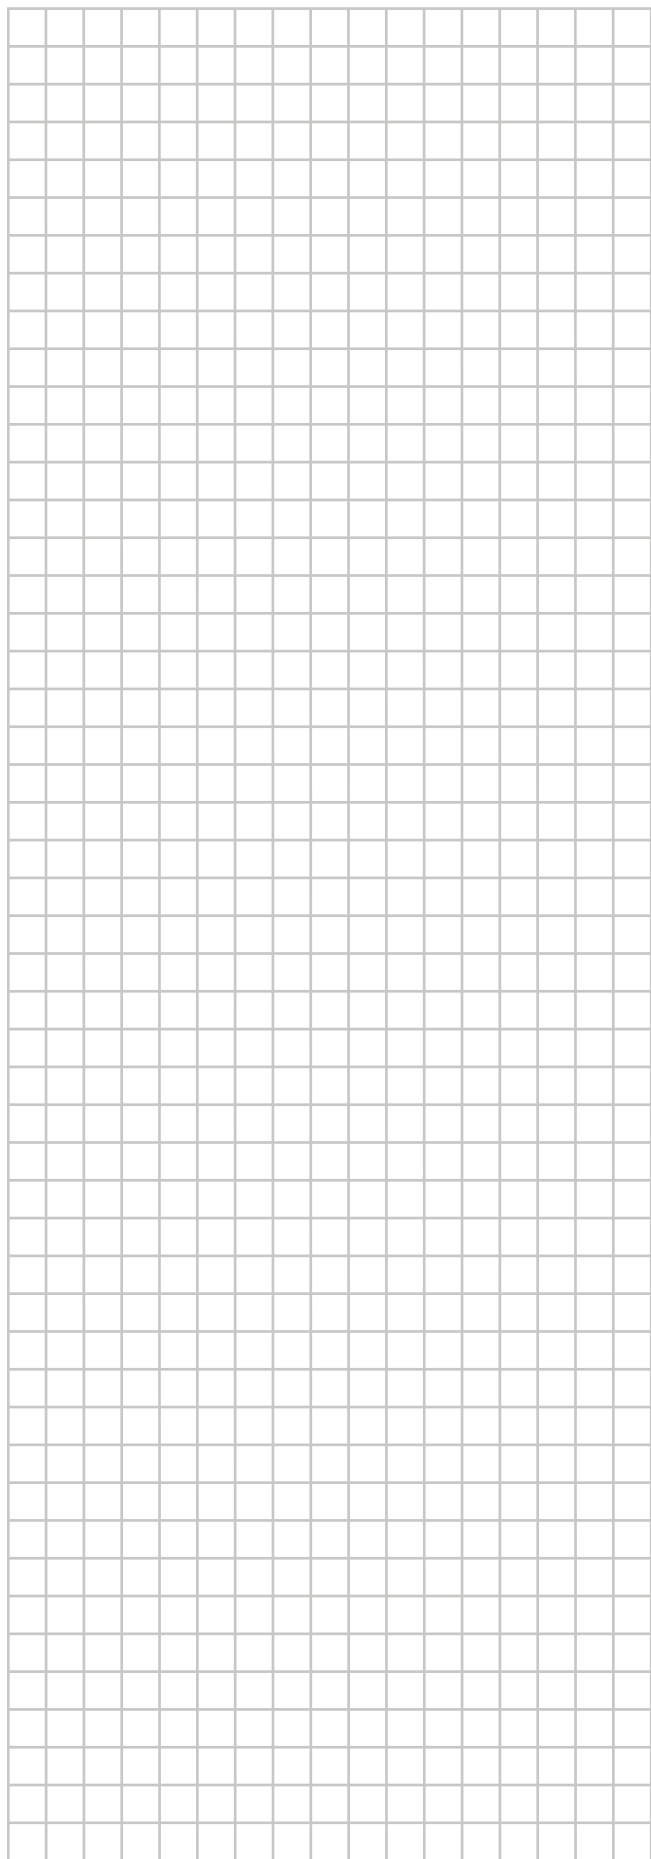

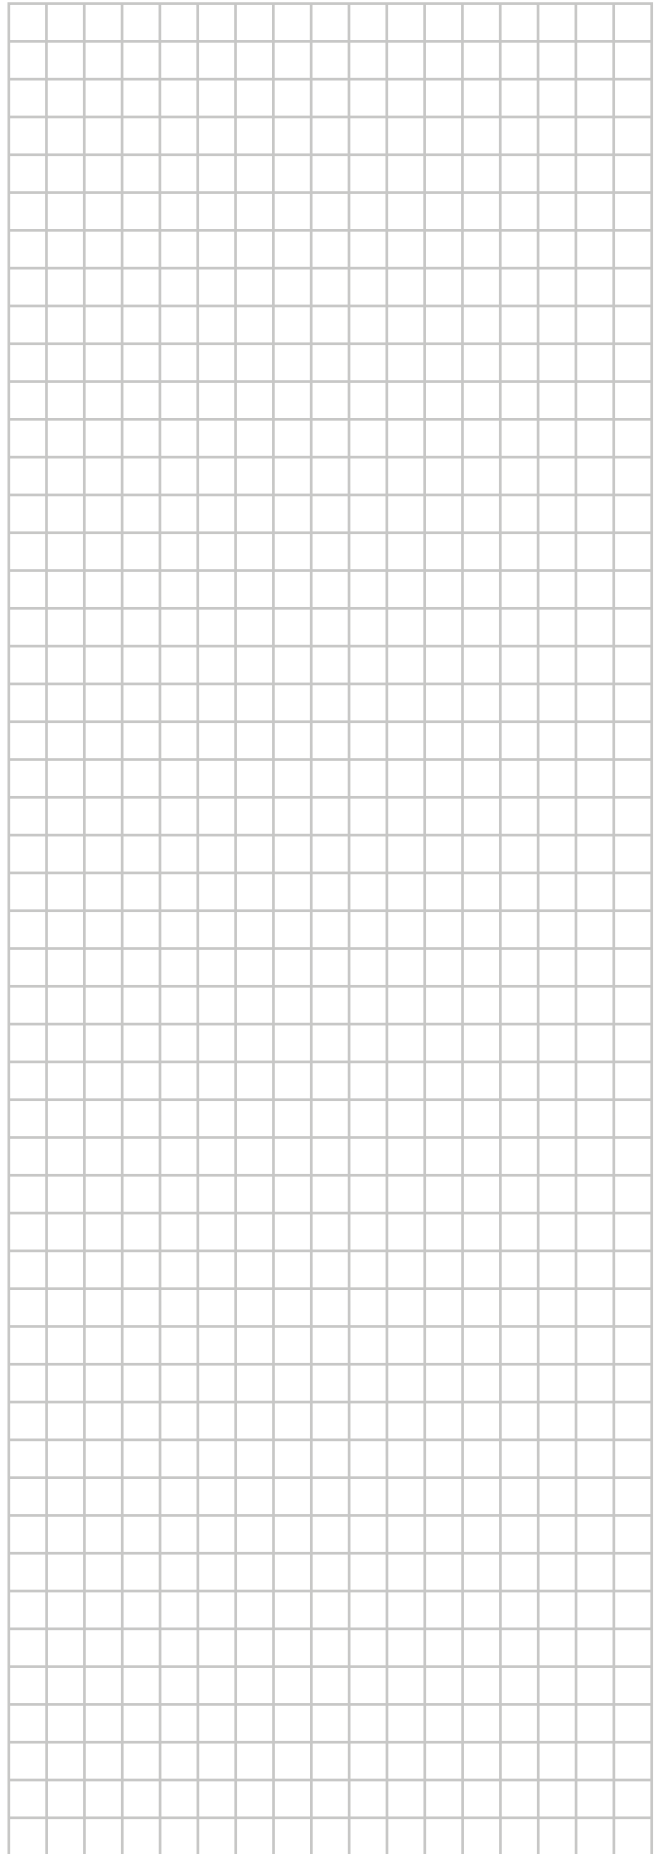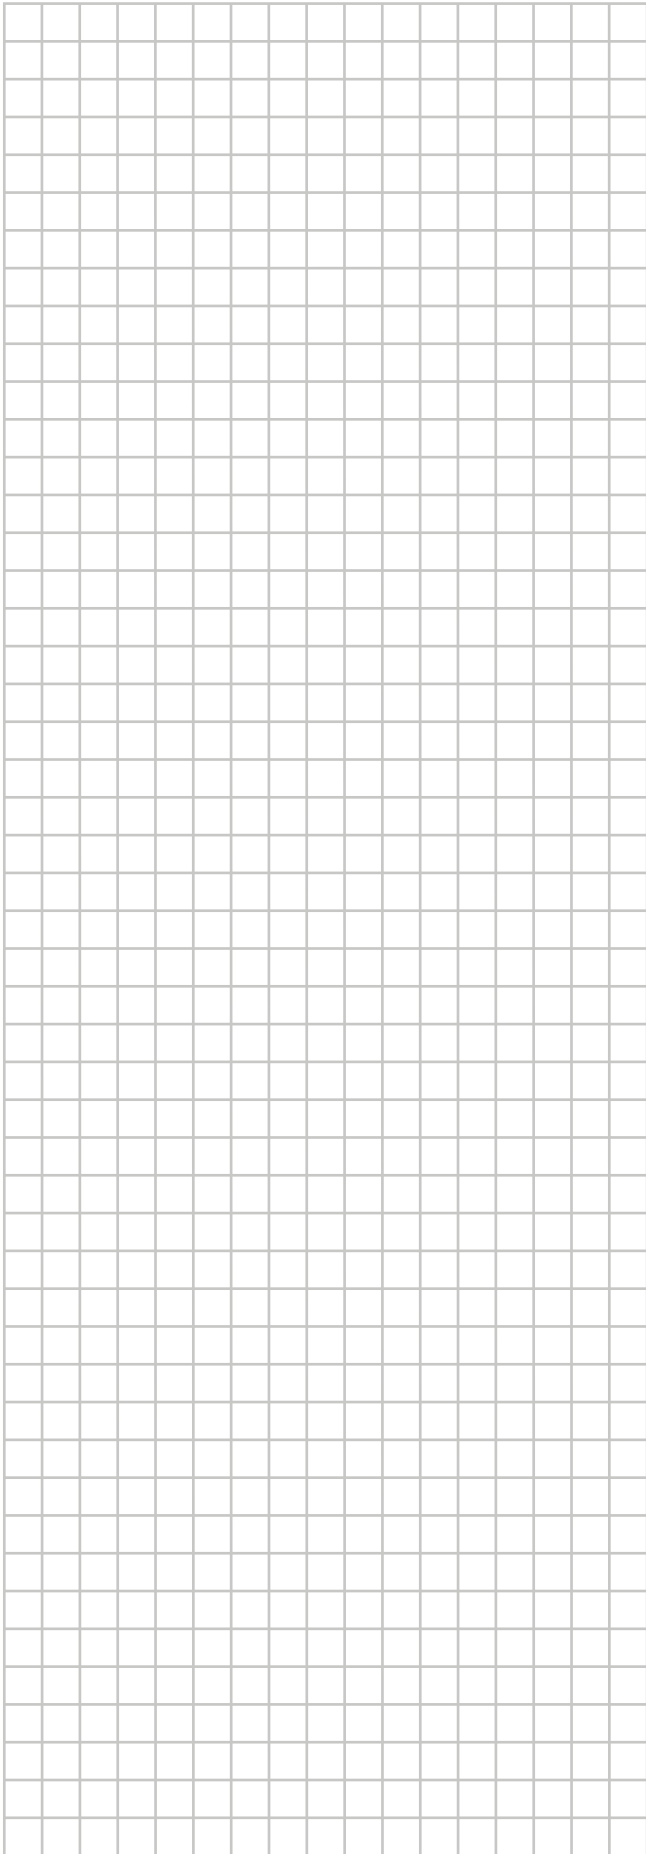

ERC



4P499899-1 00000003

Copyright 2017 Daikin

DAIKIN EUROPE N.V.

Zandvoordestraat 300, B-8400 Oostende, Belgium

4P499899-1 2017.09