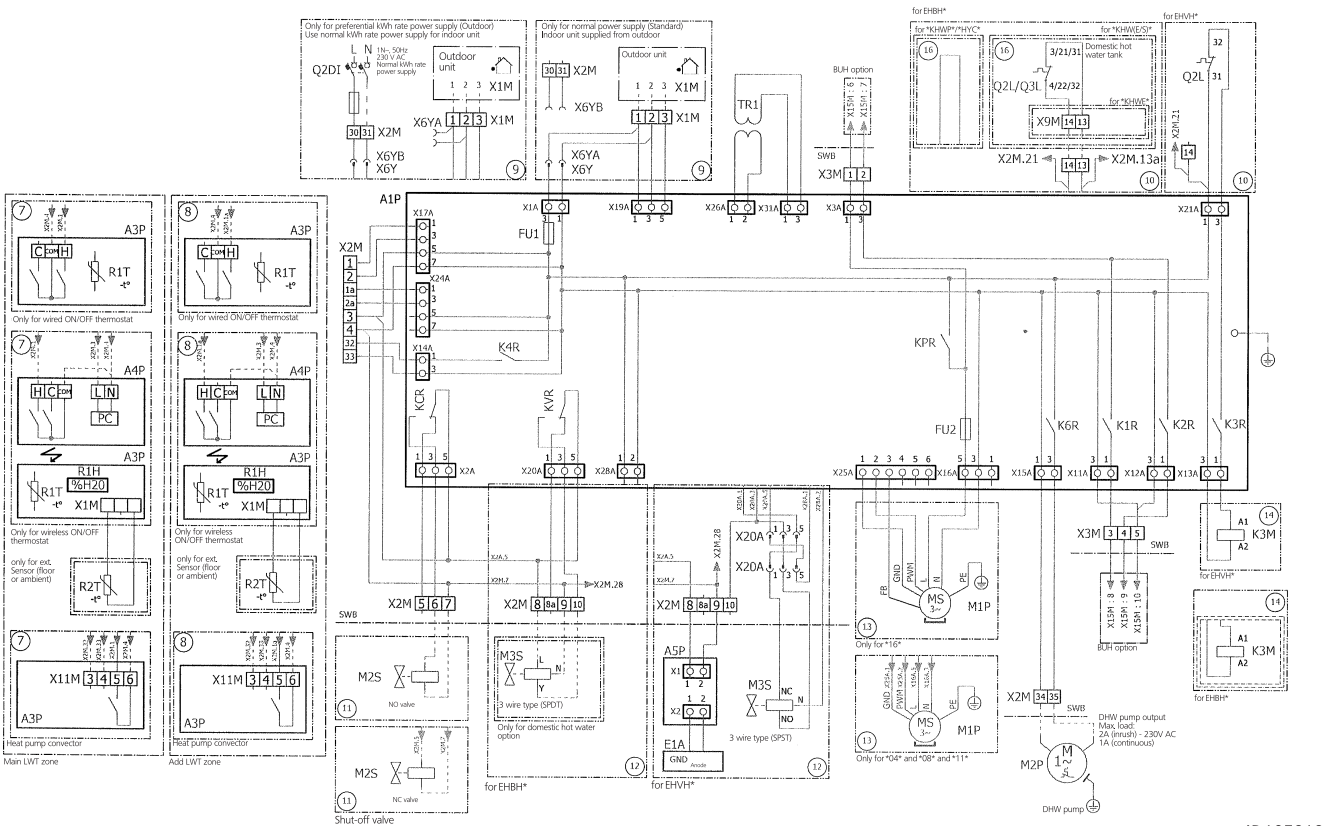
EHBH-CBV


Only for preferential kWh rate power supply (Outdoor)
Use normal kWh rate power supply for indoor unit
Only for normal power supply (Standard)
Indoor unit supplied from outdoor
Outdoor unit
Q2DI
X1M
X2M
X6YA
X6YB
X6Y
TR1
BUH option
SWB
for EHBH*
for EHVH*
for *KHWP*/*HYC*
for *KHWE/SY*
Domestic hot water tank
Q2L/Q3L
Q2L
X9M
X2M.21
X2M.13a
A1P
FU1
FU2
K4R
KCR
KVR
KPR
K6R
K1R
K2R
K3R
A3P
A4P
R1T
R2T
R1H
%H2O
PC
X11M
Only for wired ON/OFF thermostat
Only for wireless ON/OFF thermostat
only for ext. Sensor (floor or ambient)
Heat pump convector
Main LWT zone
Add LWT zone
M2S
NO valve
NC valve
Shut-off valve
M3S
3 wire type (SPDT)
Only for domestic hot water option
A5P
E1A
GND
Anode
3 wire type (SPST)
M1P
Only for *16*
Only for *04* and *08* and *11*
M2P
DHW pump
DHW pump output
Max. load:
2A (inrush) - 230V AC
1A (continuous)
K3M
4D105919