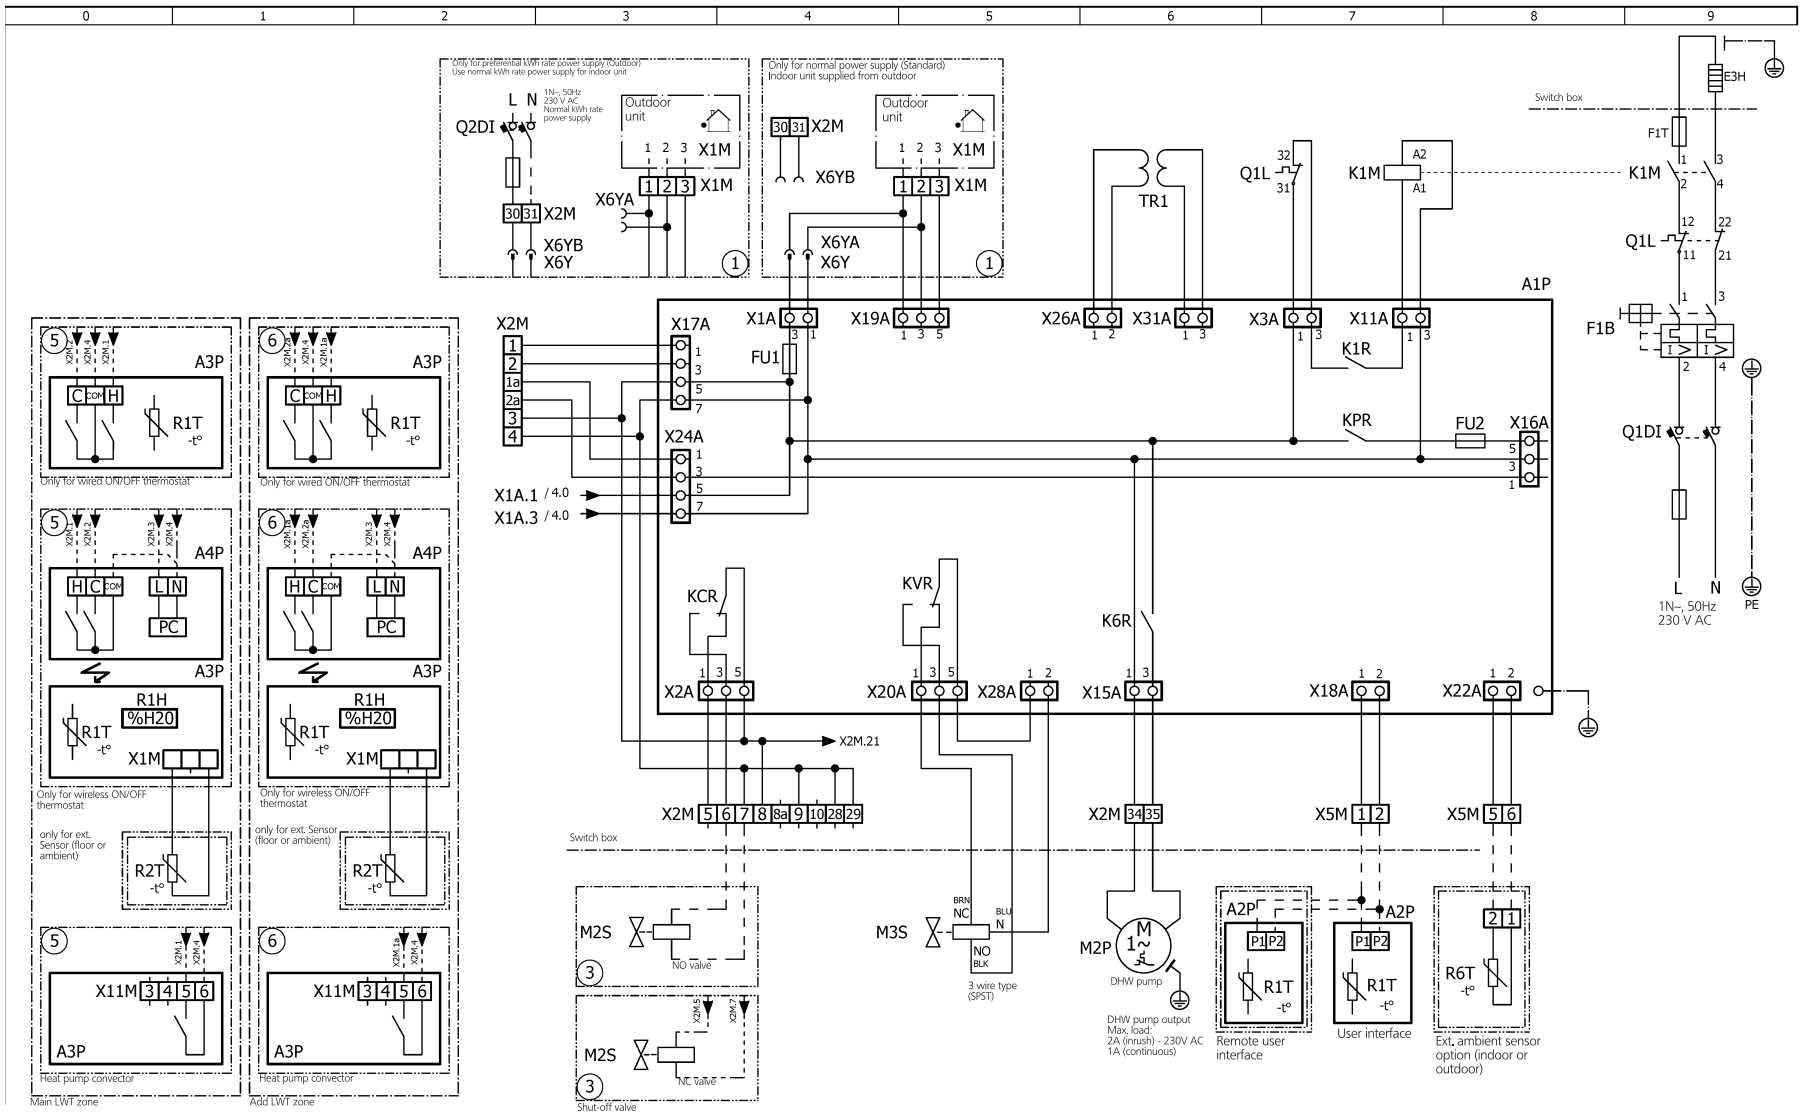
EHVZ-CB


Only for preferential kWh rate power supply (Outdoor)
Use normal kWh rate power supply for indoor unit
Only for normal power supply (Standard)
Indoor unit supplied from outdoor
Outdoor unit
Switch box
A1P
Only for wired ON/OFF thermostat
Only for wireless ON/OFF thermostat
only for ext. Sensor (floor or ambient)
Heat pump convector
Main LWT zone
Add LWT zone
Shut-off valve
3 wire type (SPST)
DHW pump
DHW pump output Max. load: 2A (inrush) - 230V AC 1A (continuous)
Remote user interface
User interface
Ext. ambient sensor option (indoor or outdoor)
1N~, 50Hz 230 V AC