EGSQH10S18A9W

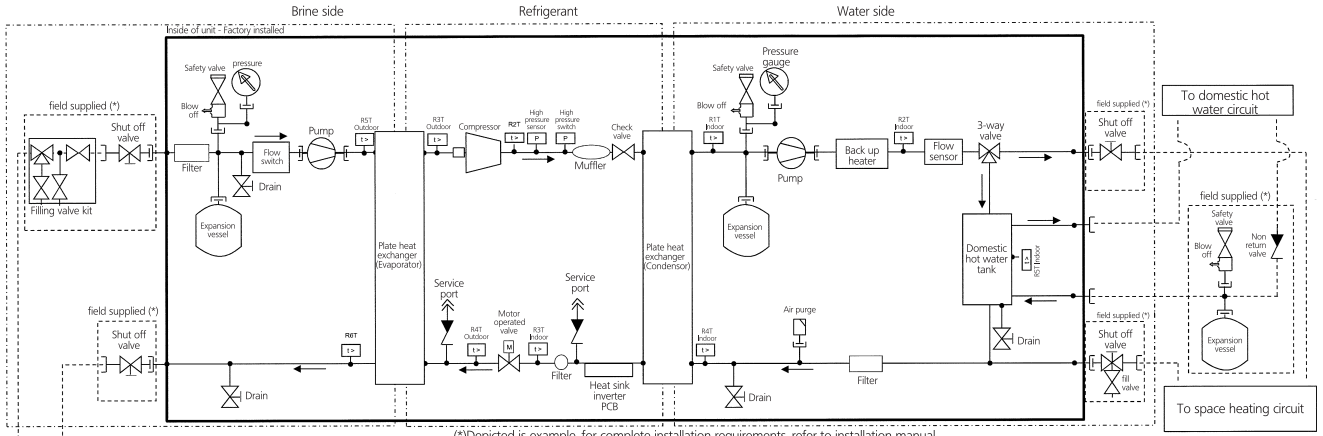

(*)Depicted is example, for complete installation requirements, refer to installation manual

Legend:

- Check valve
- Flare connection
- Spinned pipe
- Pinched pipe
- Screw connection
- quick coupling
- Flange connection
- Brazed connection

Description sensors	
R1T In	Outlet water temperature sensor (LWC)
R2T In	After BUH temperature sensor
R3T In	Refrigerant liquid temperature sensor
R4T In	Inlet water temperature sensor (EWC)
R5T In	DHW tank temperature sensor
R1T Out	Ambient air sensor
R2T Out	Discharge sensor
R3T Out	Suction sensor
R4T Out	2 phase sensor (Tx)
R5T Out	Brine entering water
R6T Out	Brine leaving water