
RMXS140EV- Cooling

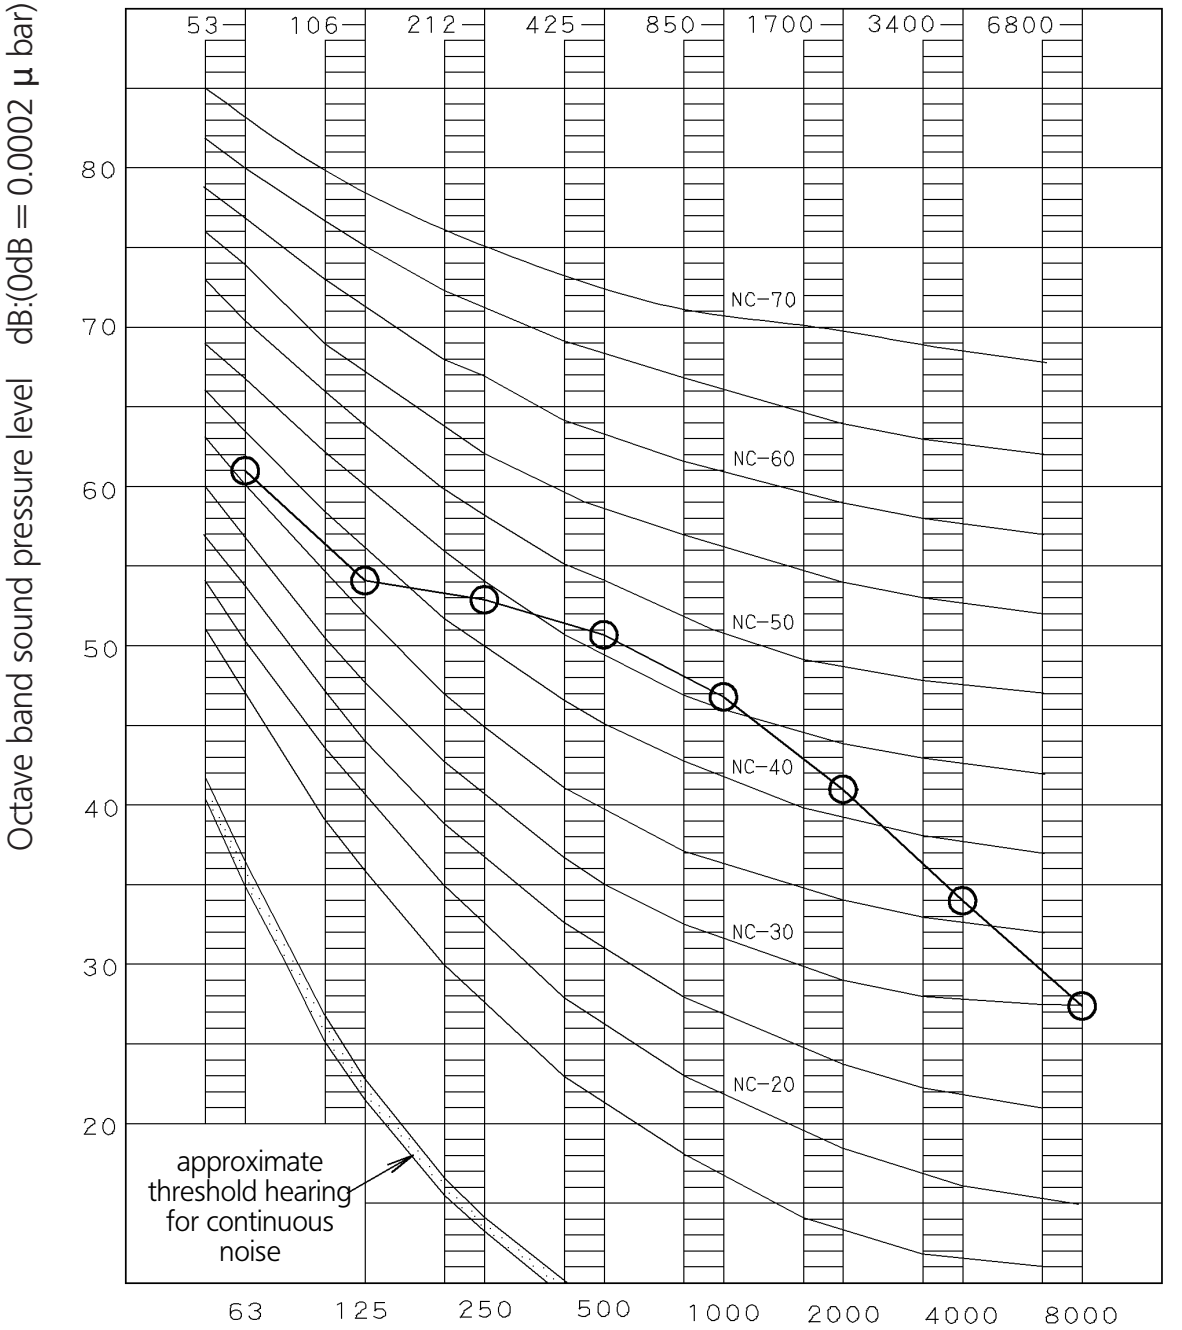


4D054138A

NOTES

1 The operating sound is measured in anechoic chamber, if it is measured under the actual installation conditions, it is normally over the set value due to enviromental noise and sound reflection.

2 Measuring place: anechoic room

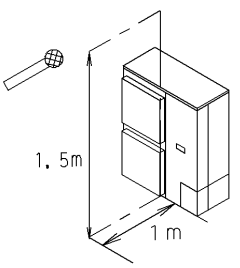

Location of microphone