
FXMQ250MA

50Hz 220V

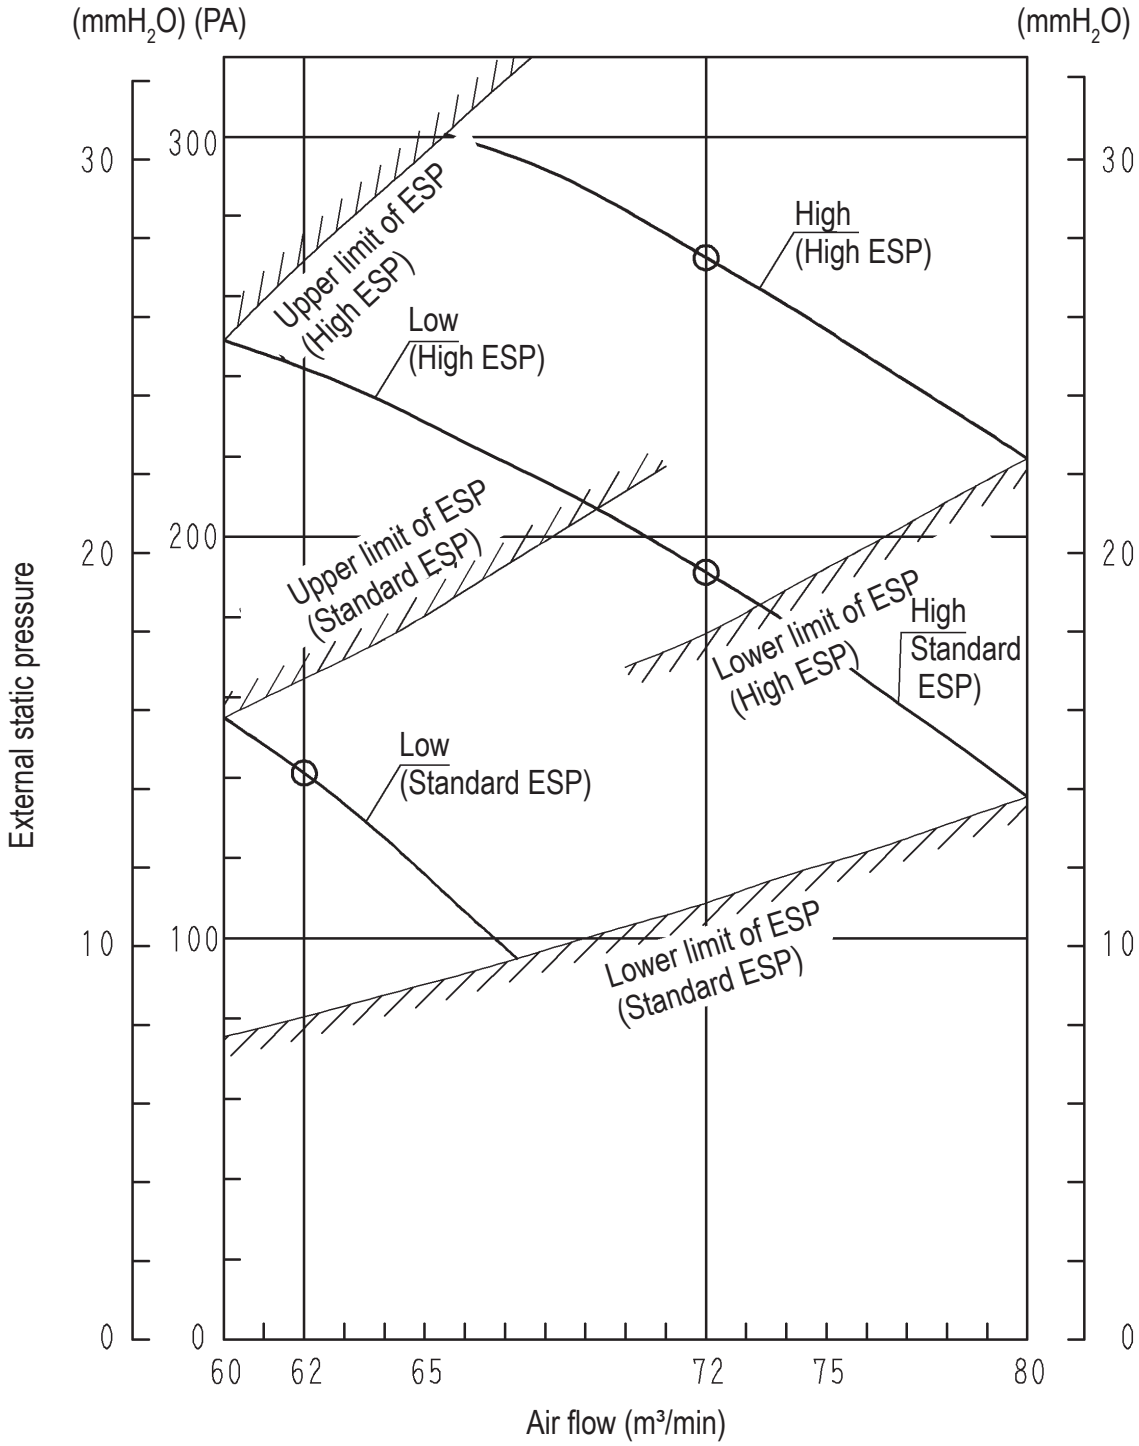

3D035173A

NOTES

1. The remote control can be used to switch between “high” and “low”.
2. The air flow is set to “standard” before leaving the factory. It is possible to switch between “standard ESP” and “high ESP” by changing the switch in the indoor unit electrical box.