

FXFN-B STANDARD PANEL


Notes


1. Location of nameplate
   The unit nameplate is located on the control box cover.
   The decoration panel nameplate is located on the piping-side panel frame, under the corner cover.
2. When installing optional accessories, refer to their respective documentation.
3. Make sure the distance between the ceiling and the cassette does not exceed ·35·mm.
   The maximum ceiling opening is ·910·mm.
4. When the conditions in the ceiling exceed 30°C ambient temperature and 80% relative humidity, or when fresh air is inducted into the ceiling, additional insulation is required (polyethylene foam, thickness ≥·10·mm).
5. When installing a sensor kit, there will be a sensor on this location. For details, see the drawing of the sensor kit.
6. When installing a wireless controller, there will be a receiver on this location. For details, see the drawing of the wireless controller.

Cassette height		Minimal installation height	
AA	AB	AC	Model
246	180	269	FXFN40/50/63B2VEB
288	180	311	FXFN80B2VEB

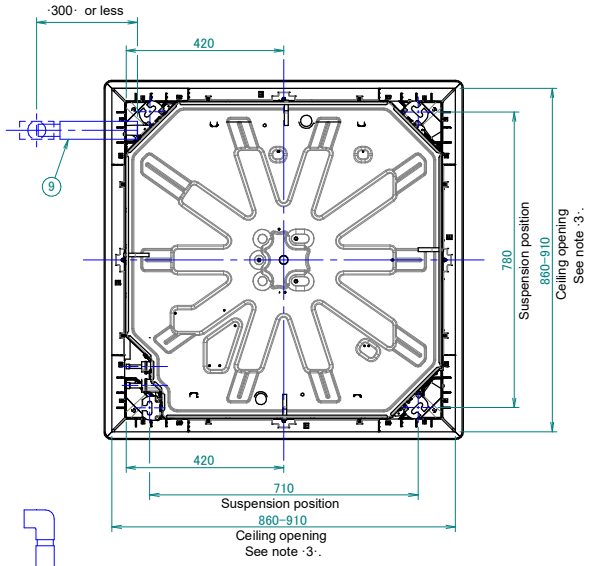


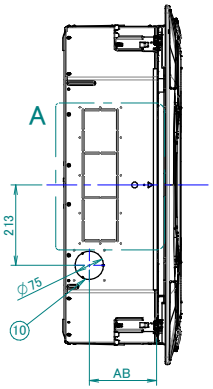


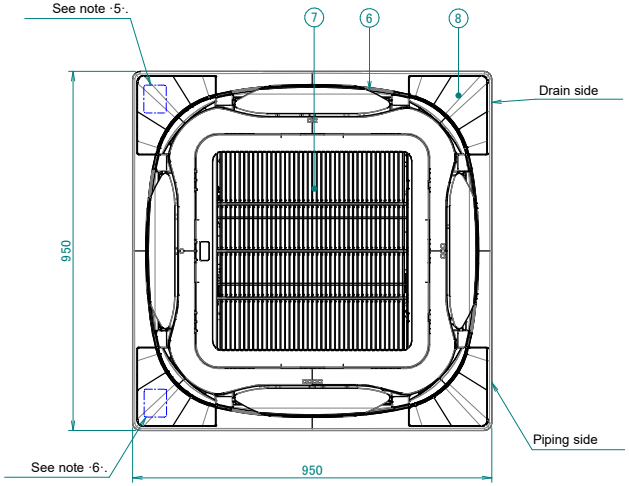

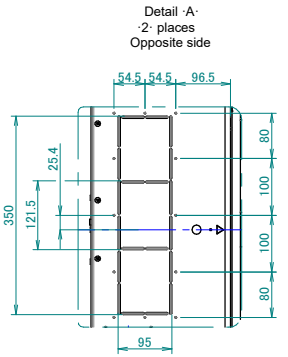


FXFN40/50/63B2VEB
FXFN80B2VEB

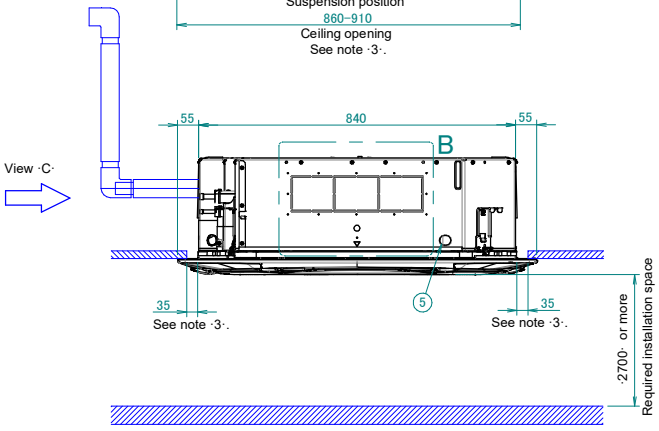


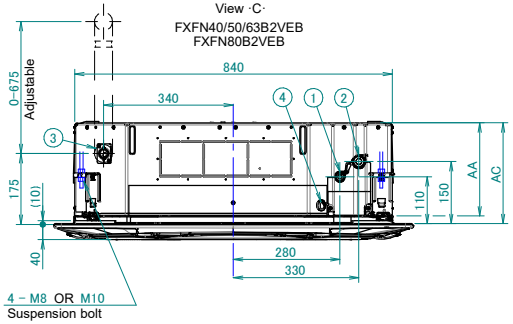


Item Name

1. Liquid pipe connection port
2. Gas pipe connection port
3. Drain pipe connection
4. Power supply wiring intake
5. Transmission wiring intake hole
6. Air discharge outlet
7. Air suction grille
8. Corner decoration cover
9. Drain hose
10. Knockout hole.

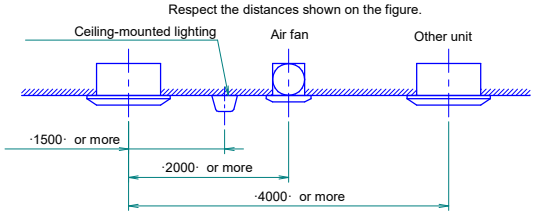

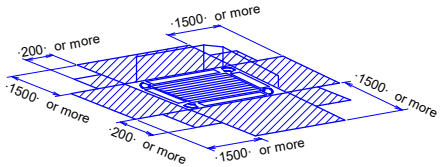

Required installation space
If a discharge outlet is closed up with the "sealing member" option kit, then the required installation space on that (closed up) side is ·500·mm instead of ·1500·mm.

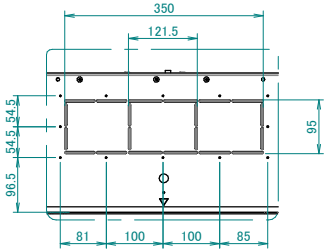

FXFN40/50/63B2VEB
FXFN80B2VEB

2D156432