CVXM-B
FVXM-B
FVXTM-B



Notes
The · · mark shows the piping direction.

Operation lamp
Indoor unit On/OFF switch
Indication lamps
Signal receiver

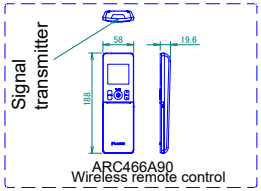

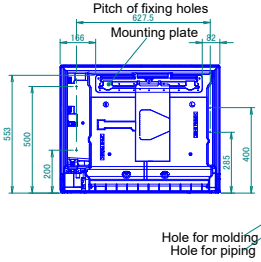

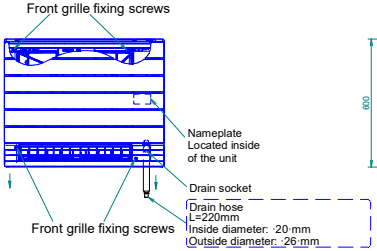

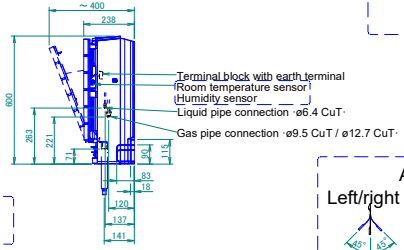

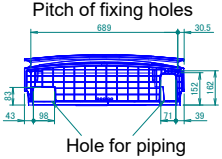

Adjusting the air flow direction

Left/right (manual)

Upper air outlet

Lower air outlet

Up/down (automatic)

Cooling
Dry



Heating



Installation
A

Inlet Outlet
Required installation space

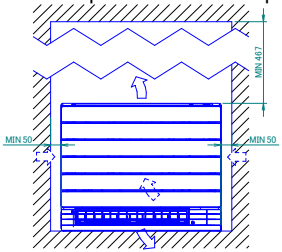

Installation
B

Inlet Outlet
Required installation space

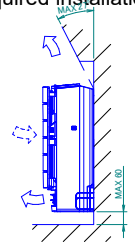

Installation
C

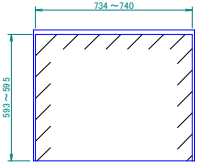

2D152044