FDEQ71

Notes

1. When using the central remote control, see manual for connection to the unit.
2. The remote control model varies according to the combination system. See technical materials and catalogues, etc. before connecting.

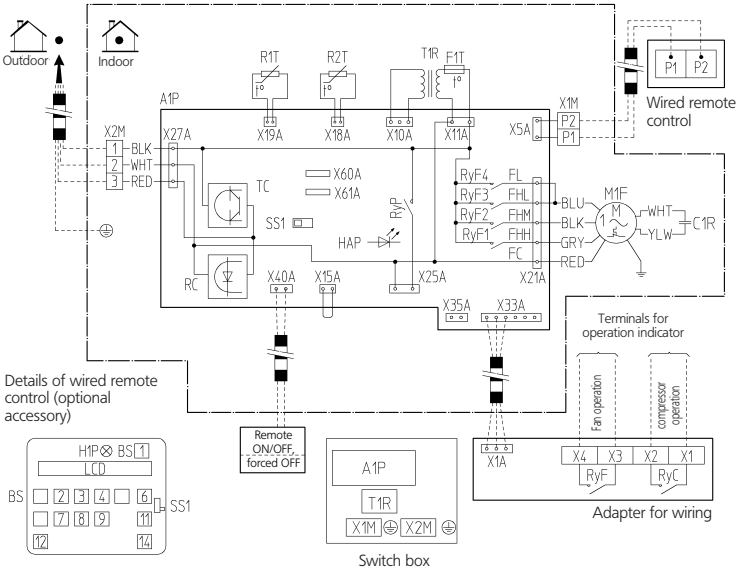

Field wiring Terminal
: Connector
: Wire clamp
: Protective earth (screw)

Colours
BLK: Black / WHT: White / RED: Red / BLU: Blue / GRY: Grey / ORG: Orange

A1P	Printed circuit board
T1R	Power supply transformer (transformer 220-240V/218V)
C1R	Capacitor (fan)
F1T	Thermal fuse (136°C) (T1R embedded)
HAP	Light emitting diode (service monitor green)
M1F	Motor (Fan)

R1T	Thermistor (air)
R2T	Thermistor (coil)
RyF1-4	Magnetic relay (fan)
RyP	Magnetic relay (drain pump)
SS1	Selector switch (emergency)
X1M	Terminal strip
X2M	Terminal strip
RC	Signal receiver circuit
TC	Signal transmission circuit

Wired remote control	
BS1	On/Off button
BS2	Timer mode start/stop button
BS3,BS8	Programming time button
BS4,BS9	Temperature setting button
BS6	Operation mode selector button
BS7	Timer on/off button
BS11	Fan speed control button
BS12	Inspection/test operation button

BS14	Filter sign reset button
H1P	Light emitting diode (service monitor red)
LCD	Liquid crystal display
SS1	Selector switch (main/sub)

Adapter for wiring	
RyC,RyF	Magnetic relay
Connector for optional parts	
X60A	Connector (interface adaptor for SKY AIR /
X61A	US series)
X33A	Connector (adapter for wiring)
X35A	Connector (group control adapter)
X40A	Connector (remote ON/OFF, forced off, only SKY-AIR P series)