FXDQ63A

Service space of installation box for adaptor PCB.

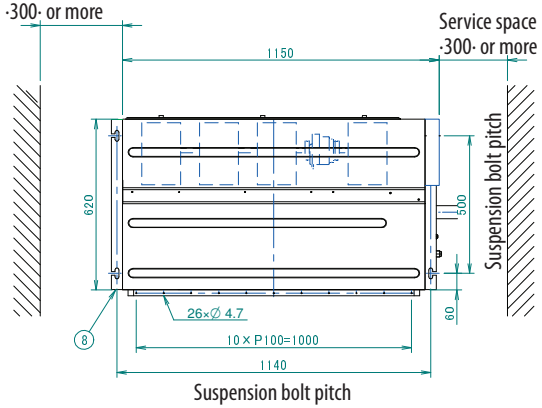

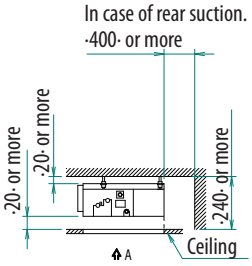

Service space

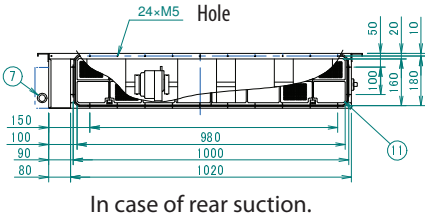

In case of rear suction.

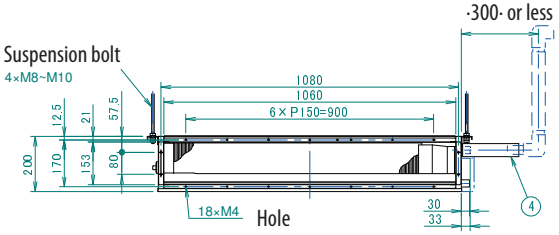

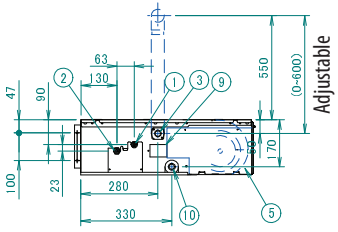

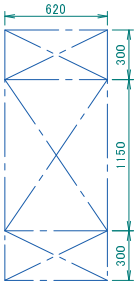

View ·A·

Inspection door

Ceiling opening

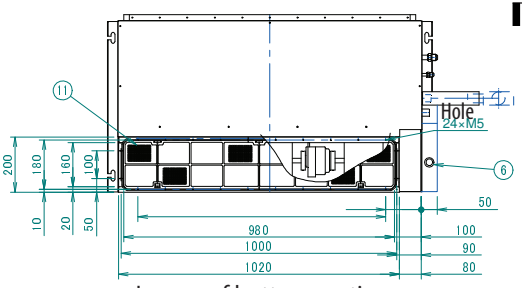

In case of bottom suction.

NOTES

1. In case of rear suction, mount the chamber cover to the bottom side of the unit.
   In case of bottom suction, mount the chamber cover to the backside of the unit.
2. In case of bottom suction, no service space is required at the rear side.
3. The unit nameplate is located on the control box cover.
4. Mount the air filter at the suction side.
   Use an air filter with a dust collecting efficiency of at least ·50·% (measured by gravimetric analysis).
   When a duct is connected at the suction side, it is not possible to mount an air filter.

Item	Name	Description
1	Liquid pipe connection port	ø 6.4 Flare connection
2	Gas pipe connection port	ø 12.7 Flare connection
3	Drain pipe connection	VP·20· (ID ·20· x OD ·26·)
4	Drain hose (accessory)	Inside diameter: ·25· Outlet
5	Control box	
6	Transmission wiring connection	
7	Power supply connection	
8	Suspension bracket	
9	Maintenance cover	
10	Drain socket	
11	Air filter (accessory)	