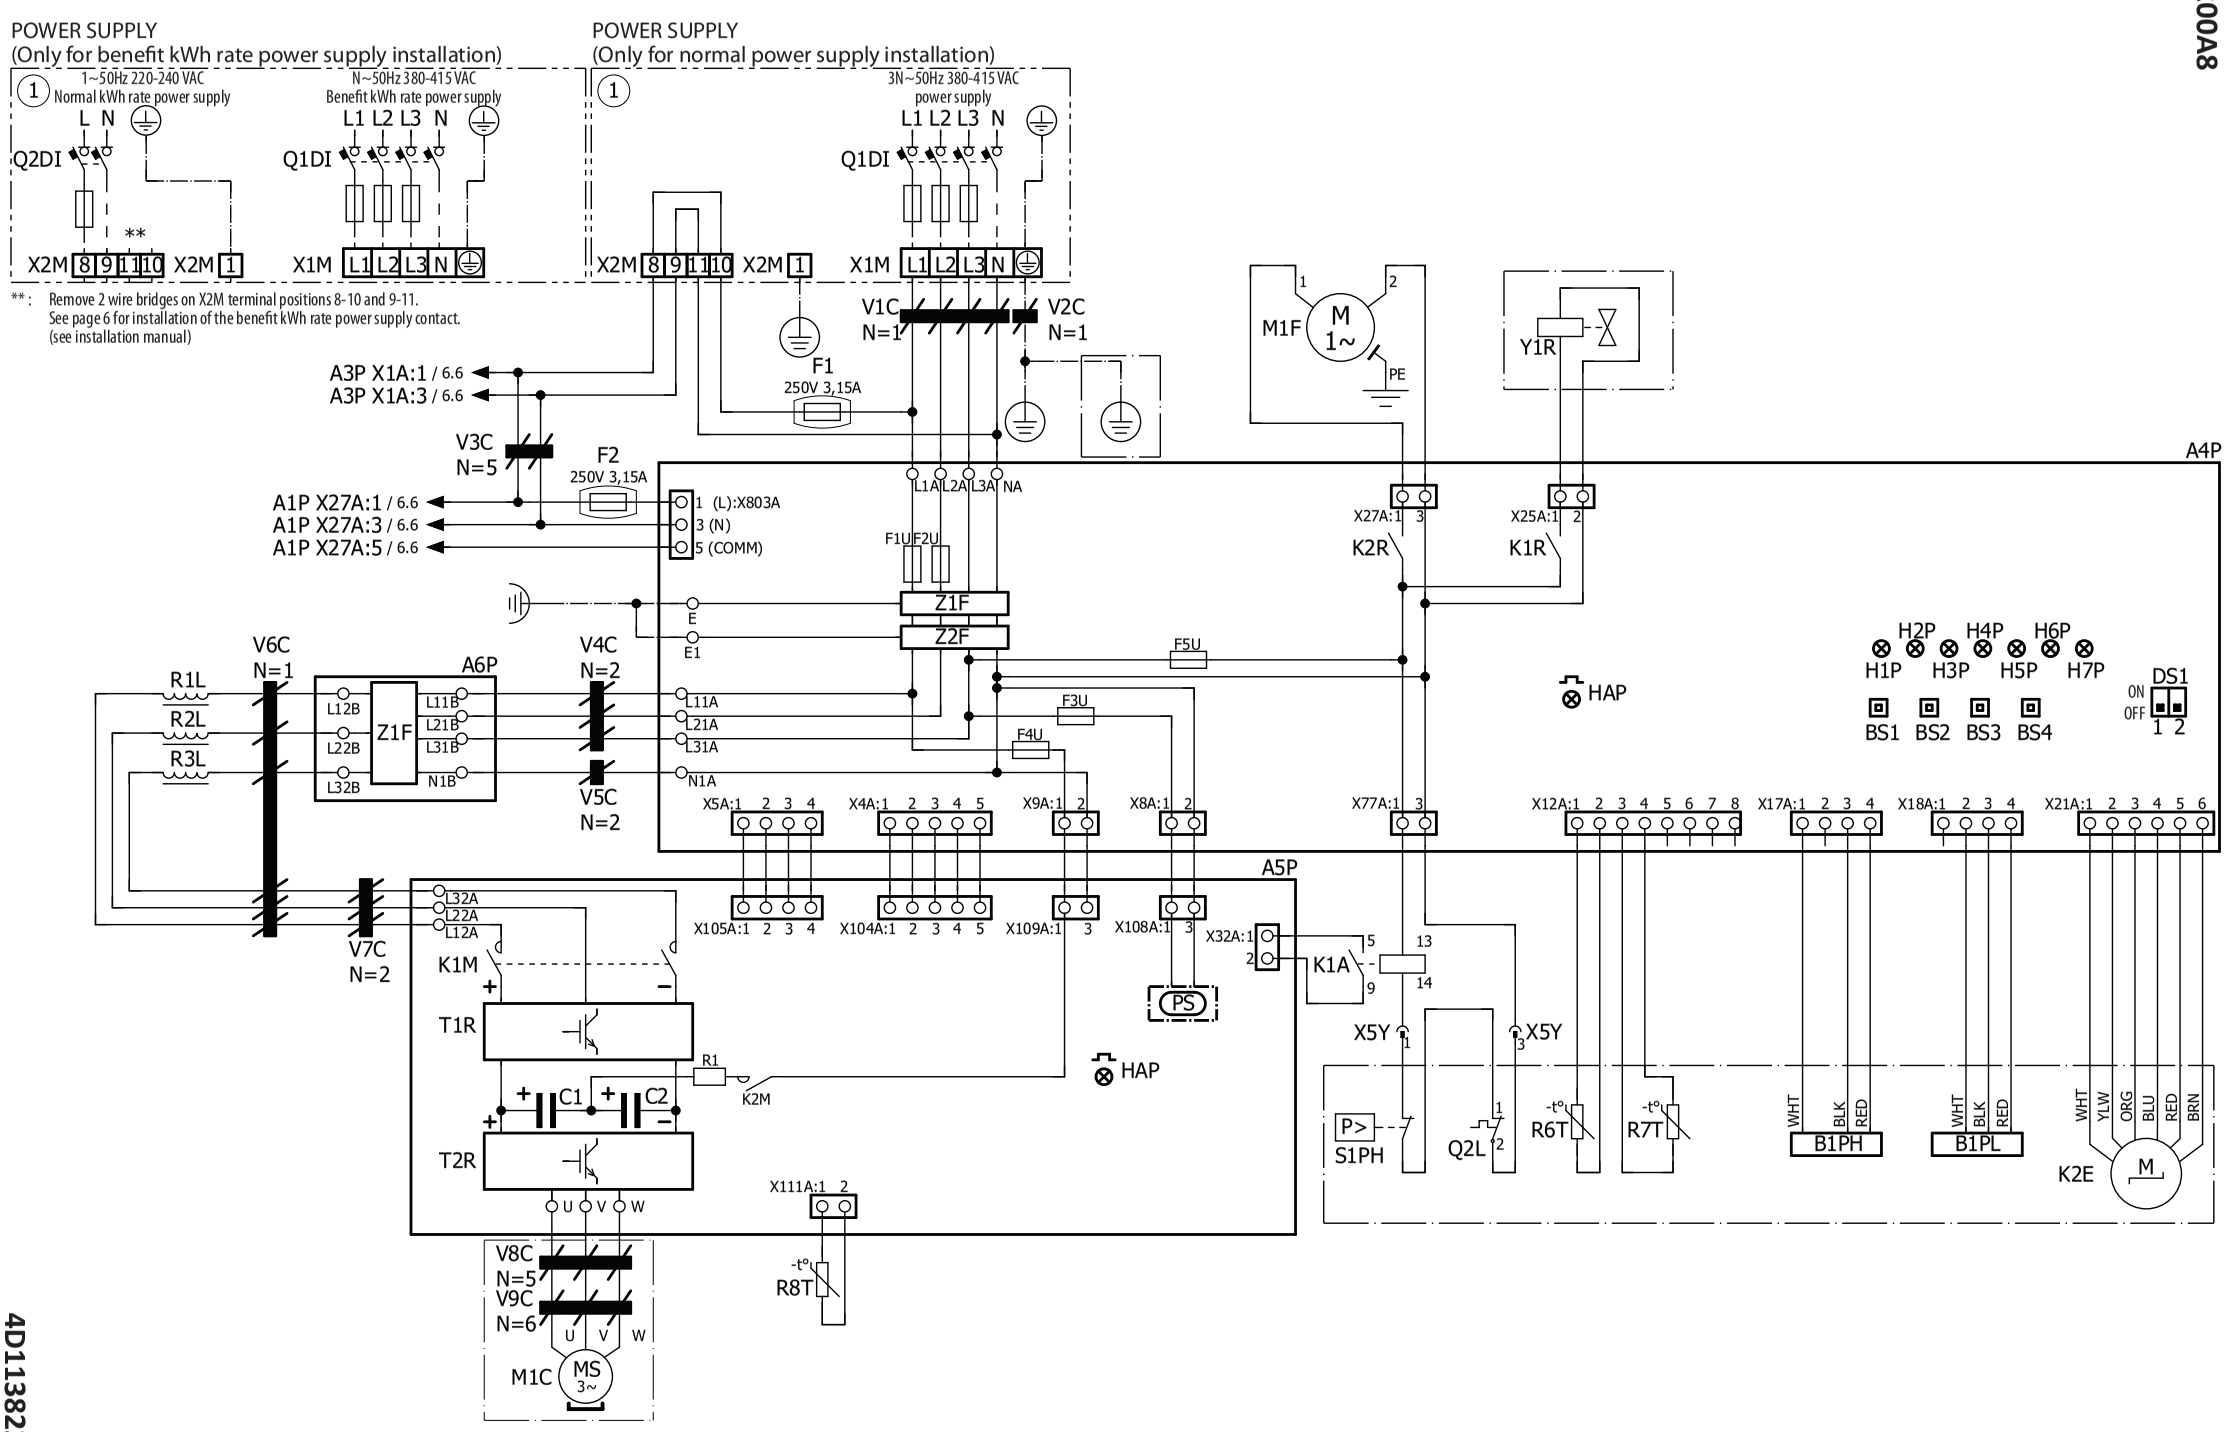
POWER SUPPLY
(Only for benefit kWh rate power supply installation)
1~50Hz 220-240 VAC
Normal kWh rate power supply
N~50Hz 380-415 VAC
Benefit kWh rate power supply
POWER SUPPLY
(Only for normal power supply installation)
3N~50Hz 380-415 VAC
power supply
** : Remove 2 wire bridges on X2M terminal positions 8-10 and 9-11.
See page 6 for installation of the benefit kWh rate power supply contact.
(see installation manual)
A3P X1A:1 / 6.6
A3P X1A:3 / 6.6
A1P X27A:1 / 6.6
A1P X27A:3 / 6.6
A1P X27A:5 / 6.6
F1
250V 3,15A
F2
250V 3,15A
V1C N=1
V2C N=1
V3C N=5
V4C N=2
V5C N=2
V6C N=1
V7C N=2
V8C N=5
V9C N=6
M1F
M1C
Y1R
A4P
A5P
A6P
K1R
K2R
K1M
K2M
K1A
T1R
T2R
C1
C2
R1L
R2L
R3L
Z1F
Z2F
F1U F2U
F3U
F4U
F5U
HAP
PS
S1PH
Q2L
R6T
R7T
R8T
B1PH
B1PL
K2E
H1P H2P H3P H4P H5P H6P H7P
BS1 BS2 BS3 BS4
DS1
ON
OFF