


# EWYQ-CWN/P/H


# EWAQ-CWN/P/H

EWA/YQ	A	B	C
016~025	1340	792	-
032	1650	1102	-
040-050	2320	792	192
064	2940	1102	192

016~025 & 032 models

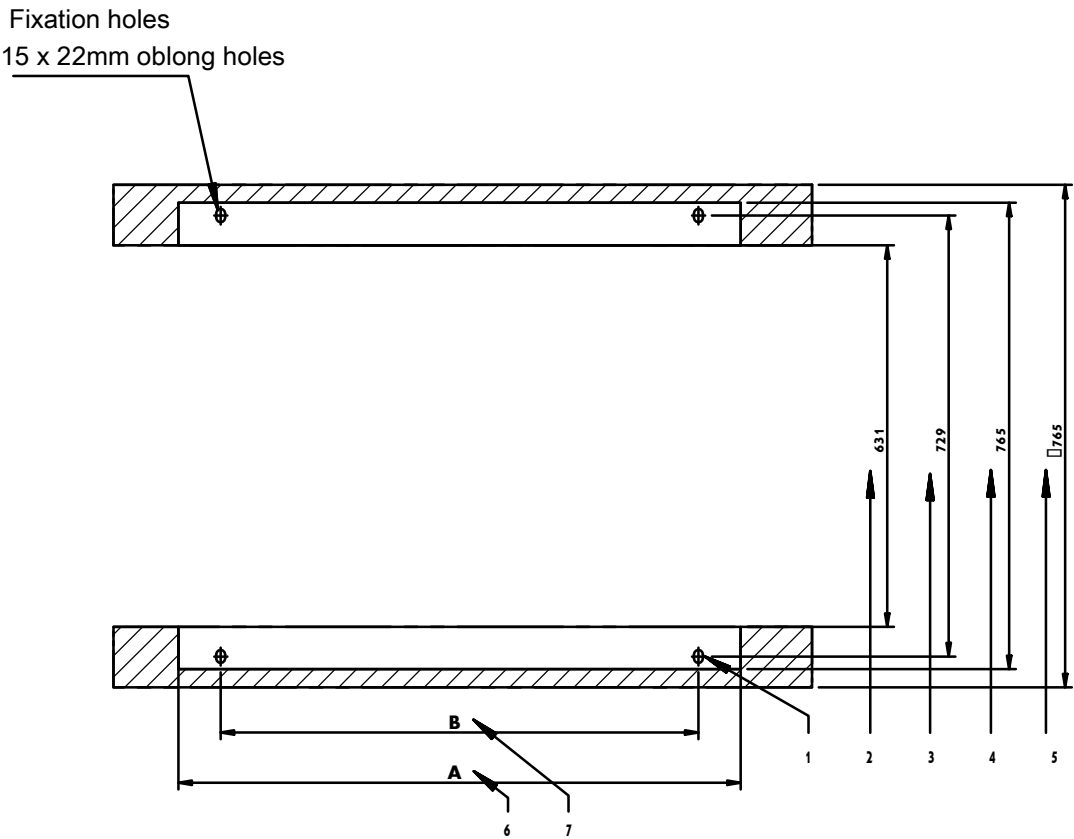

Foundation bolt type: M12 See note 4.

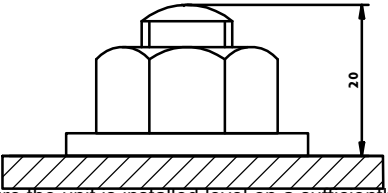

- Notes
1. To prevent vibration and noise, make sure the unit is installed level on a sufficiently strong base.
  2. The height of the foundation must at least be 150mm from the floor. In heavy snowfall areas, this height must be increased depending on the installation location and conditions.
  3. The unit must be installed on a solid longitudinal foundation (steel beam frame or concrete). Make sure the base under the unit is larger than the shaded area.
  4. Fasten the unit in place using M12 foundation bolts. It is recommended to keep 20mm of the bolt above the foundation surface.

- Legend
- 1. Foundation bolt hole
  - 2. Inner foundation dimension
  - 3. Pitch of foundation bolt holes
  - 4. Width of unit
  - 5. Width of unit
  - 6. Outer foundation dimension
  - 7. Length of foundation
  - Pitch of foundation bolt holes

040-050 & 064 models

