

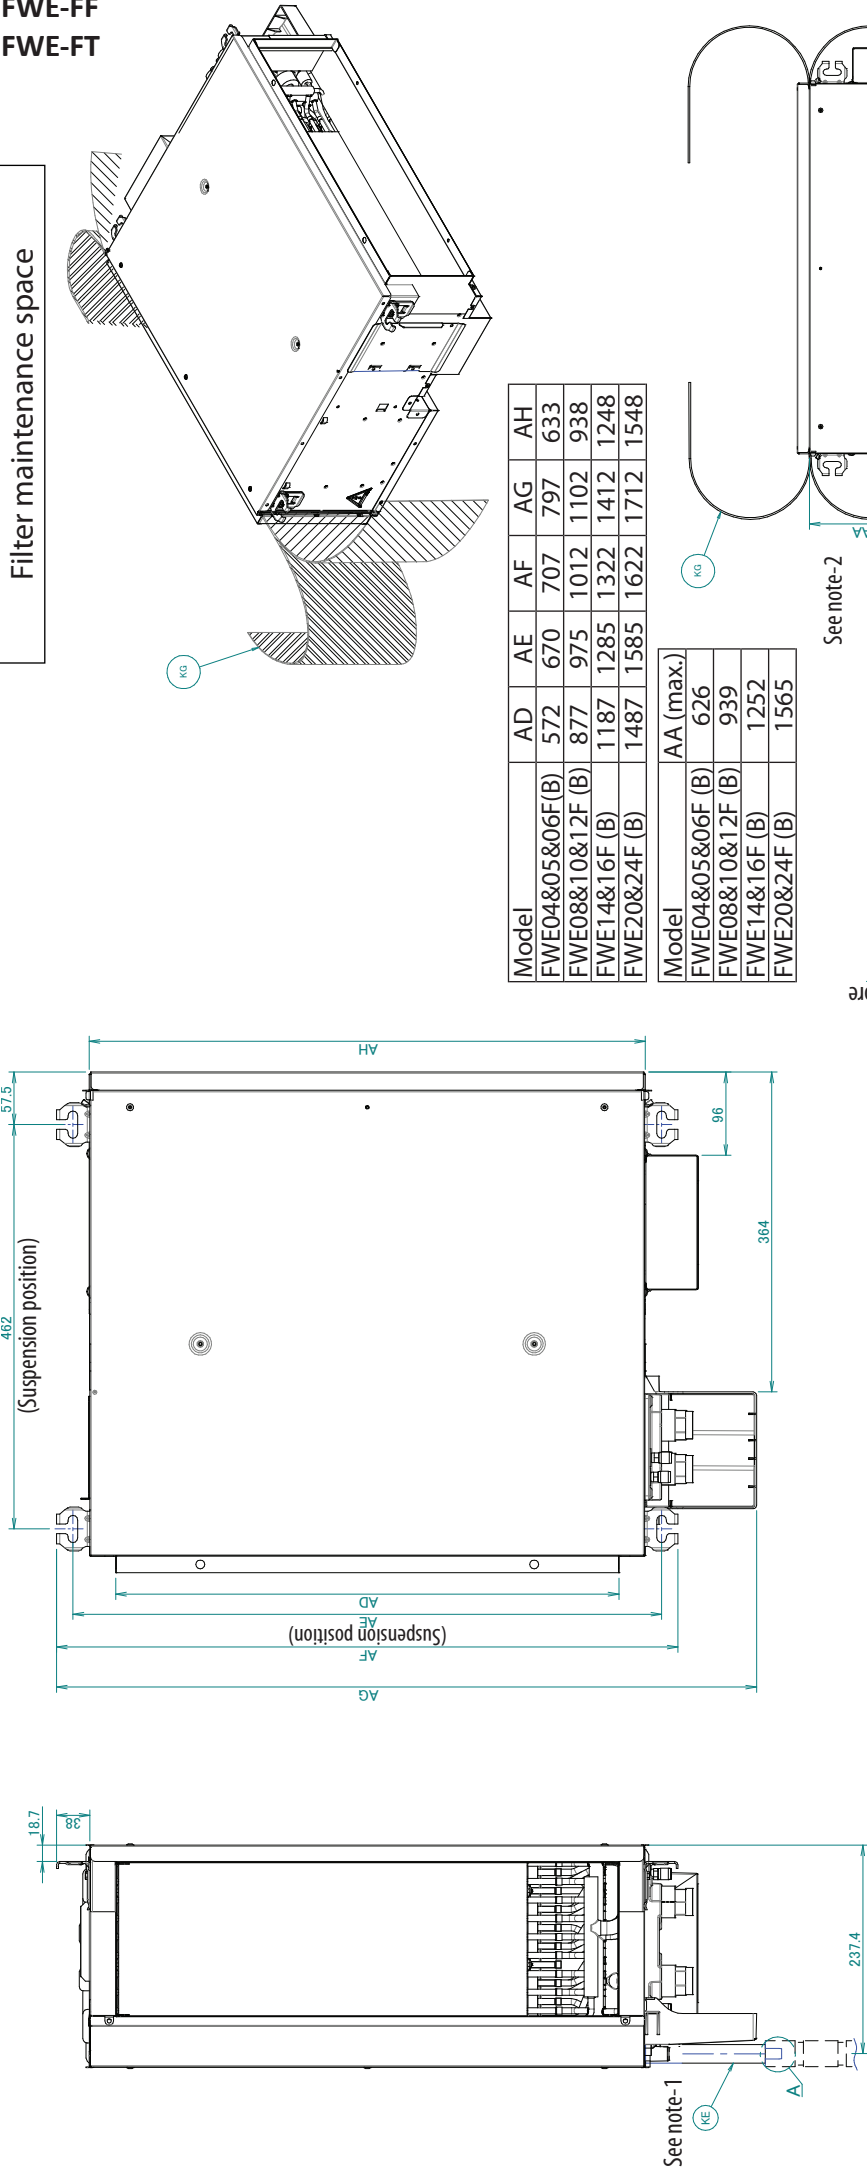
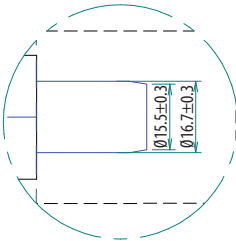


Filter maintenance space

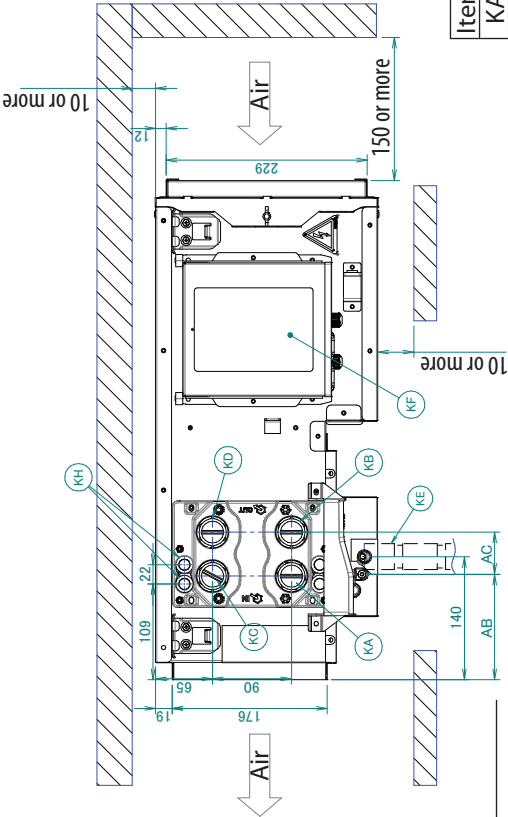

Model	AD	AE	AF	AG	AH
FWE04&05&06F (B)	572	670	707	797	633
FWE08&10&12F (B)	877	975	1012	1102	938
FWE14&16F (B)	1187	1285	1322	1412	1248
FWE20&24F (B)	1487	1585	1622	1712	1548

Model	AA (max.)
FWE04&05&06F (B)	626
FWE08&10&12F (B)	939
FWE14&16F (B)	1252
FWE20&24F (B)	1565

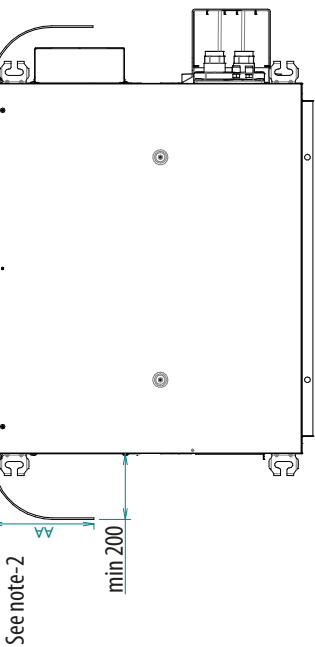

Detail A
Drain hose

Item	Name	Description	Remark
KA	Water pipe connection cooling in	3/4" BSP female	For FWE-FAT : water in
KB	Water pipe connection cooling out	3/4" BSP female	For FWE-FAT : water out
KC	Water pipe connection heating in	3/4" BSP female	
KD	Water pipe connection heating out	3/4" BSP female	
KE	Drain hose	O.D. Ø16.7	
KF	Power supply connection		
KG	Air filter		
KH	Air purge		

- NOTES**
- Drain hose (KE) is flexible.
 - Air filter nets should not be contacted to the hangers.

Model	AB	AC
FWE04&05&06&08&10&12F	118	50
FWE14&16&20&24F	121	44