EHYHBH(X)-AV3

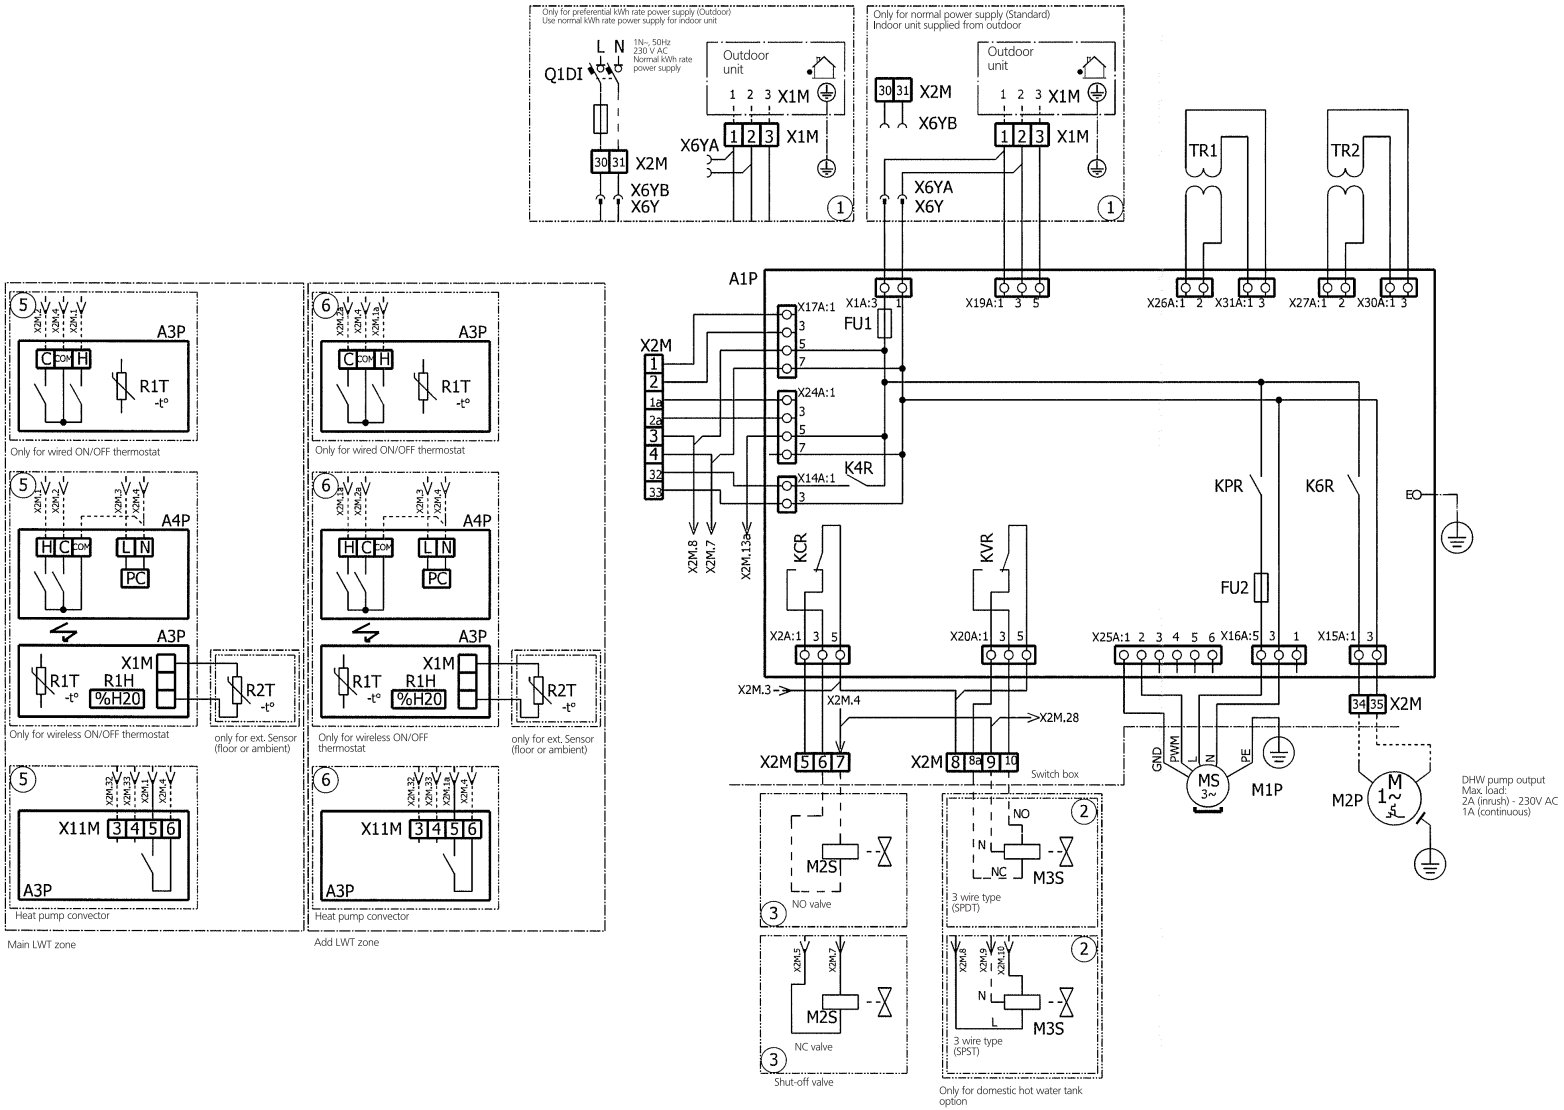
Only for preferential kWh rate power supply (Outdoor)
Use normal kWh rate power supply for indoor unit
Q1DI
L N
1N~, 50Hz
230 V AC
Normal kWh rate power supply
Outdoor unit
X1M
X2M
X6YA
X6YB
X6Y
Only for normal power supply (Standard)
Indoor unit supplied from outdoor
TR1
TR2
A1P
FU1
FU2
K4R
KCR
KVR
KPR
K6R
Only for wired ON/OFF thermostat
A3P
A4P
R1T
R2T
R1H
%H20
PC
only for ext. Sensor (floor or ambient)
Only for wireless ON/OFF thermostat
X11M
Heat pump convector
Main LWT zone
Add LWT zone
Switch box
M1P
M2P
DHW pump output
Max. load:
2A (inrush) - 230V AC
1A (continuous)
M2S
NO valve
NC valve
Shut-off valve
M3S
3 wire type (SPDT)
3 wire type (SPST)
Only for domestic hot water tank option