


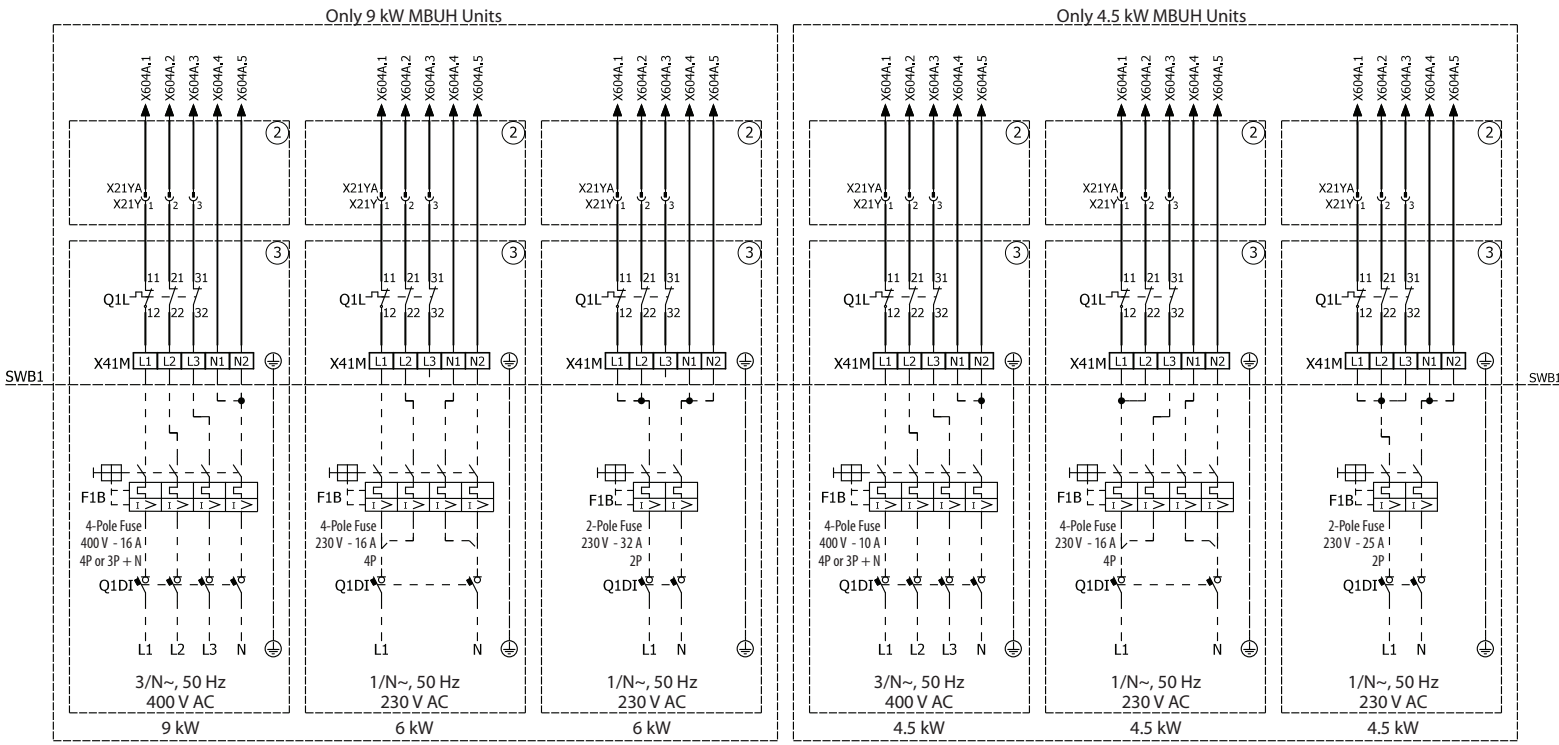

X004A.1

X004A.2

X004A.3

X004A.4

X004A.5

②

X21YA

X21Y

1

2

3

Q1L

11

21

31

12

22

32

③

X41M

L1

L2

L3

N1

N2

SWB1

F1B

1

2

3

4

4-Pole Fuse
230 V - 16 A
4P

Q1DI

1

2

3

4

L1

N

1/N~, 50 Hz
230 V AC

6 kW

X004A.1

X004A.2

X004A.3

X004A.4

X004A.5

②

X21YA

X21Y

1

2

3

Q1L

11

21

31

12

22

32

③

X41M

L1

L2

L3

N1

N2

SWB1

F1B

1

2

3

4

2-Pole Fuse
230 V - 32 A
2P

Q1DI

1

2

3

4

L1

N

1/N~, 50 Hz
230 V AC

6 kW

Only 4.5 kW MBUH Units

X004A.1

X004A.2

X004A.3

X004A.4

X004A.5

②

X21YA

X21Y

1

2

3

Q1L

11

21

31

12

22

32

③

X41M

L1

L2

L3

N1

N2

SWB1

F1B

1

2

3

4

4-Pole Fuse
400 V - 10 A
4P or 3P + N

Q1DI

1

2

3

4

L1

L2

L3

N

3/N~, 50 Hz
400 V AC

4.5 kW

X004A.1

X004A.2

X004A.3

X004A.4

X004A.5

②

X21YA

X21Y

1

2

3

Q1L

11

21

31

12

22

32

③

X41M

L1

L2

L3

N1

N2

SWB1

F1B

1

2

3

4

4-Pole Fuse
230 V - 16 A
4P

Q1DI

1

2

3

4

L1

N

1/N~, 50 Hz
230 V AC

4.5 kW

X004A.1

X004A.2

X004A.3

X004A.4

X004A.5

②

X21YA

X21Y

1

2

3

Q1L

11

21

31

12

22

32

③

X41M

L1

L2

L3

N1

N2

SWB1

F1B

1

2

3

4

2-Pole Fuse
230 V - 25 A
2P

Q1DI

1

2

3

4

L1

N

1/N~, 50 Hz
230 V AC

4.5 kW