
**(b) Obstacle above, too**

1 Stand-alone installation.

The relations between H, A and L are as follows.

| | L | A |
|---|---|---|
| L ≤ H | 0 < L ≤ 1/2 H | 750 |
| | 1/2 H < L ≤ H | 1000 |
| H < L | Set the stand as : L <= H | |

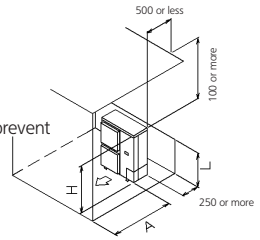



Close the bottom of the installation frame to prevent the discharged air from being bypassed.

2 Series installation (2 or more).

The relations between H, A and L are as follows.

| | L | A |
|---|---|---|
| L ≤ H | 0 < L ≤ 1/2 H | 1000 |
| | 1/2 H < L ≤ H | 1250 |
| H < L | Set the stand as : L <= H | |

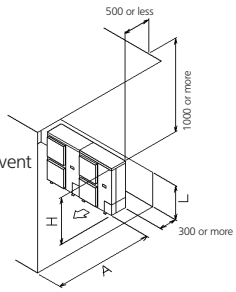


Close the bottom of the installation frame to prevent the discharged air from being bypassed.

Only two units can be installed for this series.


Pattern 2

Where the obstacle on the discharge side is lower than the unit.
(There is no height limit for obstructions on the intake side.)

**(a) No obstacle above.**

1 Stand-alone installation.


L ≤ H

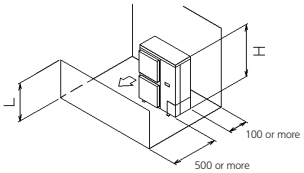


2 Series installation (2 or more).

The relations between H, A and L are as follows.

| L | A |
|---|---|
| 0 < L ≤ 1/2 H | 250 |
| 1/2 H < L ≤ H | 300 |

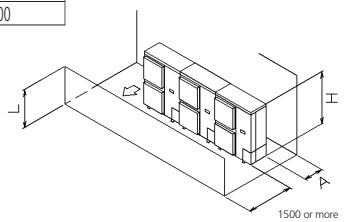



**(b) Obstacle above, too.**

1 Stand-alone installation.

The relations between H, A and L are as follows.

| | L | A |
|---|---|---|
| L ≤ H | 0 < L ≤ 1/2 H | 100 |
| | 1/2 H < L ≤ H | 200 |
| H < L | Set the stand as : L <= H | |

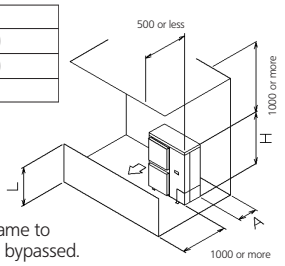



Close the bottom of the installation frame to prevent the discharged air from being bypassed.

1 Series installation.

The relations between H, A and L are as follows.

| | L | A |
|---|---|---|
| L ≤ H | 0 < L ≤ 1/2 H | 250 |
| | 1/2 H < L ≤ H | 300 |
| H < L | Set the stand as : L <= H | |

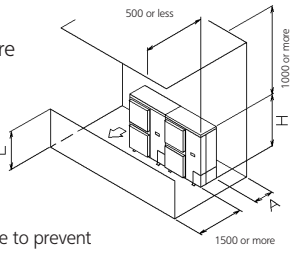



Close the bottom of the installation frame to prevent the discharged air from being bypassed.

Only two units can be installed for this series.


## 4. Double-decker installation

(a) Obstacle on the discharge side.
Close the gap A (the gap between the upper and lower outdoor units) to prevent the discharged air from being bypassed.

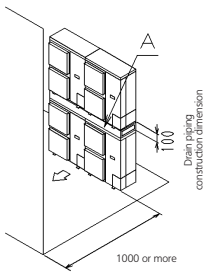


Do not stack more than two unit..


(b) Obstacle on the suction side only.
Close the gap A (the gap between the upper and lower outdoor units) to prevent the discharged air from being bypassed.

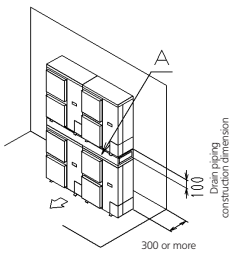



Do not stack more than one unit..

## 5. Multiple rows of series installation (on the rooftop, etc.).

(a) One row of stand-alone installation.

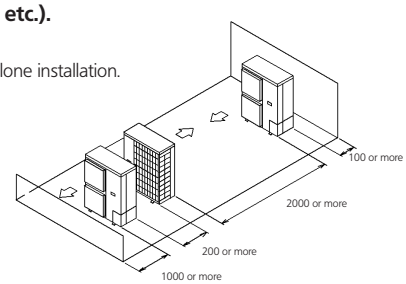


(b) Rows of series installation (2 or more).

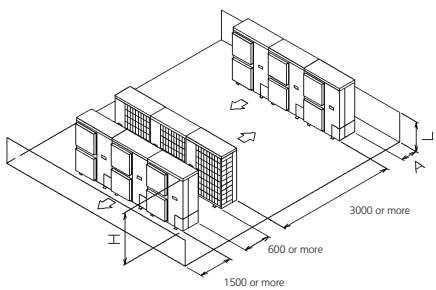


The relations between H, A and L are as follows.

| | L | A |
|---|---|---|
| L ≤ H | 0 < L ≤ 1/2 H | 250 |
| | 1/2 H < L ≤ H | 300 |
| H < L | Cannot be installed | |