


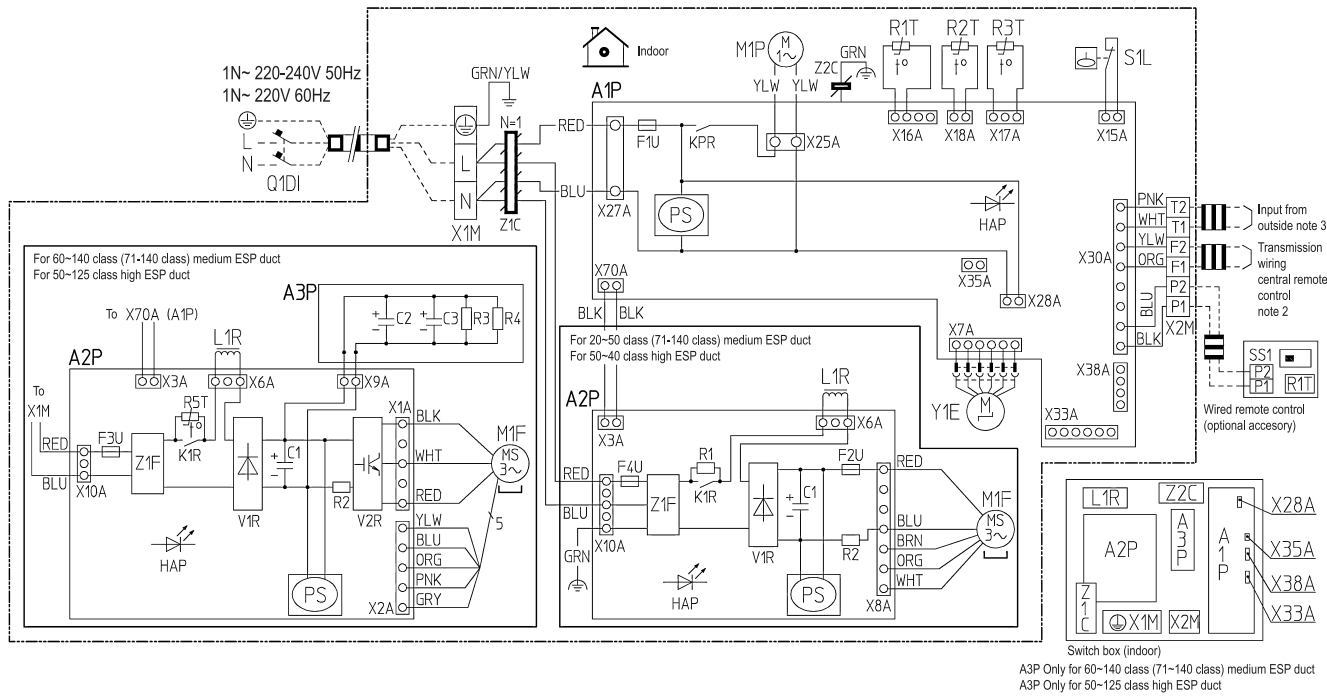

Field wiring
L : Live
N : Neutral
Connector

Wire clamp
Protective earth (screw)

Colors: BLK : black
BLU : blue
BRN : brown
GRY : grey
ORG : orange
PNK : pink
RED : red
WHT : white
YLW : yellow
GRN : green

Indoor unit			
A1P	Printed circuit board	R2T	Thermistor (Liquid)
A2P	Printed circuit board (fan)	R3T	Thermistor (Gas)
A3P	Printed circuit board (capacitor)	R5T	Thermistor NTC (Current limiting)
C1, C2, C3	Capacitor	S1L	Float switch
F1U	Fuse (T, 3.15A, 250V)	V1R	Diode bridge
F2U	Fuse (T, 5A, 250V)	V2R	Power module
F3U	Fuse (T, 6.3A, 250V)	X1M	Terminal strip (Power supply)
F4U	Fuse (T, 6.3A, 250V)	X2M	Terminal strip (Control)
HAP	Light emitting diode (service monitor-green)	Y1E	Electronic expansion valve
KRP,K1R	Magnetic relay	Z1C, Z2C	Noise filter (Ferrite core)
L1R	Reactor	Z1F	Noise filter
M1F	Motor (Fan)	Connector optional accessory	
M1P	Motor (Drain pump)	X28A	Connector (power supply for wiring)
PS	Switching power supply	X33A	Connector (For wiring)
Q1DI	Earth leak detector	X35A	Connector (Adapter)
R1	Resistor (Current limiting)	X38A	Connector (For wiring)
R2	Current sensing device	Wired remote control	
R3, R4	Resistor (Electric discharge)	R1T	Thermistor (Air)
R1T	Thermistor (Suction air)	SS1	Selector switch (Main/sub)

NOTES

- Use copper conductors only.
- When using the central remote control, see manual for connection to the unit.
- When connecting the input wires from outside, forced 'OFF' or 'ON/OFF' operation can be selected by the remote control. See installation manual for more details.