
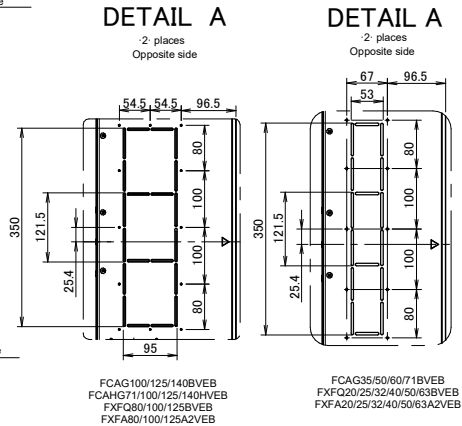
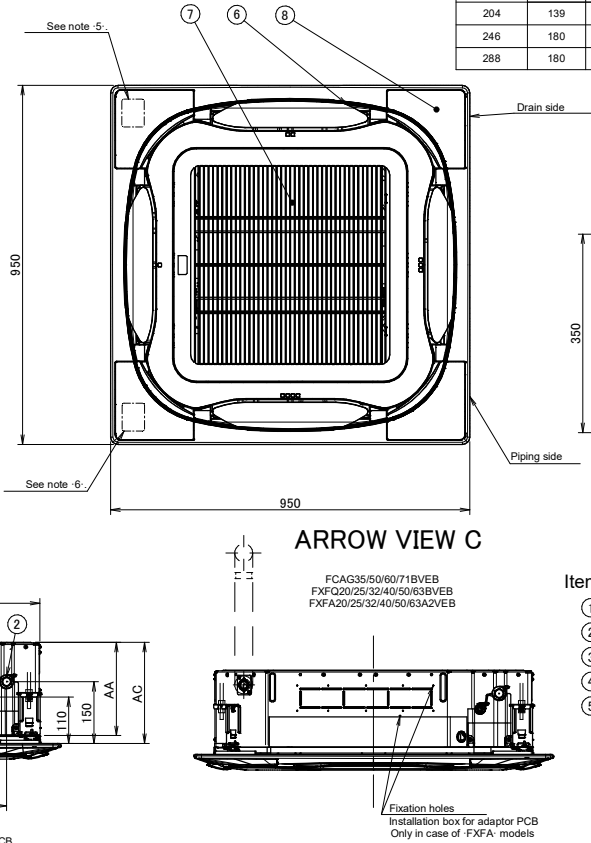
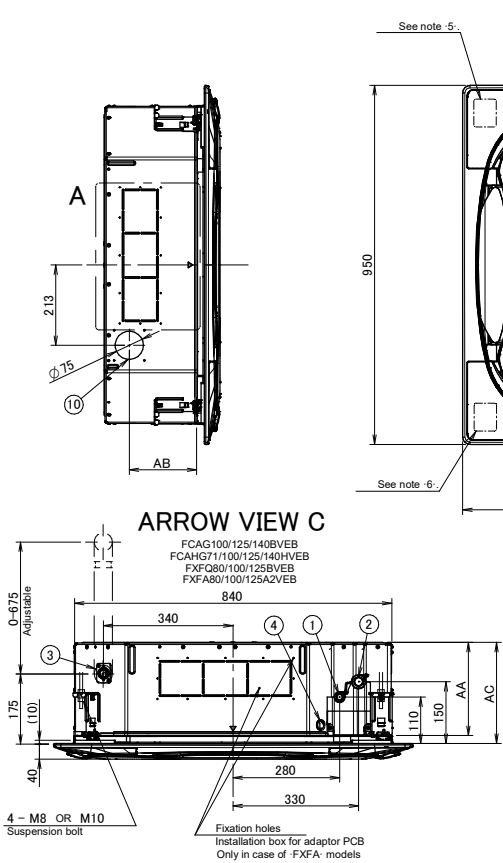


Decoration panel - Standard

Notes

1. Location of nameplate
 - The unit nameplate is located on the control box cover.
 - The decoration panel nameplate is located on the piping-side panel frame, under the corner cover.
2. When installing optional accessories, refer to their respective documentation.
3. Make sure the distance between the ceiling and the cassette does not exceed 35 mm.
The maximum ceiling opening is 910 mm.
4. When the conditions in the ceiling exceed 30°C ambient temperature and 80% relative humidity, or when fresh air is inducted into the ceiling, additional insulation is required (polyethylene foam, thickness ≥ 10 mm).
5. When installing a sensor kit, there will be a sensor on this location. For details, see the drawing of the sensor kit.
6. When installing a wireless controller, there will be a receiver on this location. For details, see the drawing of the wireless controller.

Cassette height		Minimal installation height	Required installation space	
AA	AB	AC	AD	Model
204	139	227	2700	FCAG35/50/60/718VBE
246	180	269	2700	FCAG100/125/140BVE
288	180	311	2700	FCAHG71/100/125/140HVE
204	139	227	2700	FXFQ20/25/32/40/50/63BVE
246	180	269	2700	FXFQ80/100BVE
288	180	311	2700	FXFQ125BVE
204	139	227	2500	FXFA20/25/32/40/50/63A2VE
246	180	269	2500	FXFA80/100A2VE
288	180	311	2500	FXFA125A2VE

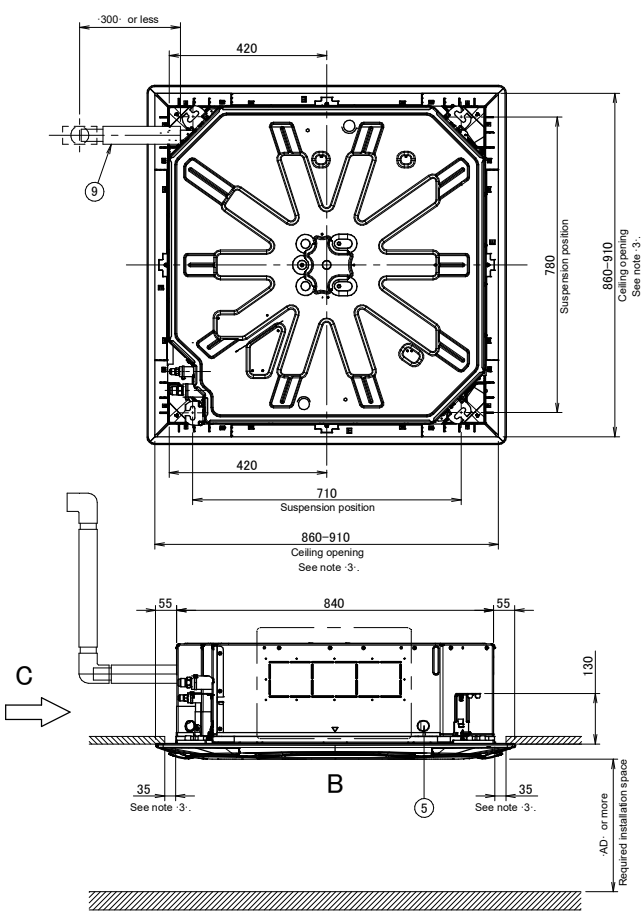

Item	Name
①	Liquid pipe connection port
②	Gas pipe connection port
③	Drain pipe connection
④	Power supply wiring intake
⑤	Transmission wiring intake hole
⑥	Air discharge outlet
⑦	Air suction grille
⑧	Corner decoration cover
⑨	Drain hose
⑩	Knockout hole.

