

FXFN - B SELF CLEANING PANEL


Notes


1. Location of nameplate
   The unit nameplate is located on the control box cover.
   The decoration panel nameplate is located on the piping-side panel frame, under the corner cover.
2. When installing optional accessories, refer to their respective documentation.
3. Make sure the distance between the ceiling and the cassette does not exceed ·35·mm.
   The maximum ceiling opening is ·910·mm.
4. When the conditions in the ceiling exceed 30°C ambient temperature and 80% relative humidity, or when fresh air is inducted into the ceiling, additional insulation is required (polyethylene foam, thickness ≥·10·mm).
5. When installing a sensor kit, there will be a sensor on this location. For details, see the drawing of the sensor kit.

Cassette height		Minimal installation height	
AA	AB	AC	Model
246	180	349	FXFN40/50/63B2VEB
288	180	391	FXFN80B2VEB

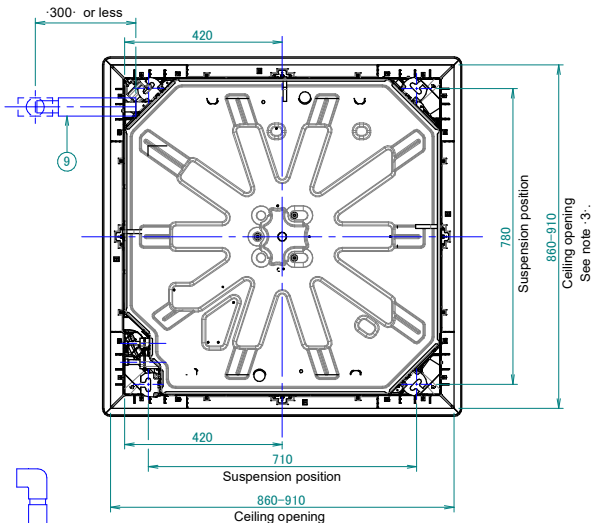


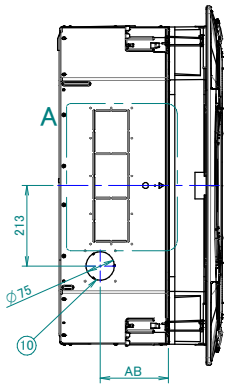


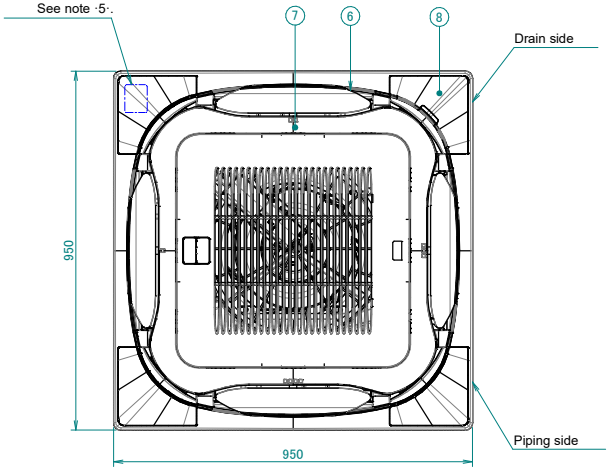


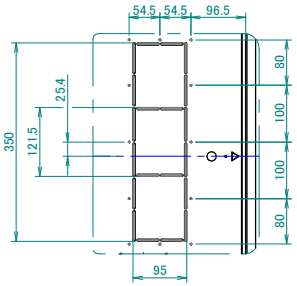



FXFN40/50/63B2VEB
FXFN80B2VEB

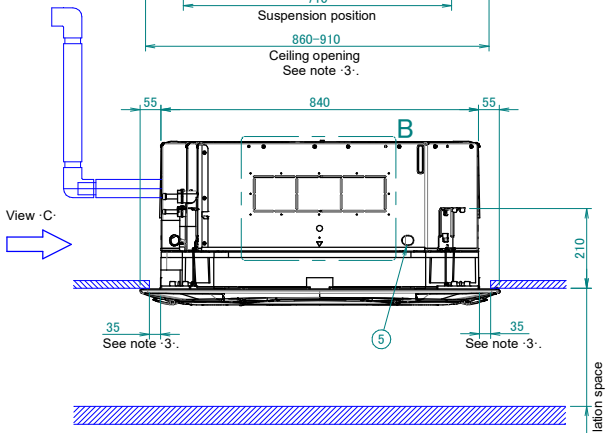

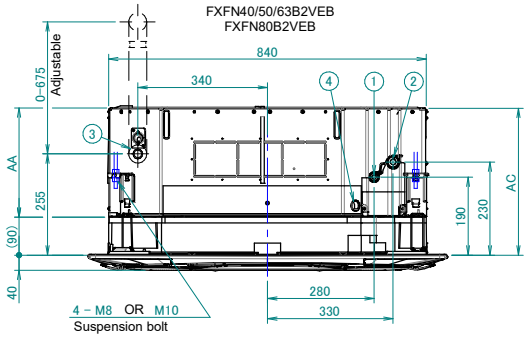


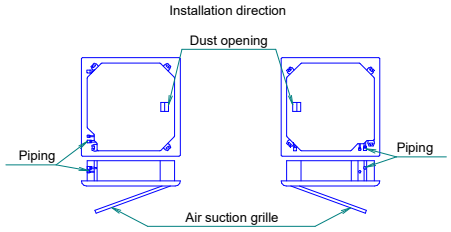

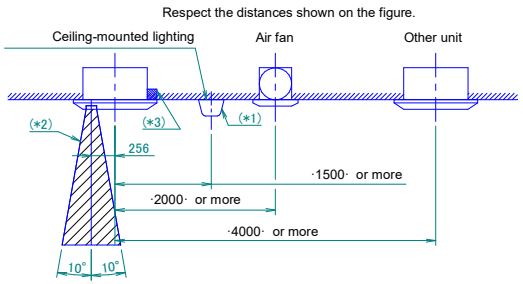

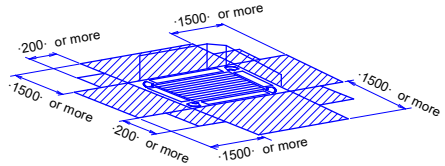

Required installation space
If a discharge outlet is closed up with the "sealing member" option kit, then the required installation space on that (closed up) side is ·500·mm instead of ·1500·mm.

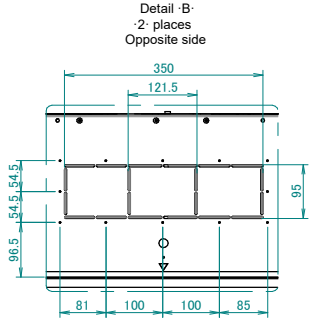

FXFN40/50/63B2VEB
FXFN80B2VEB

(*1) Not applicable to recessed lighting.
(*2) Required space for entering with vacuum cleaner tube.
(*3) Make sure the decoration panel discharge outlet is not blocked.

Item	Name	Item	Name
1	Liquid pipe connection port	6	Air discharge outlet
2	Gas pipe connection port	7	Air suction grille
3	Drain pipe connection	8	Corner decoration cover
4	Power supply wiring intake	9	Drain hose
5	Transmission wiring intake hole	10	Knockout hole.

2D156545