



Indoor unit	
A1P	Printed circuit board
A2P	Printed circuit board
C21	Capacitor
C105	Capacitor
F1U	Fuse (T3.15A, 250V)
F2U	Field fuse
H4P	Light emitting diode (service monitor green)
M1F	Motor (indoor fan)
M1P	Motor (drain pump)
M1S-M4S	Motor (swing flap)
Q1D1	Earth leak detector
R1T	Thermistor (air)
R2T-R3T	Thermistor (coil)
S1L	Float switch
V1R	Diode bridge
X1M	Terminal block
X2M	Terminal block
Y1E	Electronic expansion valve
Z1C	Ferrite core (Noise filter)
Z1F	Noise filter
Wired remote controller	
R1T	Thermistor (air)
Receiver/display unit	
(Attached to infrared remote controller)	
A3P	Printed circuit board
A4P	Printed circuit board
BS1	Push button (on/off)
H1P	Light emitting diode (on-red)
H2P	Light emitting diode (timer-green)
H3P	Light emitting diode (filter sign-red)
H4P	Light emitting diode (defrost-orange)
SS1	Selector switch (main/sub)
SS2	Selector switch (infrared address set)
Connector for optional parts	
X2A	Connector (sensor kit)
X8A	Connector (Auto clean panel)
X24A	Connector (Infrared remote controller)
X33A	Connector (adaptor for wiring)
X35A	Connector (group control adapter)
X36A	Connector (Auto clean panel)
X38A	Connector (Multi tenant)

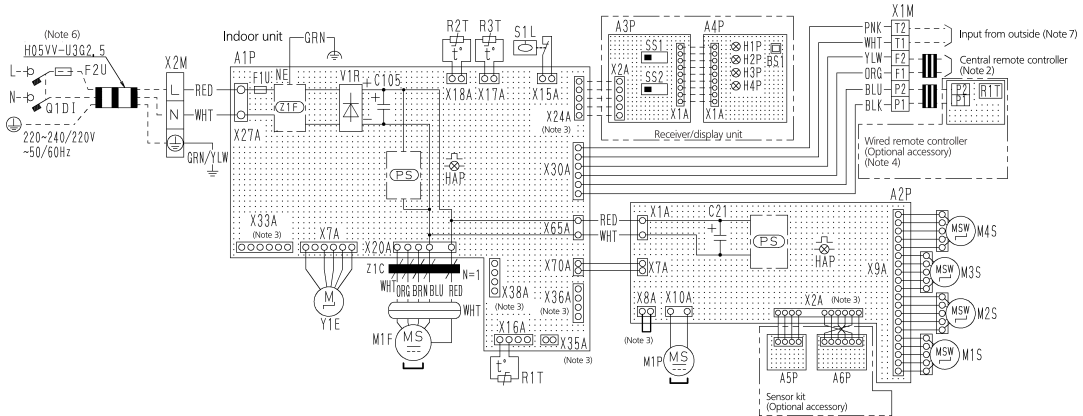

Control box

Notes

- : Terminal block, □□□□: Connector, □□□□: Field wiring
- In case using central remote controller, connect it to the unit in accordance with the attached installation manual.
- X2A, X8A, X33A, X35A, X36A, X38A are connected when the optional accessories are being used. In case of using an auto clean panel, see the wiring diagram of it.
- In case of main/sub overcharge, see the installation manual attached to remote controller.
- Symbols show as follows: RED:Red BLK:Black WHT:White YLW:Yellow GRN:Green ORG:Orange BRN:Brown PNK:Pink BLU:Blue
- Shows only in case of protected pipes, use HO7RN-F in case of no protection.
- When connecting the input wires from outside, forced OFF or ON/OFF control operation can be selected by the remote controller. See installation manual for more details.