# RXYSQ8TY1


#### (b) Obstacle above, too

(1) Stand-alone installation

The relations between H, A and L are as follows:

	L	А		
L≤H	0 < L ≤ 1/2H	1000		
	1/2H < L ≤ H	1250		
H < L	Set the stand as: L ≤ H.			

Close the bottom of the installation frame to prevent the discharged air from being bypassed.

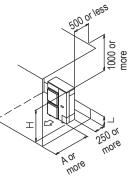


(2) Series installation (2 or more) (note)

The relations between H, A and L are as follows:

	L	А
L≤H	0 < L ≤ 1/2H	1000
	1/2H < L ≤ H	1250
H < L	Set the stand as: L ≤ H.	

Close the bottom of the installation frame to prevent the discharged air from being bypassed.

Only two units can be installed for this series.

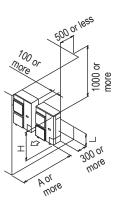


### Pattern 2

Where the obstacles on the discharge side is lower than the unit: (There is no height limit for obstructions on the intake side.)

(c) No obstacle above


(1) Stand-alone installation

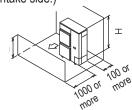

L≤H

(2) Series installation (2 or more) (note) The relations between H, A and L are as follows.

L	A
0 < L ≤ 1/2H	250
1/2H < L ≤ H	300

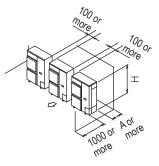

### (d) Obstacle above, too


# (1) Stand-alone installation

The relations between H, A and L are as follows.

	L	А
L≤H	0 < L ≤ 1/2H	100
	1/2H < L ≤ H	200
H < L	Set the stand as: L ≤ H.	


Close the bottom of the installation frame to prevent the discharged air from being bypassed.

If the distance exceed the figure in the ( ), then it's no need to set the stand.

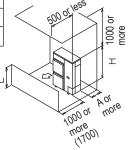

(2) Series installation (note)

The relations between H, A and L are as follows.

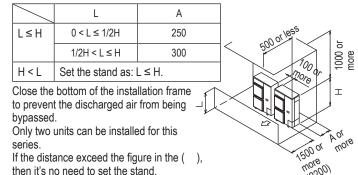


#### 4. Double-decker installation

# (a) Obstacle on the discharge side (note)

Close the gap A (the gap between the upper and lower outdoor units) to prevent the discharged air from being bypassed. Do not stack more than two unit.

Set the board (field supply) as the detail A between two units to prevent the drainage from frozing.


Leave the enough space between the layer one and the board.

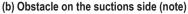

Close the gap A (the gap between the upper and lower outdoor units) to prevent the discharged air from being bypassed. Do not stack more than two unit. Set the board (field supply) as the detail A


Set the board (field supply) as the detail A between two units to prevent the drainage from frozing.

Leave the enough space between the layer one and the board.

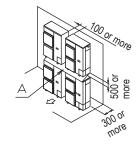

100 or

5. Multiple rows of series installation (on the rooftop, etc.)

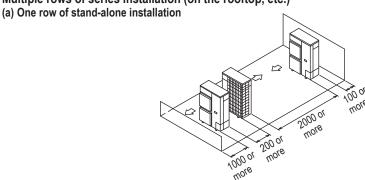

## (b) Rows of series installation (2 or more)

The relations between H, A and L are as follows.

THE TOTAL	ons between 11,710	ila Laic as ioliows	'•
	L	Α	
L≤H	0 < L ≤ 1/2H	250	
	1/2H < L ≤ H	300	100 or
H < L	Cannot be installed		/ / 6
Ų	100 or 10	0 <sub>T</sub>	A of more ago of more more more more

OUTDOOR UNIT FOR VRV SYSTEM

#### NOTES