

DAIKIN



INSTALLATION MANUAL

Packaged water-cooled water chillers



EWWP014KAW1N
EWWP022KAW1N
EWWP028KAW1N
EWWP035KAW1N
EWWP045KAW1N
EWWP055KAW1N
EWWP065KAW1N

CE - DECLARATION-OF-COMFORMITY
CE - KONFORMITÄTSERKLÄRUNG
CE - DECLARATION-DE-CONFORMITE
CE - CONFORMITEITS/VERKLARING

Daikin Europe N.V.

01 declares under its sole responsibility that the air conditioning models to which this declar ation relates:
02 erklärt auf seine alleinige Verantwortung daß die Modelle der Klimaanlage für de diese Erklärung bestimmt ist:
03 déclare sous sa seule responsabilité que les appareils (air conditionné visés par la présente déclaration)
04 verklaart hierbij op eigen exclusieve verantwoordelijkheid dat de airconditioning units waarop deze verklaring betrekking heeft:
05 declara bajo su única responsabilidad que los modelos de aire acondicionado a los cuales hace referencia la declaración:
06 dichiara sotto sua responsabilità che i condizionatori modello a cui è riferita questa dichiarazione:
07 δηλώνει με αποκλειστική της ευθύνη ότι τα προϊόντα των κλιματιστικών συσκευών στο οποίο αναφέρεται η παρούσα δήλωση:
08 declara sob sua exclusiva responsabilidade que os modelos de ar condicionado a que esta declaração se refere:
09 заявляет исключительно под свое ответственность, что модели кондиционеров воздуха, к которым относится настоящая декларация:

EWWP014KAW1N*, EWWP022KAW1N***, EWWP028KAW1N***, EWWP035KAW1N***, EWWP045KAW1N***, EWWP055KAW1N***, EWWP065KAW1N***,**
* = *, 0, 1, 2, 3, ..., 9, A, B, C, ...; Z

01 are in conformity with the following standard(s) or other normative document(s), provided that these are used in accordance with our instructions:
02 der/den folgenden Norm(en) oder einen anderen Normdokument oder -dokumenten entsprechen/entsprechen, unter der Voraussetzung, daß sie gemäß unseren Anweisungen eingesetzt werden:
03 sont conformes à la/aux norme(s) ou autre(s) document(s) normatif(s), pour autant qu'ils soient utilisés conformément à nos instructions:
04 conform de volgende norm(en) of ten of their andere andere documenten/zijn, op voorwaarde dat ze worden gebruikt overeenkomstig onze instructies:
05 están en conformidad con la/s siguiente(s) norma(s) u otro(s) documento(s) normativo(s), siempre que sean utilizados de acuerdo con nuestras instrucciones:
06 sono conformi all(i) seguente(i) standard(i) o altro(i) documento(i)) a carattere normativo, a patto che vengano usati in conformità alle nostre istruzioni:
07 είναι σύμφωνα με το(ι) ακόλουθ(ο) πρότυπο(ι) ή άλλ(ο) έγγραφο(ι) κανονισμών, υπό την προϋπόθεση ότι χρησιμοποιούνται σύμφωνα με τις οδηγίες μας:
10 under/parhageelse af bestemmelserne i:
11 enligt villkoren i:
12 gilt i/henhold til bestemmelserne i:
13 noudatiiden määräyksiä:
14 za dodržení ustanovení předpisů:
15 prema odredbama:
16 káveleli ai/zij:
17 zgodnie z postanowieniami Dyrektyw:
18 in urma prevederilor:

01 Note * as set out in the Technical Construction File DAIKIN.TCF.012 and judged positively by KEIMA according to the Certificate 63329-KRO.ECIN96-5256.
02 Hinweis * wie in der Technischen Konstruktionsakte DAIKIN.TCF.012 aufgeführt und von KEIMA positiv ausgeschrieben gemäß Zertifikat 63329-KRO.ECIN96-5256.
03 Remarque * tel que stipulé dans le Fichier de Construction Technique DAIKIN.TCF.012 et jugé positivement par KEIMA conformément au Certificat 63329-KRO.ECIN96-5256.
04 Bemerk * zoals vermeld in het Technisch Constructiebesluit DAIKIN.TCF.012 en in orde beaonden door KEIMA overeenkomstig Certificaat 63329-KRO.ECIN96-5256.
05 Nota * tal como se expone en el Archivo de Construcción Técnica DAIKIN.TCF.012 y juzgado positivamente por KEIMA según el Certificado 63329-KRO.ECIN96-5256.
06 Nota * delineato nel File Tecnico di Cstruzione DAIKIN.TCF.012 e giudicato positivamente da KEIMA secondo il Certificato 63329-KRO.ECIN96-5256.
07 Způsobení * dlešpec prodávajícího stroje Agryko Teywerk, Kategorizace DAIKIN.TCF.012 kon konkrétní technické specifikaci je to provedeno podle 63329-KRO.ECIN96-5256.
08 Nota * tal como establecido no Ficheiro Técnico de Construção DAIKIN.TCF.012 e como o parecer positivo de KEIMA de acordo com o Certificado 63329-KRO.ECIN96-5256.
09 Применение * как указано в Досье технического описания DAIKIN.TCF.012 и в соответствии с положительным решением KEIMA согласно Сертификату 63329-KRO.ECIN96-5256.

CE - DECLARAÇÃO-DE-CONFORMIDADE
CE - ЗАРБИЈЕЊЕ-О-ОПОТБЕЏИВАЊЕ
CE - ОПЕЈДЕЛСЕ/ЕРКЛЕРИНГ
CE - FÖRSÄKRAN-OM-ÖVERENSÄMMELSE

10 erklärt unter eigenem Verantwortung, daß Klimatisierungsmodelle, von denen die Deklaration veröffentlicht wird:
11 déclare sous sa seule responsabilité que les appareils (air conditionné visés par la présente déclaration) innébaat att:
12 erklärt et füllen/die Angabe für die Luftkonditionierungsmodelle, von denen die Deklaration innébaat att:
13 ilmoittaa yksinomaan omalla vastuullaan, että tämän ilmoituksen tarkoituksena on ilmoittaa ilmastointilaitteiden mallit:
14 prohlásuje v své plné odpovědnosti, že modely klimatizace, k nimž se toto prohlášení vztahuje:
15 izjavlja pod sklopno vlastno odgovornost, da su modeli klima uređaja na koje se ova izjava odnosi:
16 teljes felelőssége leidaálán kijelenti, hogy a klimatizációs modellek, melyekre e nyilatkozat vonatkozik:
17 deklarije na własną odpowiedzialność, że modele klimatyzatorów, których dotyczy niniejsza deklaracja:
18 declara pe proprie răspundere că aparatele de aer condiționat la care se referă această declarație:

08 estão em conformidade com a(s) seguinte(s) norma(s) ou outro(s) documento(s) normativo(s), desde que estes sejam utilizados de acordo com as nossas instruções:
09 соответствуют следующим стандартам или другим нормативным документам, при условии их использования согласно нашим инструкциям:
10 overholder følgende standard(er) eller andre andre retningsgivende dokument(er), forudsat at disse anvendes i henhold til vore instruks.
11 respektive utrustning är utförd i överensstämmelse med och följer följande standard(er) eller andra normgivande dokument, under förutsättning att användning sker i överensstämmelse med våra instruktioner:
12 respektive usŭr er i overensstemmelse med følgende standard(er) eller andre normgivende dokument(er), under forudsætning at disse bruges i henhold til vore instrukser:
13 nastavaat saravaten standarden ja muiden ohjeellisten dokumenttien vaatimuksia edellyttäen, että niitä käytetään ohjeidemme mukaisesti:
14 za predpokrta, že jsou vzhvžny v souladu s našimi pokyny, odpovídají následujícím normám nebo normativním dokumentům:
15 u skladu sa sledjećim standardom(na) ili drugim normativnim dokumentom(na), uz ujet da se oni koriste u skladu s našim uputama:

CE - IZJAVA-O-USKLABENOSTI
CE - MEGFELELŐSÉG-NYILATKOZAT
CE - DEKLARACJA-ZGODNOSCI
CE - DECLARAȚIE-DE-CONFORMITATE

19 opomita * kolje doobeno v tehnični mapi DAIKIN.TCF.012 in odobreno s strani KEIMA v skladu s certifikatom 63329-KRO.ECIN96-5256.
20 Hinweis * rege on näitajad tehnilises dokumentatsioonis DAIKIN.TCF.012 ja heals löidud KEIMA järgi vastavalt sertifikaadile 63329-KRO.ECIN96-5256.
21 Zabeleška * rege on näitajad tehnilises dokumentatsioonis DAIKIN.TCF.012 in odobreno s strani KEIMA v skladu s certifikatom 63329-KRO.ECIN96-5256.
22 Pastaba * kaip rokiama techniniame konstrukcijos dokumente DAIKIN.TCF.012 ir patvirtinta KEIMA pagal pažymėjimą 63329-KRO.ECIN96-5256.
23 Poznámka * ka norekts tehniski dokumentācija DAIKIN.TCF.012, atbilstošā KEIMA pozitīvajam lēmumam ko apliecina sertifikāta 63329-KRO.ECIN96-5256.
24 Poznámka * ako je izloženo u Doseji o tehničkoj konstrukciji DAIKIN.TCF.012, pozitivno ocijeneno od strane KEIMA prema Certificatu 63329-KRO.ECIN96-5256.
25 Not * daikin prodávajícího stroje Agryko Teywerk, Kategorizace DAIKIN.TCF.012 kon konkrétní technické specifikaci je to provedeno podle 63329-KRO.ECIN96-5256.

16 megfelelnek az alábbi szabvány(ok)nak vagy egyéb irányadó dokumentum(ok)nak, ha azokat előírás szerint használják:
17 megfelelnek a következő követelményeknek, ha azok megfelelnek a következő követelményeknek, ha azok megfelelnek a következő követelményeknek:
18 sunt în conformitate cu următoarele (normative) standarde (sau altele documente) normative, cu condiția ca acestea să fie utilizate în conformitate cu instrucțiunile noastre:
19 skladni u naslednjih standardi in drugimi normativi, pod pogojem, da se uporabljajo v skladu z našimi navodili:
20 vastavaus järgmisele standard(ite)le või teiste normatiivse dokumente, aga see kasutatakse vastavalt meie juhendile:
21 соответствует на следующие стандарты или другие нормативные документы, при условии, что используются на основе инструкций:
22 allinka zemiaa nurtoyitus standardus si (arba) kitus normatus dokumentus si sallyga, kad yra naudojami pagal mūsų nuroojimus:
23 tad, ja izoti atbilstošā ražošāja norādījumam, abtās sekojiesim standartiem un citiem normatīviem dokumentiem:
24 su v zbrode s nasledovnyimi normami) alebo jinými (normativnými) dokumentami(ami), za predpokladu, že sa používajú v súlade s našimi návodmi:
25 őrün, lalimatlarm az gűllanimasi kűszűlyva asűjűdaki standardiar ve nom belifen bejeltele yumulud:

CE - IZJAVA O SKLADNOSTI
CE - VASTAVUSDEKLARACIJA
CE - ATBILSTIBAS-DEKLARACIJA
CE - VYHLÁSENIE-ZHODY
CE - UYUMLUK-BİLDİRİSİ

19 opomita * kolje doobeno v tehnični mapi DAIKIN.TCF.012 in odobreno s strani KEIMA v skladu s certifikatom 63329-KRO.ECIN96-5256.
20 Hinweis * rege on näitajad tehnilises dokumentatsioonis DAIKIN.TCF.012 ja heals löidud KEIMA järgi vastavalt sertifikaadile 63329-KRO.ECIN96-5256.
21 Zabeleška * rege on näitajad tehnilises dokumentatsioonis DAIKIN.TCF.012 in odobreno s strani KEIMA v skladu s certifikatom 63329-KRO.ECIN96-5256.
22 Pastaba * kaip rokiama techniniame konstrukcijos dokumente DAIKIN.TCF.012 ir patvirtinta KEIMA pagal pažymėjimą 63329-KRO.ECIN96-5256.
23 Poznámka * ka norekts tehniski dokumentācija DAIKIN.TCF.012, atbilstošā KEIMA pozitīvajam lēmumam ko apliecina sertifikāta 63329-KRO.ECIN96-5256.
24 Poznámka * ako je izloženo u Doseji o tehničkoj konstrukciji DAIKIN.TCF.012, pozitivno ocijeneno od strane KEIMA prema Certificatu 63329-KRO.ECIN96-5256.
25 Not * daikin prodávajícího stroje Agryko Teywerk, Kategorizace DAIKIN.TCF.012 kon konkrétní technické specifikaci je to provedeno podle 63329-KRO.ECIN96-5256.

10 Direkthier, med senere ændringer.
11 Direktör, med föregång ändringar.
12 Direktör, med brötaite ändringar.
13 Direktörje, teljes keirendes.irendes.
14 v platnem zneni.
15 Smernica, kelo je izmijeneno.
16 irányelje(ek) is módosítások rendelkezésel.
17 z poboljšejmyh popravkami.
18 Direktör, cu amenändările respective.

01 Note * as set out in the Technical Construction File DAIKIN.TCF.012 and judged positively by KEIMA according to the Certificate 63329-KRO.ECIN96-5256.
02 Hinweis * wie in der Technischen Konstruktionsakte DAIKIN.TCF.012 aufgeführt und von KEIMA positiv ausgeschrieben gemäß Zertifikat 63329-KRO.ECIN96-5256.
03 Remarque * tel que stipulé dans le Fichier de Construction Technique DAIKIN.TCF.012 et jugé positivement par KEIMA conformément au Certificat 63329-KRO.ECIN96-5256.
04 Bemerk * zoals vermeld in het Technisch Constructiebesluit DAIKIN.TCF.012 en in orde beaonden door KEIMA overeenkomstig Certificaat 63329-KRO.ECIN96-5256.
05 Nota * tal como se expone en el Archivo de Construcción Técnica DAIKIN.TCF.012 y juzgado positivamente por KEIMA según el Certificado 63329-KRO.ECIN96-5256.
06 Nota * delineato nel File Tecnico di Cstruzione DAIKIN.TCF.012 e giudicato positivamente da KEIMA secondo il Certificato 63329-KRO.ECIN96-5256.
07 Způsobení * dlešpec prodávajícího stroje Agryko Teywerk, Kategorizace DAIKIN.TCF.012 kon konkrétní technické specifikaci je to provedeno podle 63329-KRO.ECIN96-5256.
08 Nota * tal como establecido no Ficheiro Técnico de Construção DAIKIN.TCF.012 e como o parecer positivo de KEIMA de acordo com o Certificado 63329-KRO.ECIN96-5256.
09 Применение * как указано в Досье технического описания DAIKIN.TCF.012 и в соответствии с положительным решением KEIMA согласно Сертификату 63329-KRO.ECIN96-5256.



CONTENTS

	Page
Introduction.....	1
Technical specifications	1
Electrical specifications.....	1
Options and features.....	1
Operation range.....	2
Main components	2
Selection of location	2
Inspecting and handling the unit.....	2
Unpacking and placing the unit	2
Checking the water circuit.....	2
Water quality specifications	3
Connecting the water circuit	3
Water charge, flow and quality	3
Piping insulation	3
Field wiring	4
Parts table.....	4
Power circuit and cable requirements	4
Connection of the water-cooled water chiller power supply	4
Interconnection cables	4
Before starting	4
How to continue	4

Thank you for purchasing this Daikin air conditioner.



READ THIS MANUAL ATTENTIVELY BEFORE STARTING UP THE UNIT. DO NOT THROW IT AWAY. KEEP IT IN YOUR FILES FOR FUTURE REFERENCE.

IMPROPER INSTALLATION OR ATTACHMENT OF EQUIPMENT OR ACCESSORIES COULD RESULT IN ELECTRIC SHOCK, SHORT-CIRCUIT, LEAKS, FIRE OR OTHER DAMAGE TO THE EQUIPMENT. BE SURE ONLY TO USE ACCESSORIES MADE BY DAIKIN WHICH ARE SPECIFICALLY DESIGNED FOR USE WITH THE EQUIPMENT AND HAVE THEM INSTALLED BY A PROFESSIONAL.

IF UNSURE OF INSTALLATION PROCEDURES OR USE, ALWAYS CONTACT YOUR DAIKIN DEALER FOR ADVICE AND INFORMATION.

INTRODUCTION

The Daikin EWWP-KA packaged water-cooled water chillers are designed for indoor installation and used for cooling and/or heating applications. The units are available in 7 standard sizes with nominal cooling capacities ranging from 13 to 65 kW.

The EWWP units can be combined with Daikin fan coil units or air handling units for air conditioning purposes. They can also be used for supplying chilled water for process cooling.

The present installation manual describes the procedures for unpacking, installing and connecting the EWWP units.

Technical specifications⁽¹⁾

Model EWWP	014	022	028	035
Dimensions HxWxD (mm)	600x600x600			
Machine weight (kg)	113	150	160	167
Connections				
• chilled water inlet and outlet (inch)	FBSP 1"			
• condenser water inlet and outlet (inch)	FBSP 1"			

Model EWWP	045	055	065
Dimensions HxWxD (mm)	600x600x1200		
Machine weight (kg)	300	320	334
Connections			
• chilled water inlet and outlet (inch)	FBSP 1.5"		
• condenser water inlet and outlet (inch)	FBSP 1.5"		

Electrical specifications⁽¹⁾

Model EWWP	014~065
Power circuit	
• Phase	3N~
• Frequency (Hz)	50
• Voltage (V)	400
• Voltage tolerance (%)	±10

Options and features⁽¹⁾

Options


- Glycol application for leaving evaporator water down to -10°C or -5°C
- BMS-Connection (MODBUS/J-BUS, BACNET)
- Low noise operation kit (field installation)

Features

- Voltage free contacts
 - general operation/pumpcontact
 - alarm
- Remote inputs
 - remote start/stop
 - remote change-over cooling/heating

(1) Refer to the operation manual or engineering data book for the complete list of specifications, options and features.

OPERATION RANGE

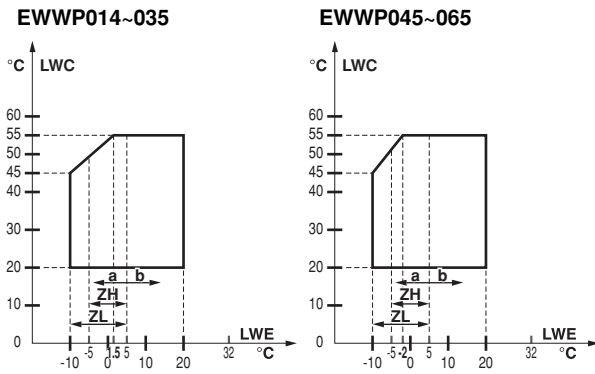

LWC	Leaving water temperature condenser
LWE	Leaving water temperature evaporator
a	Glycol
b	Water
	Continuous operation range

MAIN COMPONENTS (refer to the outlook diagram supplied with the unit)

- Compressor
- Evaporator
- Condenser
- Switchbox
- Chilled water in
- Chilled water out
- Condenser water out
- Condenser water in
- Evaporator entering water temperature sensor
- Freeze up sensor
- Condenser entering water temperature sensor
- Digital display controller
- Power supply intake
- Ball valve (field installed)
- Water filter (field installed)
- Air purge valve (field installed)
- T-joint for air purge (field installed)
- flowswitch (with T-joint) (field installed)
- Main switch

SELECTION OF LOCATION

The units are designed for indoor installation and should be installed in a location that meets the following requirements:

- The foundation is strong enough to support the weight of the unit and the floor is flat to prevent vibration and noise generation.
- The space around the unit is adequate for servicing.
- There is no danger of fire due to leakage of inflammable gas.
- Select the location of the unit in such a way that the sound generated by the unit does not disturb anyone.
- Ensure that water cannot cause any damage to the location in case it drips out of the unit.

INSPECTING AND HANDLING THE UNIT

At delivery, the unit should be checked and any damage should be reported immediately to the carrier claims agent.

UNPACKING AND PLACING THE UNIT

- Cut the straps and remove the cardboard box from the unit.
- Cut the straps and remove the cardboard boxes with waterpiping from the pallet.
- Remove the four screws fixing the unit to the pallet.
- Level the unit in both directions.
- Use four anchor bolts with M8 thread to fix the unit in concrete (directly or using the floor standing supports).
- Remove the service front plate.

CHECKING THE WATER CIRCUIT

The units are equipped with water inlets and water outlets for connection to a chilled water circuit and to a hot water circuit. These circuits must be provided by a licensed technician and must comply with all relevant European and national regulations.

Before continuing the installation of the unit, check the following points:

■ Additional components not delivered with the unit

- A circulation pump must be provided in such a way that it discharges the water directly into the heat exchanger.
- Drain taps must be provided at all low points of the system to permit complete drainage of the circuit during maintenance or in case of shut down.
- Vibration eliminators in all water piping connected to the chiller are recommended to avoid straining the piping and transmitting vibration and noise.

■ Additional water piping delivered with the unit

All additional water piping must be installed on the system according to the piping diagram as mentioned in the operation manual. The flowswitch must be connected as described on the wiring diagram. See also chapter "Before starting" on page 4.

Carton box 1 water piping evaporator

	2x Ball valve
	1x Water filter
	1x Air purge
	1x T-joint for air purge
	2x Flowswitch pipe
	1x Flowswitch + 1x T-joint


Carton box 2 water piping condenser

	2x Ball valve
	1x Water filter
	1x Air purge
	1x T-joint for air purge

- 1 The flowswitch must be installed in the water outlet pipe of the evaporator to prevent the unit from operating at a water flow which is too low.



It is very important to install the flowswitch as shown in the figure. Observe the position of the flowswitch in relation to the direction of the water flow. If the flowswitch is mounted in an other position, the unit is not protected properly against freezing.

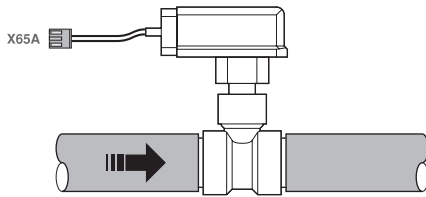

A terminal (X65A) is provided in the switch box for the electrical connection of the flowswitch (S10L).

- 2 Shut-off valves must be installed at the unit so that normal servicing of the water filter can be accomplished without draining the complete system.
- 3 Air purge valves must be provided at all high points of the system. The vents should be located at points which are easily accessible for servicing.
- 4 The water filter must be installed in front of the unit for removing dirt from the water to prevent damage to the unit or blockage of the evaporator or condenser. The water filter must be cleaned on a regular base.

WATER QUALITY SPECIFICATIONS

	evaporator water		condenser water		tendency if out of criteria	
	circulating water [$<20^{\circ}\text{C}$]	supply water	circulating water [$20^{\circ}\text{C}-60^{\circ}\text{C}$]	supply water		
Items to be controlled						
pH	at 25°C	6.8~8.0	6.8~8.0	7.0~8.0	7.0~8.0	A + B
Electrical conductivity	[mS/m] at 25°C	<40	<30	<30	<30	A + B
Chloride ion	[mg Cl ⁻ /l]	<50	<50	<50	<50	A
Sulfate ion	[mg SO ₄ ²⁻ /l]	<50	<50	<50	<50	A
M-alkalinity (pH 4.8)	[mg CaCO ₃ /l]	<50	<50	<50	<50	B
Total hardness	[mg CaCO ₃ /l]	<70	<70	<70	<70	B
Calcium hardness	[mg CaCO ₃ /l]	<50	<50	<50	<50	B
Silica ion	[mg SiO ₂ /l]	<30	<30	<30	<30	B
Items to be referred to						
Iron	[mg Fe/l]	<1.0	<0.3	<1.0	<0.3	A + B
Copper	[mg Cu/l]	<1.0	<0.1	<1.0	<0.1	A
Sulfide ion	[mg S ²⁻ /l]	not detectable				A
Ammonium ion	[mg NH ₄ ⁺ /l]	<1.0	<0.1	<0.3	<0.1	A
Remaining chloride	[mg Cl/l]	<0.3	<0.3	<0.25	<0.3	A
Free carbide	[mg CO ₂ /l]	<4.0	<4.0	<0.4	<4.0	A
Stability index		—	—	—	—	A + B

A = corrosion B = scale

CONNECTING THE WATER CIRCUIT

The evaporator and condenser are foreseen of GAS male pipe thread for the water inlet and outlet (refer to the outlook diagram). Evaporator and condenser water connections are to be made in accordance with the outlook diagram, respecting the water in- and outlet.

If air, moisture or dust gets in the water circuit, problems may occur. Therefore, always take into account the following when connecting the water circuit:

- 1 Use clean pipes only.
- 2 Hold the pipe end downwards when removing burrs.
- 3 Cover the pipe end when inserting it through a wall so that no dust and dirt enter.



- Use a good thread sealant for the sealing of the connections. The sealing must be able to withstand the pressures and temperatures of the system, it must also be resistant to the used glycol in the water.
- The exterior of the water pipes must be adequately protected against corrosion.

WATER CHARGE, FLOW AND QUALITY

To assure proper operation of the unit a minimum water volume is required in the system and the water flow through the evaporator must be within the operation range as specified in the table below.

	Minimum water volume (l)	Minimum water flow	Maximum water flow
EWWP014	62	19 l/min	75 l/min
EWWP022	103	31 l/min	123 l/min
EWWP028	134	40 l/min	161 l/min
EWWP035	155	47 l/min	186 l/min
EWWP045	205	62 l/min	247 l/min
EWWP055	268	80 l/min	321 l/min
EWWP065	311	93 l/min	373 l/min



The water pressure should not exceed the maximum working pressure of 10 bar.

NOTE



Provide adequate safeguards in the water circuit to make sure that the water pressure will never exceed the maximum allowable working pressure.

PIPING INSULATION

The complete water circuit, inclusive all piping, must be insulated to prevent condensation and reduction of the cooling capacity.

Protect the water piping against water freezing during winter period (e.g. by using a glycol solution or heatertape).

FIELD WIRING



All field wiring and components must be installed by a licensed electrician and must comply with relevant European and national regulations.

The field wiring must be carried out in accordance with the wiring diagram supplied with the unit and the instructions given below.

Be sure to use a dedicated power circuit. Never use a power supply shared by another appliance.

Parts table

F1,2,3	Main fuses for the unit
H3P	Indication lamp alarm
H4P, H5P	Indication lamp operation compressor circuit 1, circuit 2
PE	Main earth terminal
S7S	Remote cooling/heating change-over valve
S9S	Remote start/stop switch
- - -	Field wiring

Power circuit and cable requirements

- The electrical power supply to the unit must be arranged so that it can be switched on or off independently of the electrical supply to other items of the plant and equipment in general.
- A power circuit must be provided for connection of the unit. This circuit must be protected with the required safety devices, i.e. a circuit breaker, a slow blow fuse on each phase and an earth leak detector. Recommended fuses are mentioned on the wiring diagram supplied with the unit.



Switch off the main isolator switch before making any connections (switch off the circuit breaker, remove or switch off the fuses).

Connection of the water-cooled water chiller power supply

- Using the appropriate cable, connect the power circuit to the N, L1, L2 and L3 terminals of the unit (cable section 2.5~10 mm²).
- Connect the earth conductor (yellow/green) to the earthing terminal PE.

Interconnection cables

- Voltage free contacts**
The PCB is provided with some voltage free contacts to indicate the status of the unit. These voltage free contacts can be wired as described on the wiring diagram.
- Remote inputs**
Besides the voltage free contacts, there are also possibilities to install remote inputs. They can be installed as shown on the wiring diagram.

BEFORE STARTING



The unit should not be started, not even for a very short period of time, before the following pre-commissioning checklist is filled out completely.

tick ✓ when checked	standard steps to go through before starting the unit
<input type="checkbox"/>	1 Check for external damage .
<input type="checkbox"/>	2 Install main fuses, earth leak detector and main switch . Recommended fuses: aM according to IEC standard 269-2. Refer to the wiring diagram for size.
<input type="checkbox"/>	3 Supply the main voltage and check if it is within the allowable ±10% limits of the nameplate rating. The electrical main power supply must be arranged so, that it can be switched on or off independently of the electrical supply to other items of the plant and equipment in general. Refer to the wiring diagram, terminals N, L1, L2 and L3.
<input type="checkbox"/>	4 Supply water to the evaporator and verify if waterflow is within the limits as given in the table under "Water charge, flow and quality" on page 3.
<input type="checkbox"/>	5 The piping must be completely purged . See also chapter "Checking the water circuit" on page 2.
<input type="checkbox"/>	6 Connect the flowswitch and pumpcontact , so that the unit can only come in operation when the waterpumps are running and the waterflow is sufficient. Make sure a water filter is installed before the water inlet of the unit.
<input type="checkbox"/>	7 Connect the optional field wiring for pumps start-stop .
<input type="checkbox"/>	8 Connect the optional field wiring for remote control .

NOTE



- Try to reduce the drilling in the unit to a minimum. If drilling is impreventable, remove the iron filling thoroughly in order to prevent surface rust!
- It is necessary to read the operation manual delivered with the unit before operating the unit. It will contribute to understand the operation of the unit and its electronic controller.
- Verify on the wiring diagram all electrical actions mentioned above, in order to understand the operation of the unit more deeply.
- Close all switch box doors after installation of the unit.

I do confirm having executed and checked all the above mentioned items.

Date

Signature

Keep for future reference.

HOW TO CONTINUE

After installation and connection of the packaged water-cooled water chiller, the complete system must be checked and tested as described in "Checks before initial start-up" in the operation manual supplied with the unit.

Fill out the brief operation instructions form and fix it visibly near the operating site of the refrigeration system.

BRIEF OPERATION INSTRUCTIONS

EWWP-KA Packaged water-cooled water chiller

Equipment supplier: _____

Service department: _____

.....

.....

.....

.....

Phone:.....

Phone:.....

EQUIPMENT TECHNICAL DATA

Manufacturer	: DAIKIN EUROPE	Power supply (V/Ph/Hz/A)	:
Model	:	Maximum high pressure	:30.9 bar
Serial Number	:	Charging weight (kg) R407C	:
Year of construction	:		

START-UP AND SHUT DOWN

- Start-up by switching on the circuit breaker of the power circuit. The operation of the water chiller is then controlled by the Digital Display Controller.
- Shut-down by switching off the controller and the circuit breaker of the power circuit.



WARNINGS

Emergency shut down : Switch off the **circuit breaker** located on

.....

.....

Air inlet and outlet : Always keep the air inlet and outlet free to obtain the maximum cooling capacity and to prevent damage to the installation.

Refrigerant charge : Use refrigerant R407C only.

First aid : In case of injuries or accidents immediately inform:



➤ **Company management** : **Phone**

➤ **Emergency physician** : **Phone**

➤ **Fire service** : **Phone**



